#### **Foreword**

Thank you for choosing PT200 variable-frequency inverter from Shenzhen Powtech Co.,Ltd. This product is a kind of variable-frequency inverter which it can be applied to various industrial machineries, drive and control of the fan and pump and heavy load of grinding with intermediate frequency; and it is designed by Shenzhen Powtech Co.,Ltd via its professional production and sales experience for many years.

This manual includes two series of PT200: general type and specific type; among them, general type can be divided into P, G, M and H type based on different load and specific type can be divided into S, T and Z type; and the detailed description is as follow:

P type: light load; G type: standard load M type: heavier load; H type: heavy load;

S type: specific type for textile machine; T type: specific type for winding machine;

Z type: specific type for injection molding machine;

This manual provides related notices, such as parameter setting of installation and operation, diagnosis of malfunctions, daily maintenance and safe use, for user. Please read this manual in detail before install it in order to guarantee install and operate this variable-frequency inverter correctly.

Please contact with Powtech local dealers in various places or directly contact with our company if there is any difficult during your using process; and our professionals are glad to make service for you!

Please submit this manual to ultimate user and ask the user to keep it properly, which will be beneficial for later maintenance and other applied occasions. If there are any troubles during the warranty period, please fill up the warranty card and fax it to the dealer or our company.

The information may be changed during the improving period of this project without prior notice. Please consult the website of Powtech when you would like to obtain the latest information.

Please consult <a href="http://www.powtech,cn/en">http://www.powtech,cn/en</a> for information of Powtech series products.

# **CATALOGUE**

1-1 Inspect after unboxing.	1
1-1-1 Explanative to nameplate	
1-1-2. Type inverter	
1-2 Safety attentions	4
Chapter 2 Standard specification	7
2-1-2 See the following table for rated output current with different specifications	9
2-2 Standard specification  2-3. Dimension  2-3-1 Product appearance figure and dimension of installing hole	15
Chart2-6 2N9~2N10 Cabinet dimension	22
2-3-4. Dimension figure of keyboard	22
Chapter 3 Installation and redundant circuit	24 24 25
3-3-1 Wiring diagram below 7.5KW (2S1/2S2/2S3)	
3-3-2. Wiring diagram for 11KW~22KW (2N1~2N2)	27
3-3-2. Wiring diagram for 11KW~22KW (2N1~2N2)  3-3-3 Wiring diagram for 30kW~630kW (2N3~2N10)  3-4. Main circuit terminal (G type)	27 28 29 29
3-3-2. Wiring diagram for 11KW~22KW (2N1~2N2)  3-3-3 Wiring diagram for 30kW~630kW (2N3~2N10)  3-4. Main circuit terminal (G type)	27 28 29 29 30
3-3-2. Wiring diagram for 11KW~22KW (2N1~2N2)  3-3-3 Wiring diagram for 30kW~630kW (2N3~2N10)  3-4. Main circuit terminal (G type)	27 28 29 29 30
3-3-2. Wiring diagram for 11KW~22KW (2N1~2N2)  3-3-3 Wiring diagram for 30kW~630kW (2N3~2N10)  3-4. Main circuit terminal (G type)	2728293031
3-3-2. Wiring diagram for 11KW~22KW (2N1~2N2)  3-3-3 Wiring diagram for 30kW~630kW (2N3~2N10)  3-4. Main circuit terminal (G type)	27282930313132

4-1. Introduction of operation keyboard	
4-3. Key description of operation panel	
4-4. Menu style	.37
4-4-1. First-level menu style	. 37
4-4-3. Form of three-level menu.	. 38
4-4-4. Common display symbol of LED	. 38
4-4-5. LED displays corresponding sign	.39
4-5. Password operation and key lock and unlock functions	. 39
4-6. Display of operation panel and key operation	. 40
4-6-1. Classification of display state: display state of operation panel can be divided into 9 types:	40
4-6-2. Display status and operation process	
4-7. Operation examples	
4-7-1. Recover factory parameter	
4-7-2. Setup set frequency	
4-7-3. Password setting.	
4-7-4. Password authentication	
4-7-5. Password	
4-8. Setting method of parameter	
Chapter 5 Commissioning	
•	
Chapter 6 Inverter of function parameter	.48
6-1-1. Menu grouping	
6-1-2. P00 group Monitoring function group	.50
6-1-3. P01 group Basic group	.51
6-1-4. P02 group Control group for the stop and start	. 53
6-1-5. P03 group: Group of electric machine parameter	. 54
6-1-6. P04 group Vector control parameter	. 55
6-1-7. P05 group V/F control parameter	. 56
6-1-8. P06 group Input terminal group	.57
6-1-10. P08 group output terminal group	. 62
6-1-11. P09 group Enhancement group	. 64
6-1-12. P10 group control group of PID	. 65
6-1-13 P11 group control group of multisten speed	66

6-1-14. P12group communication parameter group	67
6-1-15. P13 group Protection function group	68
6-1-16. P14 group function group of water supply	69
6-1-17. P15 group manufacturer's function group	70
6-2. inverter of function parameter	70
6-2-1. P00 group monitoring function group	70
6-2-2. P01 group basic function group	71
6-2-3. P02 group control group of the start and stop	78
6-2-4. P03 group motor parameter group	80
6-2-5. P04 group parameter of vector control	82
6-2-6. P05 group V/F control parameter	83
6-2-7. P06 group input terminal group	86
6-2-8. P07group human-computer interface group	92
6-2-9. P08 group output terminal group	96
6-2-10. P09 group enhancement group	98
6-2-11. P10 group PID control group	103
6-2-12. P11 group control group of multistep speed	106
6-2-13. P12 group communication parameter group	108
6-2-14. P13 group protection function group	111
6-2-15. P14 group water supply function	113
6-2-16. P15 group manufacturer's function	114
Chapter 7 EMC(Electro Magnetic Compatibility)	115
7-1. Definition.	115
7-2. Introduction of EMC standard	
7-3.EMC guidance	
7-3-1. Influence of harmonic wave	
7-3-2. Electromagnetic interference and installation notes	
7-3-3. Solution for the interference of surrounding electromagnetic equipment on AC frequency vector inverter	
7-3-4. Solution for the interference of AC frequency vector inverter on its surrounding electromagnetic equipment	
7-3-5. Leakage current and disposal	
7-3-6. Precautions for installing EMC input filter at the input terminal of th	
power supply:	
Chapter 8 Failure checking and removal	119
8.1 Failure information and removal method	110


Chapter 9 Maintenance and overhauling	122
9-1. Inspection and maintenance	
9-2. Device required regular change	
9-3. Storage and custody	123
9-4.Measurement and judgment	123
Chapter 10 Option	125
10-1. Optional components	126
10-2. Moulded case circuit breaker(MCCB)or earth leakage	circuit
breaker(ELCB)	
10-3. AC reactor	
10-4. Noise filter	
10-5. Contactor	
10-6. Brake unit and brake resistor (380V)	
10-7. EMI filter of output	
10-8. AC output reactor	
10-9.Input filter	
10-9-1.Input filter (380V)	130
10-9-2.Output filter (380V)	132
10-10. Input reactor	133
10-10-1.Output filter (380v)	133
10-11 Output reactor	134
10-11-1.Output reactor (380V)	134
10-12.DC reactor	135
10-13 Specification of breaker, cable and contactor	136
Chapter 11 Quality guarantee	138
Attachment RS485 communication protocol	140
1. Introduction for use	
2. Specification	140
Parameter address and parameter description	145
parameter description	145
Reference:	154

## **Chapter 1 Inspection and Safety Precautions**


All inverters of Shenzhen Powtech Co.,Ltd are given strict test and quality inspection before leaving factory. Please firstly check whether the product package is damaged due to transportation carelessness after your purchasing and whether the specification and type is consistent with the machine you ordered. Please contact with dealers of our company in various places or directly contact with our company if there is any problem.

#### 1-1 Inspect after unboxing

Inspect it includes one machine, a manual and a warranty card. Inspect nameplate at the side of variable-frequency inverter to confirm the product you obtain is the product you ordered.

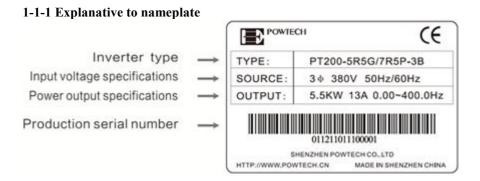

#### 1-1-2. Type inverter

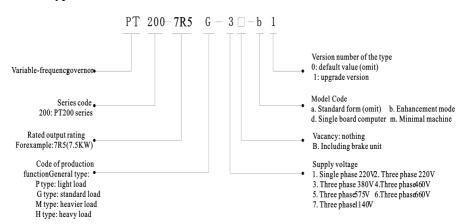

## 1-2 Safety attentions

Safety precautions are divided into following two types in this manual:

Danger: the danger caused by not operating as required can cause serious injury or even death.

Notice: the danger caused by not operating as required can cause

moderate harm or minor injury and damage of the equipment.

Process	Type of safety matters	Content of safety precautions
Pre- installation	danger	Please don't install when it is found that control system has water, the part is insufficient or damaged when the box is opened.  Please don't install when the packing list is in consistent with the matter time!  Lift and put lightly when it is moved, or there will be danger of destroying the equipment!  Please don't use the actuator with damage or AC frequency vector inverters with missing parts, or there will be danger of being injured!  Don't touch the component of the control system with your hand, or there will be danger of static destroy!
	danger	Please install on flame retardant objects like metal; Be far away from combustible material. Or it may cause fire alarm!  Don't screw fixed bolt of the equipment component randomly, particularly the bolt with red sign!
Installation	notice	Don't drop wire head or screw into the actuator. Or it may cause the damage of the actuator!     Please install the actuator at a certain place with litter vibration and direct sunlight.     Please pay attention to the installation location when put two inverters into one cabinet to guarantee the effect of heat dissipation.
Wiring	danger	Please follow the guidance of this manual and the construction should be made by professional electrical engineering staff, or unexpected danger will appear!  AC frequency vector inverters and power source should separated by circuit breaker, or it may cause fire alarm!  Please confirm that the power source is at zero energy state before the wiring, or it will have electric shock hazard!  Please make a correct and standard ground connection for the AC frequency vector inverters based on the standard, or it will have electric shock hazard!  Never connect input power with output terminals (U, V and W) of the inverter. Pay attention to the sign of terminal blocks; don't connect the wire with mistake, or it may cause the damage of the actuator!  Make sue circuit matched meets the requirement of EMC and the safety standard in its region. Please refer to the suggestion of this manual for wire diameter of the wire used . Or it may have accident!  Never connect break resistor between (+) and (-) terminals of DC bus, or it may cause fire alarm!  Encoder must use shielded wire; moreover, shielding layer must guarantee reliable ground connection of a single terminal.

Before	notice	Please confirm whether the voltage class of input power is consistent with rated voltage class of inverter, whether the circuit connected is firm enough, or it may cause the damage of the actuator!      There is no need in making pressure test for any part of the inverter; the product is made such as test when it leaves the factor, Or it may have accident!
electrifying	danger	The AC frequency vector inverters must be electrified after its covered plates is covered well. Or it will have electric shock hazard!  The wiring of all outside accessories must strictly follow the guidance of this manual; and their wirings should be connected correctly based on the circuit connect menthol provided by this manual. Or it may have accident!
After electrifying	danger	<ul> <li>◆Don't open the cover plate after the electrifying. Or it will have electric shock hazard!</li> <li>◆ Don't use a wet hand to touch actuator and peripheral circuit Or it will have electric shock hazard!</li> <li>◆Don't touch any input or output terminal of the inverter. Or it will have electric shock hazard!</li> <li>◆At the beginning of electrifying, the AC frequency vector inverters will automatically make a security detection for outside return circuit of the strong current; at that time, never touch U, V and W terminal blocks of the actuator, or it will have electric shock hazard!</li> <li>◆ Parameter identification should be made and please pay more attention to the hazard hurting people during the rotation of electric machine. Or it may have accident!</li> <li>◆ Please don't change manufacturer's parameter of the AC frequency vector inverters randomly. Or it may have hazard of damaging the equipment!</li> </ul>
In service	danger	Never touch the cooling fan or discharge resistance to feel out the temperature. Or it may cause burning. Non-professional technician can't detect the signal during the operation process. Or it may cause personal injury or equipment damage!
III SERVICE	notice	<ul> <li>Anything should be avoided to drop into the equipment during the operation process of the inverter. Or it may cause equipment damage!</li> <li>Don't use contractor switching to control the start and stop of the actuator. Or it may cause equipment damage!</li> </ul>
Maintenance	danger	Please don't repair and maintain the equipment with electricity. Or it will have electric shock hazard!  Maintenance and preparing can be made to the actuator only after confirming the AC frequency vector inverters voltage is lower than 36V, subject to two minutes after power failure. Or residual charge on capacitance will harm people.  Anybody without professional training can't make maintenance or preparing to the inverter. Or it may cause personal injury or equipment damage!  Parameter setting must be made after changing the inverter; all pluggable parts must be inserted or seized under the condition of power failure!

# 1-3. Precautions

No.	Types of attention	Precautions contents
1	Insulation inspection of the motor	Insulation inspection of the motor should be made for the initial use of the motor, reusing after long-term placing when the motor is used or given regular inspection to avoid damaging the AC frequency vector inverters due to the insulation failure of machine winding, motor connection must be separated with the AC frequency vector inverters when insulation inspection is made; it is suggested to use mega meter with 550V voltage type and guarantee the insulation resistance detected can't be smaller than $5M\Omega$ .
2	Thermal protection of the motor	Make sure to adjust relevant parameter value of motor protection in the AC frequency vector inverters or install thermal relay before the motor to protect the motor when the rated capacity of the selected motor doesn't match with that of the inverter, particularly when the rated power of the AC frequency vector inverters is bigger than that of the motor.
3	Operation above the power frequency	This AC frequency vector inverters can provide 0Hz~400Hz output frequency. If the customer wants to make operation above 50 Hz, please take the endurance of the mechanical device into consideration.
4	Vibration of mechanical device	The setting for hopping frequency in the AC frequency vector inverters can be used to avoid mechanical resonance point of the load device which might be met by the AC frequency vector inverter sat some locations of output frequency.
5	About heating and noise of the motor	Compared with the operation of power frequency, the temperature rise, noise and vibration of the motor will increase slightly because the output voltage of the AC frequency vector inverters is PWM wave.
6	Pressure-sensitive device or capacitance improving the power factor at the output side	If the side the AC frequency vector inverters has capacitance improving the power factor or voltage dependent resistor for lighting protection, it will cause instant over current of the AC frequency vector inverters or damage the AC frequency vector inverters because the output voltage of the AC frequency vector inverters is PWM wave. Please don't use it.
7	Switching element such as contactor used by input and output terminal of the inverter	If contactor between the power supply and input end of the AC frequency vector inverters is installed, then it won't allow this contactor to control the start and stop of the inverter. If it is necessary to use this contactor to control the start and stop of the inverter, the interval can't be bigger than one hour. Frequent charge-discharge easily shortens the service life of the capacitor in the AC frequency vector inverters. If switching element such as contactor installed between output terminal and the motor, it should be guaranteed that the switching operation of the AC frequency vector inverters should be made without output. Or it easily causes the module damage in the inverter.
8	Use beside rated nominal voltage value	It is improper to use PT200 AC frequency vector inverters by and the voltage range stipulated in this manual; or it easily causes the device damage in the inverter. If it is necessary, please use corresponding rising and dropping equipment to make transformation disposal.
9	Change three- phase input to two-phase input	Don't change three-phase AC frequency vector inverters of PT 200 to two-phase for use. Or it may cause breakdown or damage the inverter.

No.	Types of attention	Precautions contents		
10	Protection of lightning impulse	The AC frequency vector inverters has protection device for lighting strike and over current; and it has certain self-defensive ability for the inductive thunder. The customer should install protection device before the AC frequency vector inverters at frequent occurrence of the lightning.		
11	Use of altitude and derating	It is necessary to use it via derating in the region where the altitude is above 1000m due to the weakening cooling effect of the AC frequency vector inverters caused by thin air. Please make a technology consulting to our company for such a condition.		
12	Some special usages	Please consult our company if it is necessary for the customer to use the connection method beyond the suggestions provided in this manual, like DC bus.		
13	Attention for the abandonment types of AC frequency vector inverters	It may cause explosion when the electrolytic capacitor of main circuit and printed board burn. And the burning of plastic parts will cause poisonous gas. Please dispose it as industrial refuse.		
14	About adaptive motor	1) Standard adaptive motor is asynchronous induction like a quadruples squirrel cage. If it is not the above motor, please select the AC frequency vector inverters based on the rated current of the motor.  2) Cooling fan  3) Zx67y non-variable frequency motor and rotor spindle is connected with the same axis; cooling effect of the fan reduces when the rotate speed reduces; therefore, install powerful cooling fan or replace variable frequency motor when the motor is too hot.  3) The AC frequency vector inverters has been installed with standard parameter of adaptive motor; it is necessary to make parameter identification or modify default value according to practical situation to correspond with the actual value; or it may affect the operation effect or protection performance.  4) short circuit in the cable or motor will cause the alarm of the AC frequency vector inverters or even explosion of the motor, so please make a short-circuit test of insulation for the motor with initial installation; and it is necessary to make such a test in daily maintenance. Notice: make sure to completely disconnect the AC frequency vector inverters with the part required to be testing when such a test is made.		
15	Others	1) Never connect alternating current power supply with terminals like U, V and W for output end of the inverter.  2) The panel must be fixed and locked before electrifying in order to avoid personal injury caused by harmful components like internal capacitance.  3) Tasks such as wiring and inspection can't be made after the power is connected.  4) After the electrifying of this device, please don't touch its interior circuit and component to avoid electric shock hazard.  5) Don't touch the circuit board or any component in the motor within five minutes shown on keyboard after the power is off; what is more, the meter should be used to confirm the capacitance in the motor has been discharged and then the task in the motor can be made; or it may have hazard of electric shock.  6) Electrostatic on human body will seriously affect MOS field effect transistor; don't use your hand to touch any internal component such as printed circuit board and IGBT without antistatic precautions; or it may cause breakdown.		

No.	Types of attention	Precautions contents
		7) Grounding terminal of the AC frequency vector inverters(E or = )7) should be correctly and reliably connected to the ground based on salty requirement of national electricity and other related standards. Don't stop the motor via operating a switch or interruption of power supply; and the power can be off only after the stop of the motor operation when it is used.  8) It must select input filter accessory if it want to meet CE standard.

#### 1-4 Range of application

- \* This AC frequency vector inverters can be applied only to general threephase AC induction motor of industry.
- \* This AC frequency vector inverters can be only used in places approved by our company; it may cause accidents like fire, electric shock and explosion in the places not approved by our company.

If it used for the equipment (e.g. Lifting appliance, aviation system and safety equipment) which may cause personal injury due to the AC frequency vector inverters failure, such an occasion must be cautiously disposed and reported to our company.

This device is only allowed to be operated by the staff with qualified training. Please carefully read the content about safety, installation, operation and maintenance in this introduction before your use. Safe operation of this device depends on the correct transportation, installation, operation and maintenance.

# **Chapter 2 Standard specification**

# 2-1 Technical specifications

# 2-1-1. Technical specifications of PT200

AC frequency vector inverters type	Input voltage	output rating (kW)	Rated input current (A)	Rated output current (A)	Adaptive motor
PT200-0R4G-1B		0.4	5.4	2.4	0.4
PT200-0R7G-1B	Single	0.75	8.2	4.5	0.75
PT200-1R5G-1B	phase 220V ±15	1.5	14.2	7.0	1.5
PT200-2R2G-1B	%	2.2	23.0	10	2.2
PT200-004G-1B		3.7	34.0	16	3.7
PT200-0R7G-2B		0.75	5.0	4.5	0.75
PT200-1R5G-2B		1.5	7.7	7	1.5
PT200-2R2G-2B		2.2	11.0	10	2.2
PT200-004G-2B		3.7	17.0	16	3.7
PT200-5R5G-2B		5.5	21.0	20	5.5
PT200-7R5G-2B		7.5-	31.0	30	7.5
PT200-011G-2B	Three phase	11.0	43.0	42	11.0
PT200-015G-2	220V ±15%	15.0	56.0	55	15.0
PT200-018G-2		18.5	71.0	70	18.5
PT200-022G-2		22.0	81.0	80	22.0
PT200-030G-2		30.0	112.0	110	30.0
PT200-037G-2		37.0	132.0	130	37.0
PT200-045G-2		45.0	163.0	160	45.0
PT200-055G-2		55.0	200.0	200.0	55.0
PT200-0R7G-3B	Three phase 380V	0.75	3.4	2.5	0.75
PT200-1R5G-3B	±15%	1.5	5.0	3.7	1.5
PT200-2R2G-3B		2.2	5.8	5	2.2
PT200-004G-3B/ PT200-5R5P-3B		4.0/5.5	10/15	9/13	4.0/5.5
PT200-5R5G- 3B/ PT200- 7R5P-3B		5.5/7.5	15/20	13/17	5.5/7.5
PT200-7R5G- 3B/ PT200-011P- 3B		7.5/11.0	20/26	17/25	7.5/11.0
PT200-011G-3B/		11.0/15.0	26/35	25/32	11.0/15.0

AC frequency vector inverters type	Input voltage	output rating (kW)	Rated input current (A)	Rated output current (A)	Adaptive motor
PT200-015P-3B					
PT200-015G-3B/ PT200-018P-3B		15.0/18.5	35/38	32/37	15.0/18.5
PT200-018G-3B/ PT200-022P-3B		18.5/22.0	38/46	37/45	18.5/22.0
PT200-022G-3B/ PT200-030P-3B		22.0/30.0	46/62	45/60	22.0/30.0
PT200-030G-3/		30.0/37.0	62/76	60/75	30.0/37.0
PT200-037P-3 PT200-037G-3/		37.0/45.0	76/90	75/90	37.0/45.0
PT200-045P-3 PT200-045G/		45.0/55.0	90/105	90/110	45.0/55.0
PT200-055P-3 PT200-055G-3/		55.0/75.0	105/140	110/150	55.0/75.0
PT200-075P-3 PT200-075G-3/		75.0/93.0	140/160	150/176	75.0/93.0
PT200-093P-3 PT200-093G-3/		93.0/110.0	160/210	176/210	93.0/110.0
PT200-110P-3 PT200-110G-3/		110.0/132.0	210/240	210/250	110.0/132.0
PT200-132P-3 PT200-132G-3/		132.0/160.0	240/290	250/300	132.0/160.0
PT200-160P-3 PT200-160G-3/		160.0/185.0	290/330	300/340	160.0/185.0
PT200-185P-3 PT200-185G-3/	There				
PT200-200P-3 PT200-200G-3/	Three phase	185.0/200.0	330/370	340/380	185.0/200.0
PT200-220P-3 PT200-220G-3/	380V ±15%	200.0/220.0	370/410	380/420	200.0/220.0
PT200-220G-3/ PT200-250P-3		220.0/250.0	410/460	420/470	220.0/250.0
PT200-250G-3/ PT200-280P-3		250.0/280.0	460/500	470/520	250.0/280.0
PT200-280G-3/ PT200-315P-3		280.0/315.0	500/580	520/600	280.0/315.0
PT200-315G-3/ PT200-350P-3		315.0/350.0	580/620	600/640	315.0/350.0
PT200-350G-3/ PT200-400P-3		350.0/400.0	620/670	640/690	350.0/400.0
PT200-500G-3/ PT200-560P-3		500.0/560.0	835/920	860/950	500.0/560.0
PT200-560G-3/ PT200-630P-3		560.0/630.0	920/1050	950/1100	560.0/630.0
PT200-630G-3/ PT200-700P-3		630.0/700.0	1050/1250	1100/1300	630.0/700.0
PT200-700G-3		700.0	1250	1300	700.0

2-1-2 See the following table for rated output current with different

specifications

	G/P/M/H											
Voltage	220V 1Φ	220V (240V)	380V (415V)	460V (440V)	575V	660V						
Power (KW)	Current (A)	Current (A)	Current (A)	Current (A)	Current (A)	Current (A)						
0.4	2.4	2.4	1.2	-	-	-						
0.75	4.5	4.5	2.5	2.5	-	-						
1.5	7	7	3.7	3.7	-	-						
2.2	10	10	5	5	-	-						
4	16	16	9	8	-	-						
5.5	-	20	13	11	-	-						
7.5	-	30	17	15	-	-						
11	-	42	25	22	17	15						
15	-	55	32	27	22	18						
18.5	-	70	37	34	26	22						
22	-	80	45	40	33	28						
30	-	110	60	55	41	35						
37	-	130	75	65	52	45						
45	-	160	90	80	62	52						
55	-	200	110	100	100 76							
75	-	260	150	130	104	86						
93	-	320	176	147	117	98						
110	-	380	210	180	145	121						
132	-	420	250	216	173	150						
160	-	550	300	259	207	175						
185	-	600	340	300	230	198						
200	-	660	380	328	263	218						
220	-	720	420	358	287	240						
250	-	-	470	400	325	270						
280	-	-	520	449	360	330						
315	-	-	600	516	415	345						
350	-	-	640	570	430	370						
400	-	-	690	650	520	430						
500	-	-	860	800	650	540						
560	-	-	950	900	730	600						
630	-	-	1100	1010	820	680						
700	-	-	1300	1120	910	750						

2-2 Standard specification

Item		Standard				
Power supply	Level of voltage frequency	Single phase $200\sim240\text{V}$ , $50/60\text{Hz}$ three phase $200\sim240\text{V}$ , $50/60\text{Hz}$ three phase $380\sim415\text{V}$ , $50/60\text{Hz}$ three phase $440\sim460\text{V}$ , $50/60\text{Hz}$ three phase $575\text{V}$ , $50/60\text{Hz}$ three phase $660\text{V}$ , $50/60\text{Hz}$ three phase $1140\text{V}$ , $50/60\text{Hz}$				
	Allowable fluctuation	Voltage:±15% frequency: ±5%				
	Control system	AC frequency vector inverters with vector control based the high performance of DSP				
	Output frequency	G/P/Z/S/T/M type: 0.00~400.0Hz, The highest frequency can be set among 10.00~400.0Hz				
	Control method	V/F control, vector control for flux with open loop 1, vector control for flux with open loop 2, vector control for PG				
	Lifting function of automatic torque	Torque control for low frequency (1Hz) and great output in the control method of V/F				
	Control on accelerating and decelerating	Setting method for subsections of accelerating and decelerating S curve; the longest operation time 9600 h				
	Control on programmed operation	Operation for speed program of 16 sections; the longest operation time 888.88 h				
	Image resolution of frequency setting	Figure: 0.01Hz(below300Hz), 0.1Hz( above300Hz) simulation: 0.05Hz / 60Hz				
	Frequency accuracy	Common difference of speed control $0.01\%(25^{\circ}C\pm10^{\circ}C)$				
	V/F curve method	User defines V/F curve for linear and multiple power				
Control performance	Overload capacity	G/S type: rated current 150%—1 minute, rated current 200%—0.1 second P type: rated current 120%—1 minute, rated current 150%—0.1 second Z/M/ T type: rated curren180%—1 minute, rated curren250%—0.1 second H type: rated current 250%—1 minute, rated current 300%—0.1 second				
	Slippage compensation	$50\sim100\%$ , compensation for automatic slippage				
	The highest frequency	400Hz				
	Carrier frequency	0.5KHz~15KHz; carrier frequency can be adjusted based on the load characteristics				
	Image resolution of output frequency	Figure setting: 0.01Hz simulation setting: the highest frequency × 0.1%				
	Starting torque	G motor: 0.5Hz/180% P motor: 0.5Hz/120%				
	Speed range	1:200				
	Accuracy of speed stabilizing	Vector control for flux with open loop:≤±0.5% (rated				


Item			Standard		
	(accuracy of	speed control)	synchronous speed)		
	Stability of sp	eed control	vector control for flux with open loop :\(\pex=\text{0.3\%}\) (rated synchronous speed)		
	Torque respo	inse	≤40ms (vector control for flux with open loop)		
			Automatic torque boost; manual torque boost $0.1\%$ ~		
	acceleration deceleration	and	30.0%  Linear acceleration and deceleration time; 4 acceleration and deceleration time; time scope for acceleration and deceleration 0.0s~3600.0s		
	DC braking		DC braking frequency: 0.0Hz~maximum frequency, braking time: 0.0~50 second, current value for braking movement: 0.0%~150%		
	Electronic co	ontrol	Range of jog frequency :0.00Hz~maximum frequency; Acceleration and deceleration time of jog: 0.0s~3600.0s		
	Operation on	multi sections	Realize the maximum operation of 16 sections via control terminals		
	Build-in PID	ı	Realize closed-loop control system with process control conveniently:		
	Automatic vo		Automatically make the output voltage constant when the network voltage changes		
	Torque limitation and control		Excavator characteristics: automatic limitation on torque during the operation period and prevention for frequent over current trip; and vector model of close loop can realize the torque control		
	Self-checking for outside equipment safety of electrifying		Realize the security detection of electrifying on outside device like ground connection and short circuit		
	Function of DC bus		Realize the function for many inverters to share DC bus		
Personalized	M F key		Programmable key: function choice for positive and negative operation and jog operation		
function	Pendulous control of textile		Multi control functions of triangular wave		
	Current -limiting function of the carrier		Built- in current-limiting algorithm of waveband reduces the probability for the AC frequency vector inverters to report over current and improve the whole motor's ability on resisting disturbance		
	Timing contr	rol	Timing control function: setting time scope 0h $\sim$ 65535h		
	Standardizati	on for extension	The customer can use the standard network cable to prolong the keyboard		
		Operation method	Keyboard/terminal/communication		
Operation	Inputting signal	Frequency setting	Six frequency source in total: setting of keyboard, analogue voltage, analogue current, operation for multiple sections, PID control, remote communication and presetting of keyboard potentiometer can be changed via multiple methods		
		Starting signal	forward and reversion		
		Speed of	Speed for 16 sections can be set at most (using		

Item			Standard			
		multiple	multifunction terminal or program execution)			
		sections Acceleration of multiple sections	Acceleration 4 sections can be set at most (using multifunction terminal )			
		Emergency stop	Interrupt controller output			
		Swing- frequency running	Operation of process control			
		Jog	Operation with low speed			
		Fault resetting	Automatically or manually reset the fault state when the protection function is at an effective state			
		PID feedback signal	Including DC 0 $\sim$ 10V, DC 1 $\sim$ 5V, DC 0 $\sim$ 20mA and DC 4 $\sim$ 20mA			
		Operating condition	Motor situation showing stop, acceleration and deceleration, constant speed and state of programmed operation			
		Fault output	Output of sensitive point-AC 250V 5A, DC 30V 5A			
	Outputting signal	Analog output	Two analog outputs can choose 8 signals such as frequency, current, voltage and so on; and output signal scope can be set randomly among 0~10V/0~20mA.			
			Up to three output signals; every output signal has nine signals for choice			
	Operation fu	nction	Limiting frequency, avoiding frequency, slippage compensation, invert protection, self-adjusting and PID control			
	Braking of d	irect current	Built-in PID adjusts brake current and protects sufficient braking torque without over current			
	Run comma	nd channel	Three channels: presetting of operation panel, control terminal and serial communication. The change via various methods			
	Input termin	al	Six digital input terminals can be compatible with active loudspeaker PNP or two input terminals of analog of NPN input method; among them, AII and AI2 can be input as voltage or current. (if it necessary to expand the function of input and output terminals, please use IO expansion cards)			
	Output termi	nal	One digital output terminal (bipolar output), a relay output terminal, and an analog output terminal can respectively choose 0/4mA~20mA or 0/2V~10V and realize the output of physical quantities such as setting frequency, output frequency and rotate speed			
Protection function	AC frequenc		Overvoltage protection, low-voltage protection, over current protection, overload protection, overheat protection, protection of over current and speed reduction, protection of overvoltage and speed reduction, protection of default phase (optional functions), external fault, communication error, abnormal feedback signal of PID and PG fault			
	IGBT tempe	rature display	Display current IGBT temperature			
	0 1 1 64	C frequency	Starting temperature for the fan can be set			

Item			Standard		
	vector inve	erters fan			
	Instant pe	ower failure and ting	Less than 15 millisecond: Continuous operation More than 15 millisecond: automatically detect the motor speed and restart after instant power failure		
	Tracking speed	method of rotat	Automatically track motor speed at the start of the inverter		
	Protection parameter	function of	Protect the AC frequency vector inverters parameter via setting supervisor password and decode		
	LED/O LED show keyboar d	Operation information	18 monitoring objects of the operation in total: operation frequency, setting frequency, rated current of the motor, current percentage, DV bus voltage, output voltage, actual speed of the motor, accumulative operation time, IGBT temperature, PID given value, feedback value of PID, state of input terminal, state of output terminal, value of analog AI1, value of analog AI2A, current number for speed of multiple sections and setting value of torque		
Display		Error message	Keep five error messages at most and inquire fault type, voltage, current, frequency and working condition when the fault occurs		
	LE	D display	Display parameter		
	OL	ED display	Options available; inverter in Chinese/English		
	Parameter	сору	Using special keyboard of parameter copy can realize the quick copy of the parameter (limited too OLED)		
	Key lock a	and function	Realize partial or complete lock of the button; define the effect scope of partial buttons to prevent wrong operation		
Communicati on	RS485/RS	232	It can choose isolated RS485/RS232 communication module to realize the communication with the upper computer		
	Environment temperature		-10°C $\sim$ 40°C (environment temperature is among 40°C $\sim$ 50°C; please use it with derating)		
	Storage ter	mperature	-20°C ~65°C		
	Environme	ent humidity	Less than 90 % R.H, not exceeding 90 % R.H		
Environment	Height; vil	bration	Below 1000 m, below 5.9m/s <sup>2</sup> (=0.6g)		
	Application place		Indoor, without sunlight or corruption, explosive gas or water vapor, dust, combustible gas, oil mist, water vapor, dropping water or salinity		
	Altitude		Belong 1000m		
	Pollution o	legree	2		
Product	safety stan		IEC61800-5-1:2007		
standard	The prode	uct implements dard	IEC61800-3:2005		
Cooling method	d		Forced cooling and natural air cooling		

## 2-3. Dimension

## 2-3-1 Product appearance figure and dimension of installing hole

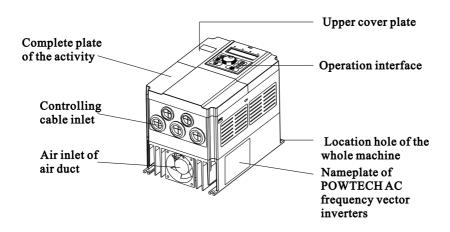

#### 2-3-2 PT 200 series

#### 1.2S1~2S3

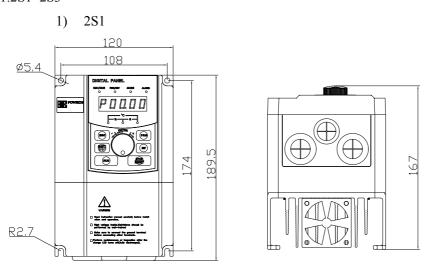
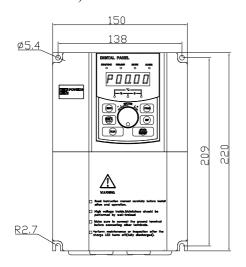


Chart 2-1 Dimension of 2S1

Level of power supply	Туре	Power (kW)
g: 1 1	G	0.4~1.5
Single phase 220V	M	0.4~0.75
220 V	Н	0.4
	P	0.75~1.5
There also 220V	G	0.4~1.5
Three phase 220V	M	0.4~0.75
	Н	0.4
	P	0.75~1.5~2.2
Three phase 290V	G	0.75~2.2
Three phase380V	M	0.75~2.2
	Н	0.75~2.2

# 2) 2S2



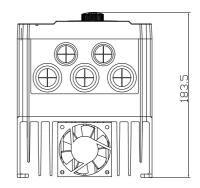
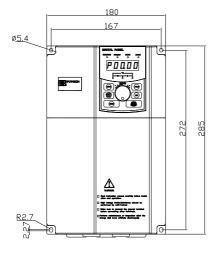


Chart 2-2 Dimension of 2S2

Level of power supply	Туре	Power (kW)			
	P	2.2~4			
Single phase	G	2.2~4			
220V	M	1.5~2.2			
	Н	0.75~1.5			
	P	2.2~4			
Three phase 220V	G	2.2~4			
Three phase220V	M	1.5~2.2			
	Н	0.75~1.5			
	P	4~5.5			
Th	G	4~5.5			
Three phase380V	M	4~5.5			
	Н	4			

# 3) 2S3



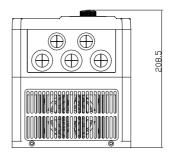
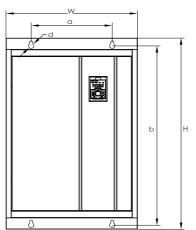


Chart 2-3 Dimension of 2S3

Level of power supply	Туре	Power (kW)
	P	5.5
Single phase	G	5.5
220V	M	4
	Н	2.2
	P	5.5
Thurs also 220V	G	5.5
Three phase 220V	M	4
	Н	2.2
	P	7.5~11
Th	G	7.5
Three phase380V	M	7.5
	Н	5.5

## 2-3-3 PT200 series (three-phase power voltage 380~415V, 50/60Hz)

## 1. 2N1~2N10



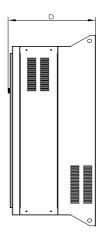


Chart 2-4 Dimension of 2N1-2N10

1	2N1

	Trmo	Power	Seat No.	Dimension			Iı	Installation dimension		
	Туре	(kW)	Seat No.	Н	W	D	a	b	d	
	P	15~18.5								
	G	11~15	2N1	345	202	203 230	150	325	Ø9	
	M	7.5~11	ZNI	343	+3   203		130	323		
Ī	Н	7.5								

# 2) 2N2

Tomas	Power		Dimension			Installation dimension		
Type	(kW)	Seat No.	Н	W	D	a	b	d
P	22~30							
G	18.5~22	2N2	430	263	255	170 407	407	Ø9
M	15~18.5		. 430	203	233		09	
Н	11~15							

# 3) 2N3

	,	Power	Soot No.	I	Dimension	n	In	stallatio	on dimension
	Туре	(kW)	Seat No.	Н	W	D	a	b	d
	P	37~45							
	G	30~37	2N3	490	310	274	190	468	Ø10
Ī	M	22~30	2103	490	310	274	190	408	Ø10
Ī	Н	18.5~22							

## 4) 2N4

Trmo	Power	Seat No.	Dimension Dimension			Installation dimension		
Type	(kW)	Seat No.	Н	W	D	a	b	d
P	55~75							
G	45~55	2N4	640	370	330	250 610	Ø12	
M	37~45	2194	040	370	330	230	010	012
Н	30~37							

# 5) 2N5


Trmo	Power	Seat No.	Dimension			Installation dimension		
Type	(kW)	Seat No.	Н	W	D	a	b	d
P	93~110							
G	75~93	2015	686	400	345	250	50 655	Ø12
M	55~75	2N5		400	343	230		
Н	45~55							

6	$2N\epsilon$	)

Trmo	Power	Cont No	D	imensio	n	Ir	stallation	dimension
Type	(kW)	Seat No.	Н	W	D	a	b	d
P	132~160							
G	110~132	2N6	786	500	353	300	748	Ø14
M	93~110	2110	/80	300	333	300	/40	014
Н	75~93							

7) a.2N7(hanging)

	Trmo	Power	Seat No.	D	imensio	n	In	stallation	dimension
-	Туре	(kW)	Seat No.	Н	W	D	a	b	d
	P	185~250							
	G	160~220	2N7	1000	600	400	370	935	Ø14
	M	132~160	2107	1000	600	400	3/0	933	
	Н	110~132							

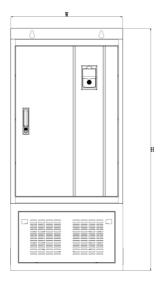

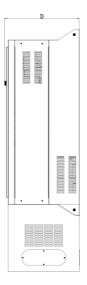


Chart 2-5 2N7-2N8 Dimension of cabinet type

b.2N7(cabinet type)

	Trmo	Power	Seat No.	Γ	Dimensi	on	Insta	llation	dimension
	Туре	(kW)	seat No.	Н	W	D	a	b	d
	P	185~250							
Ī	G	160~220	2017	1300	600	400	,	,	/
Ī	M	132~160	2N7			400	/	/	
Ī	Н	110~132							

8) a. 2N8(hanging)

Trmo	Power	Seat No.	D	imensi	on	Insta	allation	dimension
Type	(kW)	Seat No.	Н	W	D	a	b	d
P	280~315							
G	250~280	2010	1160	650	400	370	1100	Ø14
M	220~250	2N8	1160	650	400	3/0		
Н	200~220							

b.2N8(cabinet type)

	Power		D	imensi	on	Insta	llation	dimension
Туре	(kW)	Seat No.	Н	W	D	a	b	d
P	280~315							
G	250~280	2010	1460	650	400	,	/	/
M	220~250	2N8	1460	630	400	'		
Н	200~220							

## 9) 2N9 (Cabinet)

Trmo	Power	Seat No.	D	imensi	on	Insta	allation	dimension
Type	(kW)	Seat No.	Н	W	D	a	b	d
P	350~500							
G	315~400	2N9	1650	830	480	,	,	,
M	280~350	2119	1030	830	480	<b>'</b>	'	,
Н	220~315							

## 10) 2N10 (Cabinet)

Trmo	Power	Seat No.	D	imensi	on	Insta	llation	dimension
Type	(kW)	Seat No.	Н	W	D	a	b	d
P	560~800							
G	500~700	2N10	1850	1080	580	,	,	,
M	400~630	21110	1830	1080	380	′	′	/
Н	350~500							

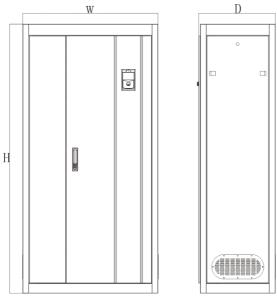


Chart2-6 2N9~2N10 Cabinet dimension

# 2-3-4. Dimension figure of keyboard

JP6C200 dimension figure:

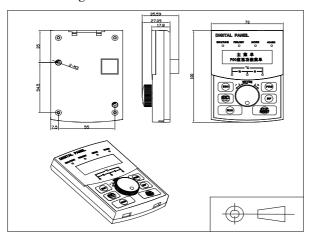


Chart 2-6 JP6C200 dimension

## JP6E200 dimension:

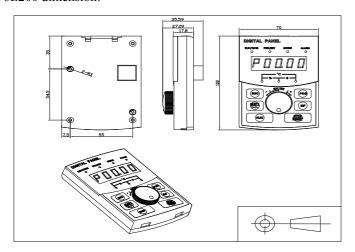


Chart2-7 JP6E200 dimension

# JP6D200 dimension figure of keyboard cabin:

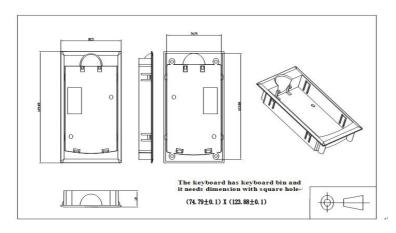


Chart 2-8 JP6D200 dimension

## Chapter 3 Installation and redundant circuit

#### 3-1 Service environment

- (1) Environment temperature  $-10^{\circ}\text{C} \sim 40^{\circ}\text{C}$ ;
- (2) Prevent electromagnetic interference and be far away from interference source.
- (3) Prevent the invasion of water drop, vapor, dust, dirt, cotton fiber and metal powder.
- (4) Prevent the invasion of oil, salt and corrosive gas.
- (5) Avoid vibration.
- (6) Avoid high temperature and humidity and there is drench from the rain; and the humidity is smaller than 90%RH (without condensation).
- (7) Prohibit being used in environment with inflammable, combustible and explosive air, liquid or solid.

#### 3-2 Installation direction and room

Variable-frequency inverter should be installed at a indoor place with good ventilation and used the wall-mounted method; moreover, there must be enough room between it and its surrounding article or baffle (wall). It is shown as the following chart.


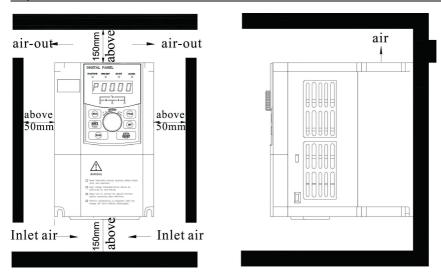


Chart 3-1 installation direction and room


## 3-3 Wiring diagram

Wiring of variable-frequency inverter divides into main circuit and control loop. The user must make the connection correctly following the below wiring circuit.


# 3-3-1 Wiring diagram below 7.5KW (2S1/2S2/2S3)

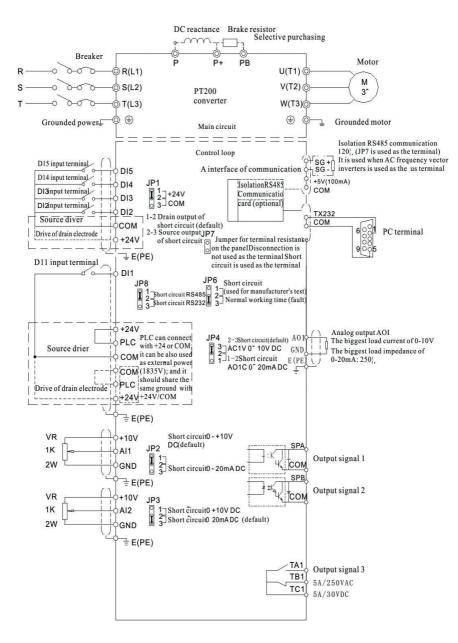

#### 3-3-2. Wiring diagram for 11KW~22KW (2N1~2N2)

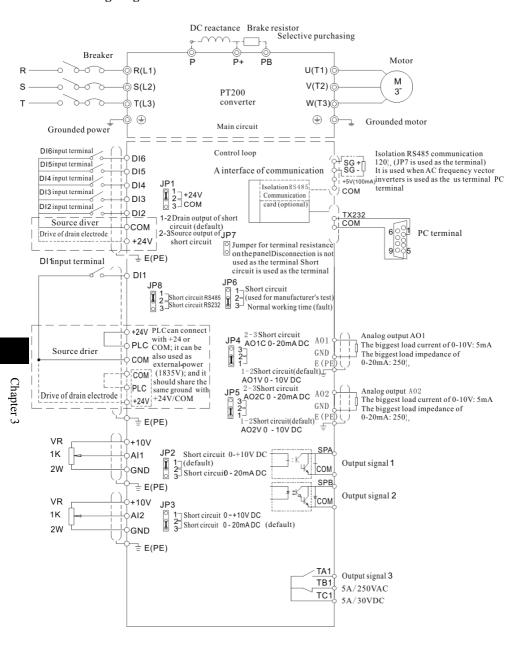


#### 3-3-3 Wiring diagram for 30kW~630kW (2N3~2N10)

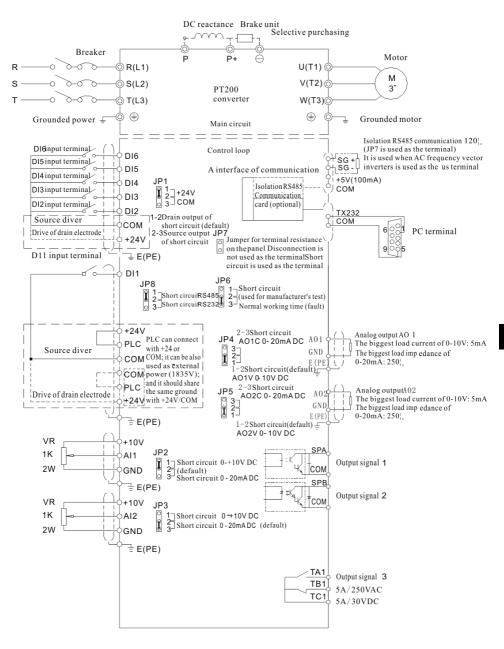

## 3-4. Main circuit terminal (G type)


#### 3-4-1. Main circuit terminal of PT200

1. Main circuit terminal below 7.5KW (380V)

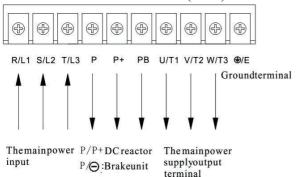


Notice: classification of the above power is only for machine of G type.


2. Main circuit terminal for 11KW~22KW(380V)

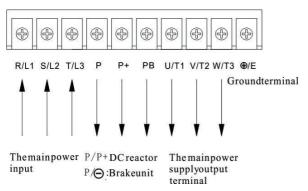


3. Main circuit terminal for 30~37KW (380V)

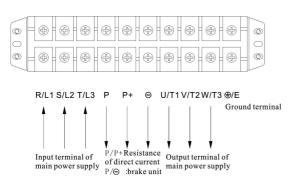


#### 4. Main circuit terminal for 45~280KW (380V)

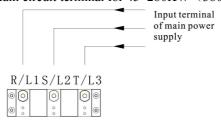

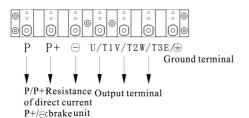

Notice: standard configuration of P/P+ is the state of short circuit; if it is necessary to connect DC resistance, it should firstly stop it and then connect.

## 5. Main circuit terminal for 315~700kW (380V)

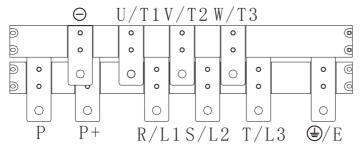

## 3-4-2 Explanation for the function of terminal blocks

Terminal	Name	Explanation
R/L1		
S/L2	Input terminal of AC frequency vector inverters	Connect with three-phase power supply and connect single phase with R and T
T/L3		- 0 · F
<b>⊕</b> /E	Ground terminal	Connect with the ground
U/T1	Output terminal	Connect with three-phase motor

V/T2		
W/T3		
P+, PB/_	Connecting end for brake resistance or brake unit	Connect with brake resistance or brake unit
P,P+	Connection end for resistance of direct current	Connect with DC resistance (removing short circuit)

### 3-5 Control circuit terminal


# 3-5-1. Explanation for control circuit terminal

Classificati on	Terminal   Name   function		function
	DI1~DI6	DI1~DI6 input terminal	See function P06.00~P06.05 for the detail of input terminal with multiple functions. Only 200 LCB
Input signal	PLC	PLC control terminal	control panel has DI6. the drive type of PLC controlling on DI1. Drain driver: PLC connects with 24V DC or external power supply. Source driver: PLC connects with COM
Supplement ary power	+24V	Plus end of power supply	The biggest output is +24V/200mA; never make a short circuit between COM and GND under any
supply	COM	Common terminal	condition
Output	SPA/COM	Output signal 1	Signal for open collector of output when it moves: (24V DC/150Ma); common terminal is COM and function is set by P08.00 and P08.01
signal	SPB/COM	Output signal 2	Tunction is set by 1 08:00 and 1 08:01
*******	TA1/TB1/TC1	Output signal 3	TA1→TC1 normally open, TB1→TC1 normally close; and output function is set by P08.02.
	+10V→GND	Simulated power supply	Provide +10V power supply externally; and the biggest output current: 10mA It is generally used as external potentiometer; and scope for resistance value of potentiometer is 1K.
Input and output	AII	Simulated input signal with multiple functions 1	Short circuit for JP2 1-2: it can be adjusted among 0+10V. Short circuit for JP2 2-3:it can be adjusted among 0+20mA. P06.09-P06.12 sets the scope of input voltage or current. P06.11 sets the setting value corresponded by input signal
signal of analog	AI2	Simulated input signal with multiple functions 2	Short circuit for JP3 1-2:it can be adjusted among 0-+10V. Short circuit for JP3 2-3:it can be adjusted among 0-+20mA. P06.14-P06.17sets the scope of input voltage or current. P06.16the setting value corresponded by input signal
	AO1	Simulated output signal with multiple functions 1	Short circuit for JP4 1-2:0- +10V  Short circuit for JP4 2-3:0- +20mA  P08.03 sets the setting for analog output. PO8.04-P08.07 sets the scope of output signal
	AO2	Simulated	Short circuit for JP5 1-2:0- +10V.


	output signal	Short circuit for JP5 2-3:0- +20mA.
	with multiple	P08.08
	functions 2	Sets the setting for analog output.
		PO8.09-P08.12sets the scope of output signal

#### 3-5-2. Arrangement of control circuit terminal

#### 1. Control circuit terminal of 200LCB panel

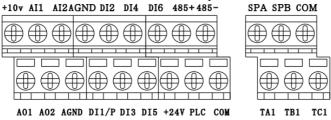

## 2. Control circuit terminal of 200SCB panel

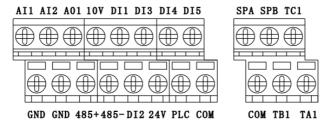

## 3-6 Wiring precautions

**※** 


- Meson Don't install absorption apparatus of static capacitance or resistance capacitance at the U, V and W output terminal of the inverter. The input power supply of the AC frequency vector inverters must be off when the motor is changed.
- Mon't drop the metal chip or thread residue into the AC frequency vector inverters when the wiring is made, or the AC frequency vector inverters may have fault due to this.
- \* The motor or power supply of power frequency can be changed only after the AC frequency vector inverters stops outputting.
- It should consider installing absorption apparatus of surging when the electromagnetic contactor and relay is near to the AC frequency vector inverters in order to reduce the influence of the electromagnetic interference.
- \* External control line of the AC frequency vector inverters must have isolating device or adopt shielded wire.
  - Cable for signal of input order should have independent routing beside shieldling; and it is better to be far away main circuit wiring.

- \* The maximal distance between the AC frequency vector inverters and motor should be within 50m when the carrier frequency is smaller than 3KHz; and such a distance should be shortened when the carrier frequency is bigger than 4 KHz; and it is better for this wiring to be laid in metal pipe.
- When peripheral equipment (filter, electric reactor) is installed on the inverter, it should firstly use 1000 V mega meter to measure its insulation resistance to the ground and it should be guaranteed it is no less than mega ohm.
- Please don't close the power supply under the condition of frequent start of the inverter; control terminal or keyboard or RS 485 must be used to operate the order to make start-stop operation so that it can't destroy the rectifier bridge.
- Mon't connect AC input power with output terminals of inverter: U, V and W.
- $\times$  In order to avoid the accident, ground terminal ( $\frac{1}{2}$ ) must be connected to the ground reliably (ground impedance should be less than 100  $\Omega$ , or leakage will appear.
- Choice for specification of wiring diameter should be according to related stipulation of National Electric Code when main circuit wiring is made.
- Electric motor capacity should be equal to or less than the capacity of the inverter.

#### 3-7 Redundant circuit

It will cause serious halt loss or other sudden failures due to the fault or tripping of the inverter. In order to avoid such a condition appears, please increase the following circuit backup for the sake of safety.

Notice: redundant circuit should be confirmed in advance and its operation feature should be tested in advance to guarantee the consistence between phase sequence of power frequency and variable frequency.

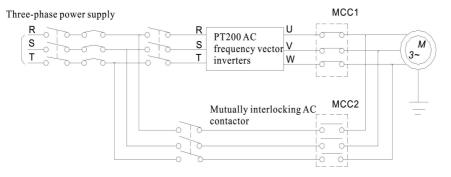

# **Chapter 4** Operation keyboard

## 4-1. Introduction of operation keyboard





JP6E200 Keyboard control panel JP6C200 Keyboard control panel Chart 4-1 Display of operation panel

4-2.Introduction for indicator light of the keyboard

Sign of indicator light		Name	Unit display	Implication	color
Status light	RUN/TUNE	Running lights		bright: the AC frequency vector inverters is at a normal operation state Off: the AC frequency vector inverters stops operation flicker: AC frequency vector inverters is at self-learning state of parameter	Green
	FWD/REV	Forward running lights		Bright: reversal state Off: forward state of AC frequency vector inverters	Green

	MODE	Lights of communication control		Indicator light of keyboard, terminal operation and control of remote communication Bright: control state of remote operation Off: control state of keyboard operation Flicker: operation state of the terminal	Green
	ALARM	Alarm light		Bright: the AC frequency vector inverters has fault Off: the AC frequency vector inverters has no fault Flicker: The previous fault of inverter unrecognized when the alarm light is flashing	Red
	Hz	Frequency light	Hz	Bright: current display parameter is operation frequency Flicker: current display parameter is setting frequency	Green
	A	Current indicator light	A	Bright: current display parameter is current	Green
	V	Voltage indictor light	V	Bright current display parameter is voltage	Green
indictor light of unit combination	Hz+A	Percentage indictor light	%	Bright :current display parameter is percentage	Green
	A+V	Time indictor light	s	Bright/flicker: current display parameter is user-defined parameter	Green
	Hz+V	Temperature indictor light	$^{\circ}$ C	Bright: current display parameter is temperature	Green
	Hz+A+V	RPM indictor light	RPM	Bright :current display parameter is RPM	Green
		indictor light without unit		Off :current display parameter has no unit	Green

4-3. Key description of operation panel

Sign	Name	Function
ESC	Parameter setting/Escape key	* Exit the data modification of function item  * Return to state display menu via submenu or function menu
SHIFT >	Shift key	* Under third level menu, use  to move data edit bit of function code  * Under stop / operation state, recurrently select display parameter to make state of stop run, display inquiry (see P07.05-P07.06 for refer meaning of display)
M F	Forward Operation Key / Reverse Operation Key	* Inch runs of inverter  *Switch between forward and reverse rotation of inverter  *Inverter eliminate setting of increasing+ of clockwise rotation / decreasing- of counter clockwise rotation
P R G	Confirm Key of the data	* Enter menu screen each level and confirm setting of parameter
RII	Operation key	* Use for operation under the method of keyboard operation
STOP RESET	Stop / Reset Key	* Actuator stops operation * Abnormal reset * Fault reset
	Increasing of clockwise rotation +	* Under the first-level menu, increasing of function code P00-P15  * Under the second-level menu, increasing for labeling of function code  * Under the third-level menu, increasing for data of function code  * Under stopping/operating state, increasing for frequency presetting or presetting of closed loop
	Decreasing of counterclockwise rotation -	*Under the first-level menu, decreasing of function code P00-P15 - Under the second-level menu, increasing for labeling of function code * Under the third-level menu, decreasing for data of function code *Under stopping/operating state, decreasing for frequency presetting or presetting of closed loop
	6	* Press Potentiometer Key, the function is the same with pressing PRG

## 4-4. Menu style

Menu display adopts three-level menu style and they are shown as following respectively:

1) Group number of function code (first-level menu) 2) Label of function code (secondary menu)3) Set value of function code (three-level menu)

## 4-4-1. First-level menu style

•Structure of first-level menu

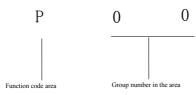


Chart4-2 Structure of first-level menu

•inverter for area of first-level menu

Active area of password	Area of function code	Group number in the area	Scope of function code
		P00 group	P00.00~P00.18
		P01 group	P01.00~P01.16
		P02 group	P02.00~P02.12
		P03 group	P03.00~P03.11
		P04 group	P04.00~P04.07
	User's operation area(P00-P14)	P05 group	P05.00~P05.15
		P06 group	P06.00~P06.20
Protection area of user password P00-P14		P07 group	P07.00~P07.14
F		P08 group	P08.00~P08.12
		P09 group	P09.00~P09.21
		P10 group	P10.00~P10.10
		P11 group	P11.00~P11.50
		P12 group	P12.00~P12.06
		P13 group	P13.00~P13.10
		P14 group	P14.00~P14.08
Protection area of manufacturer's password	Obvious-hidden area of user defined function code (P15 area)	P15 group	P15.00

### 4-4-2.Form of secondary menu

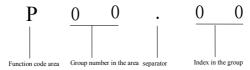


Chart4-3 Form of secondary menu

### •Data display or setting form of secondary menu

Decimal display/setting:

Sign can be displayed or set by data bits  $1\sim5$  is 0-9.

#### 4-4-3. Form of three-level menu

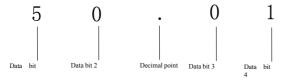


Chart4-4 Form of three-level menu

### 4-4-4. Common display symbol of LED

Besides function code, the first-level menu, secondary menu and three-level menu, the operation panel will show some prompting character; and see following table for detail:

Prompt	Implication	Prompt	Implication
PT200	The AC frequency vector inverters instantly show PT200 to represent PT200 product after electrifying	E.PHI	Default phase at the input side
E.oUP	U-phase protection of inverter unit	Е.РНо	Default phase at the output side
E.oUP	V-phase protection of inverter unit	Е.оН1	Overheating of rectifier module
E.oUP	W-phase protection of inverter unit	Е.оН2	Overheating of inverter module
E.oC1	Over current of acceleration	E.SET	External fault
E.oC2	Over current of deceleration	E.CE	Communication fault
E.oC3	Over current of constant speed	E.ItE	Fault of current detection
E.oU1	Overvoltage of acceleration	E.tE	Fault for self-study of motor
E.oU2	Overvoltage of deceleration	E.EEP	Operation fault of EEPROM
E.oU3	Over current of constant speed	E.PId	Break-line fault for feedback of PID

E.LU Under voltage fault of bus		E.bCE	Brake unit fault
E.oL1	Motor overload	END	Retaining
E.oL2	AC frequency vector inverter overload	0.0.0.0.0	Protection of user password

Notice: the menu specially shows the implication of 0.0.0.0.0

If the starting shows five points beside the data, it means it has password protection. The function code which can make password input is P15 which is retention parameter area of manufacturer and P07 is the setting area of user password.

Please contact with the local agency or the manufacturer when prompt which is not listed in the above table is met.

#### 4-4-5.LED displays corresponding sign

Correspondence between the sign showed by LED and character or number is as following:

Letter displayed	Corresponding letter	Letter displayed	Corresponding letter	Letter displayed	Corresponding letter
	0	- 1	1		2
3	3	7	4	5	5
5	6	7	7	8	8
9	9	R	A	Ь	В
	С	7	d	Ε	Е
F	F	H	Н		I
L	L	Π	N	П	N
0	o	Ρ	P	_	R
5	S	L	t		U
u	V	Ī	Т	_	-

# 4-5. Password operation and key lock and unlock functions

- Set password: enter into function code of password
- Verify password:

Enter into function code of password and the parameter in the password protection can be seen via inputting the password once; please refers to inverter of the password.

## **★** Clear password:

After successively inputting verification password, directly enter into the menu or

enter into the menu via



enter into the function code of password to set 00000; after successfully clearing the password, it is unnecessary to input password for verification when the password protection area is entered.

**★** Effective method of password protection:

Two of the following methods can be chosen randomly:

- 1. Press + Prg at the same time;
- 2. There is no key operation for successive five minutes;
- 3. Electrify again.
- •Key lock and unlock
- 1. Key lock: it can be locked by pressing time.
  - 2. Key unlock: it can be unlocked by pressing + SHIFT

At the same time

### 4-6. Display of operation panel and key operation

**4-6-1.** Classification of display state: display state of operation panel can be divided into 9 types:

No.	State name	Implication
1	Display state for the stop parameter	Display parameter can be changed via and P07.06 can set display parameter
2	Display state for the operation parameter	Display parameter can be changed via and P07.05 can set display parameter
3	Display state for the fault and alarm	Directly enter into this state when the fault occurs under other seven display states
4	Display state for the first-level menu	Press or to enter when the key is unlocked
5	Edit status of secondary menu	Press or to enter under the display state of the first-

		level menu
6	Edit status of three- level menu	Press secondary menu or to enter under the display state of the
7	State of password authentication	Press or to enter under the display state of the first-level menu when it has password protection
8	Modification state of direct parameter	Jnder display of the stop and parameter, press the shuttle key to enter via left otation and right rotation
9	State of information cue	Refer to 4-4-5 LED displays corresponding sign

### 4-6-2. Display status and



#### of operation process

Under the three-level menu and the state of password authentication, is used for the bit choice of the data editing.


Automatic switch of the state

It automatically returns to the display state of the stop parameter or operation parameter without key operation for one minute.

After removing the editing state of the menu, it returns to the display state of the stop parameter or operation parameter without key operation for one minute.

If it has the password setting or lock device of the key, it will automatically returns to the password protection and lock state of the operation panel without the key operation for 5 minutes.

Display state and operation process

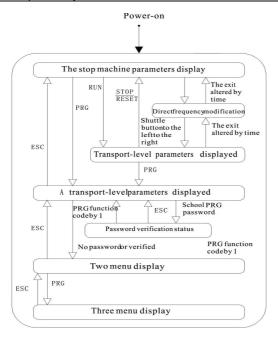

### 4-7. Operation examples

Display parameter for the stop in the following example is the set frequency and the factory setting is 50.00Hz. Anything with underline in the diagram represents current editing bit.

## 4-7-1. Recover factory parameter

## For example, set P01.15=1:

Recover all parameters in P area beside parameter of generator system (P03group) to the factory setting

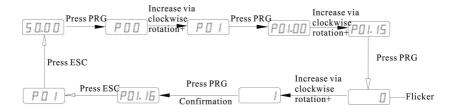


Chart 4-6 Recover factory parameters

## 4-7-2. Setup set frequency

For example, set P01.10=50Hz to 40Hz

The first step:P01.03→0(the default is 7 which shows the decoder is effective) The second step: see the following chart

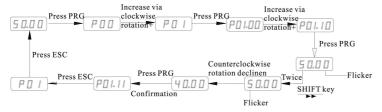


Chart4-7 Setup set frequency

#### 4-7-3. Password setting

For example, set the user password from P07.00 to 00005.

Notice: it can be effective only after the second electrifying when the setting

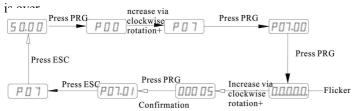


Chart4-8 Password setting

#### 4-7-4. Password authentication

Suppose the function code after P00.00 had been protected by the password and the password was 00005,

Make the password protection for P00.00 in the above example effective and then make the password authentication based on the following process.

Notice: please refer to II RS485 communication protocol when 485 communication method is used to make the check of password.



Chart 4-9 Password authentications

#### 4-7-5. Password

For example, remove the user password P07.00.

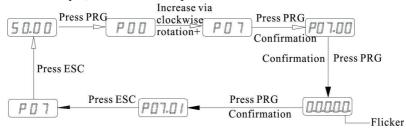


Chart 4-10 Password

### 4-8. Setting method of parameter

Example 1: let's take the acceleration of P09.00 from 5.0 to 25.0 as an example:

- 1. Under the state of P00, the encoder increases with clockwise rotation to function parameter P09.00, now the above LED shows 5.0.
- 2. Press for three times, the flicker for decade of the above LED is 0.
- 3. Increase with clockwise rotation until the decade of LED shows 2.


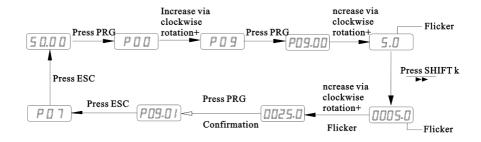


Chart4-11 Parameter setting

# **Chapter 5** Commissioning

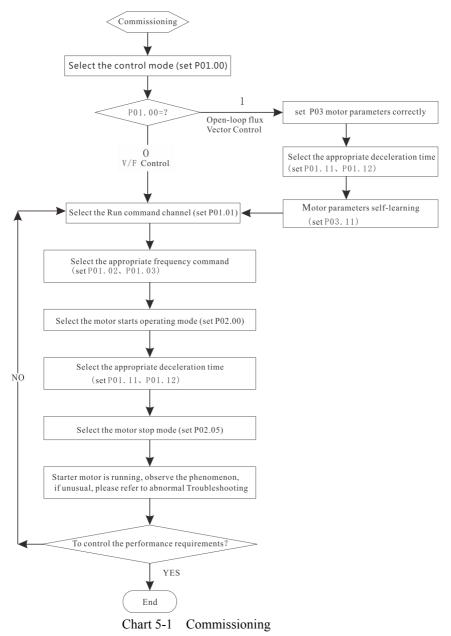

- Before Connect the power supply with the variable-frequency inverter, please firstly confirm the voltage of AC input power is within the scope of rated input voltage of variable-frequency inverter.
- Connect the power supply with the input terminal R, S and T of variable-frequency inverter.
- Select proper control method of rotation.

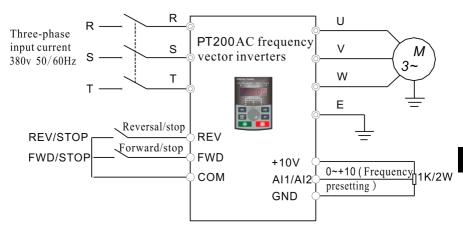


Chart 5-2 control method of rotation

Example: voltage input of analog (P01.00=1,P01.03=1 or 2)+ control operation of the terminal (P06.01=1, P06.02=2);

Frequency order is given by terminal AI1/AI2 and terminal DI2 and DI3 control forward and reversal rotation.

Example: speed regulation of keyboard(P01.01=0, P01.03=7)+ reward and reversal switch operation of the keyboard (P07.03=1)

The frequency is preset by the increase of clockwise rotation and the decrease of counterclockwise rotation of the keyboard encoder; FWD/REV of operation keyboard change the forward and reversal rotation.

- Empty running and check of speed regulation.
- ※ Inspection of inching control.
- \* Affirm the acceleration and deceleration time.
- Connect up the motor.
- X Operate with low speed and inspect the rotation direction of the motor.
- \* Inspect whether the display and output during all operation processes is correct.

## **Chapter 6** Inverter of function parameter

#### 6-1. List of function parameter

Function of PT200 series AC frequency vector inverters can be divided into 15 groups, namely P01~P15 according to the function; and every function group includes several function codes. The function code adopts three-level menu; for example, P08.08 means the eighth function code in P08 function group; and P15 is the manufacturer's function parameter and the user has no right to visit the parameter in this group.

In order to make convenience for the setting of function code, group number of the function, number of function code and parameter of function code respectively corresponds with the first-level menu, the secondary menu and three-level menu when the operation panel is used for operation.

1. inverter for the content in the line of menu is as following:

NUMBER in the first line: it is the serial number for this function code in the whole function code; meanwhile, it also shows the register address for the communication.

CODE in the second line: it is the serial number for the parameter group of the function and parameter.

DESCRIBING LED/OLED KEYBOARD DISPLAY in the third line: it is the detailed description of this function parameter.

SETTING RANGE in the fourth line: it is the effective setting range of the function parameter and it is shown on OLED liquid crystal screen of the operation panel.

FACTORY SETTING in the fifth line: it is the original set value for the function parameter when it leaves the factory;

ALTERATION in the sixth line: it is the alternative attributive of the function parameter (i.e. whether it allows alternation and alternating condition); and the inverter is as follow:

"\one " shows the set value of the parameter can be alternated whenever the AC frequency vector inverters is stopped or operated;

"

"shows the set value of the parameter can't be alternated when the AC frequency vector inverters operated;

"

shows the value of the parameter is actual record value of the detection; and it can't be changed;

( the AC frequency vector inverters has made an automatic check and restriction on alternative attributive of every parameter and it can help the user to avoid wrong alternation.)

- 2. Parameter system is decimal system; if the parameter is shown via hexadecimal, every data is independent mutually when the parameter is edited; value range of partial bits can be hexadecimal  $(0 \sim F)$ .
- 3. Factory setting shows the value after the parameter of the function code is updated when the operation of recovering factory parameter; parameter or record

value of actual detection can't be updated.

- 4. In order to protect the parameter more effectively, the AC frequency vector inverters provides password protection for the function code. After the user password (namely, parameter for user password P07.00 is not 0) is set, the system will firstly enter into the state of user password authentication when the user press to enter into the editing state of the function code; and then what is shown is 0.0.0.0.0; the operator must input user password correctly, or the user can't enter. It is unnecessary to input manufacturer's password correctly for the parameter zone set the manufacturer. (warning: the user can't try to change the parameter set by the manufacturer; if the parameter is not set properly, it will easily cause the abnormal work or even destroy of the AC frequency vector inverters). The user password can be changed randomly under the condition that the password protection is unlocked; the user password is subject to the value input last. Setting P07.00 to 0 can cancel the user password; if P07.00 is not 0 when electrify, then it shows the parameter is protected by password.
- 5. Function of user password also follows the above principle when the serial communication is used to change the parameter of the function code.

6-1-1. Menu grouping

Code	Describing LED/OLED Keyboard display			Reference page
P00	Monitoring function group	Monitor frequency, current and so on; 18 monitoring objects	19	68
P01	Basic function group Frequency set, control method acceleration and deceleration time and so on		17	69
P02	Control group of start and stop	9 1 13 1		76
P03	parameter group of electrical machine	Set of electrical machine parameter	12	78
P04	Parameter of vector control	Parameter of vector control	8	80
P05	V/F controls parameter	User defined	16	82
P06	Input terminal group	Analog and digital input function	19	84
P07	Human-computer interface group	Parameter set of user menu	15	90

Code	Describing LED/OLED Keyboard display	Function description	Amount	Reference page
P08	Output terminal group  Analog and digital input function		13	94
P09	Enhancement group Acceleration and deceleration and jog of pendulous frequency 22		96	
P10	PID control group	Set of built-in PID parameter	11	101
P11	Control group of multiple speed	Set of multiple speed and PLC operation	51	105
P12	Communication interface group	Set for communication function of MODBUS	7	107
P13	Protection parameter group	Set of protection parameter	11	109
P14	Function group of water supply	Set for the parameter of constant pressure water supply	9	111
P15	Manufacturer's function group	Set of manufacturer's parameter	1	112

6-1-2. P00 group Monitoring function group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Refere nce page
1	P00.00	Operation frequency	Currently actual output frequency of the AC frequency vector inverters	HZ	-	68
2	P00.01	Set the frequency	Currently actual constant frequency of the inverter	HZ	•	68
3	P00.02	DC bus voltage	Estimated value of DC bus voltage	V	•	68
4	P00.03	Output voltage of AC frequency vector inverters	Actual output voltage of inverter	V	•	68
5	P00.04	Output current of inverter	Actual output current of inverter	A	•	68
6	P00.05	Actual rotate speed of the motor	Actual running speed of the motor	RPM		68

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Refere nce page
7	P00.06	Output power of the AC frequency vector inverters	Percentage for actual output power of the AC frequency vector inverters	%	•	68
8	P00.07	Output torque of the inverter	Actual output torque of the inverter	N*m	•	68
9	P00.08	Given value of PID	Percentage for the given value of PID adjusts the operation	%	•	68
10	P00.09	Feedback value of PID	Percentage for the feedback value of PID adjusts the operation	%	•	68
11	P00.10	State of input terminal	State of input terminal	-	-	68
12	P00.11	State of output terminal	State of output terminal	-	-	68
13	P00.12	Value of analog AI1	Value of analog AI1	V	-	68
14	P00.13	Value of analog AI2	Value of analog AI2	V	-	68
15	P00.14	Current section of multiple speed	Current section of multiple speed	-	•	69
16	P00.15	Temperature of rectifier module	0~100.0°C	°C	•	69
17	P00.16	Temperature of inverter module	0~100.0°C	°C	•	69
18	P00.17	Software version		-	•	69
19	P00.18	Total operation time of this machine	0∼65535h	0	•	69
		Notice: only IGBT mod	ule in the seventh unit in P00.16 gro	oup is effective		

6-1-3. P01 group Basic group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
20	P01.00	Control mode	0:V/F control 1: vector control for open-loop flux 1 2: vector control for open-loop flux 2 3: closed-loop vector control for feedback of sensor	0		69
21	P01.01	Operation inverter channel	0: inverter channel of keyboard (LED goes out) 1: inverter channel of terminal (LED flicks) 2: inverter channel of communication (LED lightens)	0		70

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
22	P01.02	Increasing+ or decreasing of decoder and terminal-set	0: valid; moreover, the AC frequency vector inverters saves without power supply 1: valid; moreover, the AC frequency vector inverters doesn't save without power supply 2: increasing+/decreasing-invalid setting 3: Setting is valid for the operation; reset when the machine stops	0	<b>♦</b>	70
23	P01.03	Selection of frequency inverter	0: Keyboard setting 1: Setting of analog Al1 2: Setting of analog Al2 3: K1*Al1+K2*Al2 4: Setting for operation of multiple speed 5: Setting of PID control 6: Setting of remote communication 7: Presetting for keyboard potentiometer	7	<b>♦</b>	71
24	P01.04	Selection for the setting of torque	0: Keyboard sets torque (corresponding with P01.05) 1: analog A11 sets torque ( totally corresponds with two times as the rated current of the inverter) 2: analog A12 sets torque (be the same as 1) 3 analog A11+A12 sets torque (be the same as 1) 4: setting of multi torques (be the same as 1) 5 Remote communication sets torque (be the same as 1)	0	<b>*</b>	72
25	P01.05	Keyboard sets the torque	-200.0%~200.0%(rated current of the inverter)	50.0%	<b>\$</b>	73
26	P01.06	Choice for the setting source of upper limiting frequency	0: Keyboard sets upper limiting frequency (P01.07) 1: Analog A11 sets upper limiting frequency (totally corresponds with maximum frequency) 2: Analog A12 sets upper limiting frequency (be the same as 1) 3: Multi sections set upper limiting frequency (be the same as 1) 4: Remote communication sets upper limiting frequency (be the same as 1)	0		73
27	P01.07	Maximum output frequency	10.00∼400.00Hz	50.00Hz		73
28	P01.08	Upper- frequency limit	P01.09~P01.07 (maximum frequency)	50.00Hz	$\Diamond$	73

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
29	P01.09	Lower- frequency limit	0.00Hz~P01.08(Upper- frequency limit)	0.00Hz	<b>\$</b>	74
30	P01.10	Keyboard sets the frequency	0.00 Hz~P01.07(maximum frequency)	50.00Hz	<b>\$</b>	74
31	P01.11	Acceleration time1	0.1~3600.0s	Type setting	<b>♦</b>	74
32	P01.12	Deceleration time1	0.1~3600.0s	Type setting	<b>\$</b>	74
33	P01.13	Choice of operation direction	O: Operate towards defaulted direction     Operate towards opposite direction     Prohibit reversal operation	0		74
34	P01.14	Setting of carrier frequency	0.5~15.0kHz	Type setting	<b>\$</b>	75
35	P01.15	Recovery of function parameter	0: No operation 1: Recover default value beside the group of electric machine parameter 2: Recover default value including the group of electric machine parameter 3: Eliminate fault files	0		76
36	P01.16	Choice of AVR function	0: Invalid 1: The whole process is effective 2: It is invalid only for deceleration	2	<b>♦</b>	76

6-1-4. P02 group Control group for the stop and start

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
37	P02.00	Start operation mode	0: direct start 1: firstly DC brake and then start 2: firstly tracking of rotate speed and the start	0		76
38	P02.01	Launch the start frequency	0.00~10.00Hz	0.50Hz	<b>\$</b>	76
39	P02.02	Start the holding time of frequency	0.0~50.0s	0.0s	<b>&lt;</b>	76
40	P02.03	Start the front brake current	0.0~150.0%	0.0%	<b>&lt;</b>	77
41	P02.04	Start the front brake time	0.0~50.0s	0.0s	<b>\$</b>	77
42	P02.05	Selection of halt mode	0: slow down and stop 1: Random parking	0	<b>\$</b>	77

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
43	P02.06	Start frequency for the halt brake	0.00~P01.07 (maximal frequency)	0.00Hz	<b>\$</b>	77
44	P02.07	Waiting time of halt brake	0.0~50.0s	0.0s	<b>\$</b>	77
45	P02.08	DC brake current of halt	0.0~150.0%	0.0%	<b>\langle</b>	77
46	P02.09	DC brake time of halt	0.0~50.0s	0.0s	<b>\$</b>	77
47	P02.10	Forward and reversal dead time	0.0~3600.0s	0.0s	<b>\$</b>	77
48	P02.11	Selection for the protection of terminal with electricity	0: Run command of the terminal is invalid when it is electrified 1: Run command of the terminal is valid when it is electrified	0	<b>♦</b>	78
49	P02.12	Reservation			<b>\langle</b>	78

6-1-5. P03 group: Group of electric machine parameter

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
50	P03.00	AC frequency vector inverters type	0:G type (load type of constant torque) 1:P type (load type of fan and pump)	Type setting		78
51	P03.01	Rated power of motor	0.4~700.0KW	Type setting		79
52	P03.02	Rated frequency of motor	0.01Hz~P01.07 (maximum frequency)	50.00Hz		79
53	P03.03	Rated rotate torque of motor	0∼36000rPm	Type setting		79
54	P03.04	Rated voltage of motor	0∼460V	Type setting		79
55	P03.05	Rated current of motor	0.1~2000.0A	Type setting		79
56	P03.06	Stator resistor of motor	$0.001{\sim}65.535\Omega$	Type setting	$\Diamond$	79

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
57	P03.07	Rotor resistance of motor	$0.001{\sim}65.535\Omega$	Type setting	<b>♦</b>	79
58	P03.08	Stator and rotor inductance of motor	0.1∼6553.5mH	Type setting	<b>♦</b>	79
59	P03.09	Mutual inductance for stator and rotor of motor	0.1∼6553.5mH	Type setting	<b>\$</b>	79
60	P03.10	No-load current of the motor	0.01~655.35A	Type setting	<b>\$</b>	79
61	P03.11	Self-study of motor parameter	0: No operation 1: Comprehensive self-study of parameter 2: Static self-study of parameter	0		79

6-1-0	6-1-6. P04 group Vector control parameter									
No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page				
62	P04.00	Proportional gain of speed ring 1	0~100	20	<b>\$</b>	80				
63	P04.01	Integral time of speed ring 1	0.01~10.00s	0.50s	<b>\$</b>	80				
64	P04.02	Low frequency of low switch	0.00Hz~P04.05	5.00Hz	<b>\$</b>	80				
65	P04.03	Proportional gain of speed ring 2	0~100	25	<b>\$</b>	80				
66	P04.04	Integral time of speed ring 2	0.01~10.00s	1.00	<b>\$</b>	80				
67	P04.05	High frequency of low switch	P04.02~P01.07 (maximum frequency)	10.00Hz	<b>\$</b>	80				
68	P04.06	Compensation factor of VC slippage	50%~200%	100%	<b>\$</b>	81				
69	P04.07	Setting for upper limit of torque	0.0~200.0%( rated current of inverter)	150.0%	<b>\$</b>	81				

6-1-7. P05 group V/F control parameter

6-1-7.		group V/F control par		Factory		Reference
No.	Code	Keyboard display	Setting range	setting	Change	page
70	P05.00	Setting of V/F curve	00: V/F curve of line 1:V/F curve of multipoint 2:1. V/F curve for dropping torque of 2 power 3:1. V/F curve for dropping torque of 4 power 4:1. V/F curve for dropping torque of 6 power 5:1. V/F curve for dropping torque of 8 power 6:2 V/F curve for dropping torque of 0 power	0		82
71	P05.01	Torque boost	0.0%:(automatic)0.1%~ 30.0%	0.0%	<b>\$</b>	82
72	P05.02	Deadline of torque boost	0.0%~50.0%( rated frequency of relative motor)	20.0%		83
73	P05.03	Limit for compensation of V/F slippage	0.0~200.0%	0.0%	<b>♦</b>	83
74	P05.04	Threshold value for low frequency of restricting vibration	0~500	5	<b>\$</b>	83
75	P05.05	Threshold value for high frequency of restricting vibration	0~500	100	<b>♦</b>	83
76	P05.06	Clipping value of restricting vibration	0~10000	5000	<b>♦</b>	83
77	P05.07	Demarcation frequency for low and high frequency of restricting vibration	0.00Hz~ P01.07(maximum frequency)	12.50Hz	<b>\$</b>	84
78	P05.08	Restrict vibration	0: restricting vibration is valid 1: restricting vibration is invalid	1	<b>\$</b>	84
79	P05.09	V/F frequency point 1	0.00HZ~P05.11	0.00HZ		84
80	P05.10	V/F voltage point 1	0.0~100.0%	0.0%		84
81	P05.11	V/F frequency point 2	P5.09~P05.13	0.00HZ		84
82	P05.12	V/F voltage point 2	0.0~100.0%	0.0%		84

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
83	P05.13	V/F frequency point 3	P05.11~P03.02	0.00HZ		84
84	P05.14	V/F voltage point 3	0.0~100.0%	0.0%		84
85	P05.15	Selection for energy-saving operation	0: Failure to actuate 1:Automatic energy-saving operation	0		84

6-1-8. P06 group Input terminal group

5-1-8.	P06 g	roup Input t	erminal group			
No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
86	P06.00	Function selection of DI1 terminal	0: No function 1: Forward running 2: Reverse run	1		84
87	P06.01	Function selection of DI2 terminal	3: Three-wire control operation control 4: Forward JOG 5: Reverse JOG	2		84
88	P06.02	Function selection of DI3 terminal	6: Random parking 7:Fault resetting 8: Input of external fault 9: UP for frequency setting	4		84
89	P06.03	Function selection of DI4 terminal	10: DOWN for frequency setting 11: Removal for UP and DOWN of frequency setting 12: Terminal of multiple speed 1	0		84
90	P06.04	Function selection of DI5 terminal	13: Terminal of multiple speed 2 14: Terminal of multiple speed 3 15: Terminal of multiple speed 4	0		85
91	P06.05	Function selection of DI6 terminal	16: Temporary stop of PID control 17: Temporary stop of pendulous frequency (stop at current frequency) 18: Resetting of pendulous frequency (return to central frequency) 19: Prohibition of acceleration and deceleration 20: Prohibition of torque control 21: Temporary removal for UP and DOWN setting of frequency 22: DC brake of halt 23: Choice for terminal of acceleration and deceleration time 189 24: Choice for terminal of acceleration and deceleration time 2	0		85
92	P06.06	Filtering times of switching value	1~10	5	<b>\$</b>	87

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
93	P06.07	Operation mode of terminal control	0: Control like two lines 1 1: Control like two lines 2 2: Three-wire control 1 3: Three-wire control 2	0		87
94	P06.08	Increasing + via clockwise rotation of encoder and terminal or decreasing via counterclockwise rotation of encoder and terminal	0.01~50.00Hz/s	0.50Hz/s	<b>\$</b>	88
95	P06.09	Low limiting value of AI1	0.00V~10.00V	0.20V	<b>\$</b>	89
96	P06.10	Low limits of AII corresponds with the setting	-100.0%~100.0%	0.0%	<b>\$</b>	89
97	P06.11	Upper limiting value of AI1	0.00V~10.00V	10.00V	<b>\$</b>	89
98	P06.12	Upper limits of AI1 corresponds with the setting	-100.0%~100.0%	100.0%	<b>\$</b>	89
99	P06.13	Filtering time of AI1 input	0.00s~10.00s	0.10s	<b>\$</b>	89
100	P06.14	Low limiting value of AI2	0.00V~10.00V	0.20V	<b>\$</b>	89
101	P06.15	Low limits of AI2 corresponds with the setting	-100.0%~100.0%	0.0%	<b>&lt;</b>	89
102	P06.16	Upper limiting value of	0.00V~10.00V	10.00V	<b>\$</b>	89
103	P06.17	Upper limits of AI2 corresponds with the setting	-100.0%~100.0%	100.0%	<b>\$</b>	89
104	P06.18	Filtering time of AI2 input	0.00s~10.00s	0.10s	<b>\langle</b>	90
105	P06.19	Gain for simulated input 1 K1	0.00~300.00	100.00	<b>\$</b>	90
106	P06.20	Gain for simulated input 2 K2	0.00~300.00	100.00	<b>\$</b>	90

6-1-9. P07 group Human-computer interface group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
107	P07.00	User password	0~65535	0	<b>&lt;</b>	90
108	P07.01	OLED shows language choice	0:Chinese 1:English	0	<b>&lt;</b>	90
109	P07.02	Copy of function parameter	0: No operation 1: Function parameter of this machine is delivered to OLED keyboard 2: Download function parameter of OLED keyboard onto this machine Notice: the parameter automatically returns to 0 after 1-2 operations have been finished.	0		90
110	P07.03	Function choice of	0:JOG operation 1: Switch of forward and reverse rotation 2: Remove increasing+ via clockwise rotation or decreasing- via counterclockwise rotation-setting	0		91
111	P07.04	Function choice for halt	0: it is only effective for panel control 1: it is effective for panel control and terminal control 2: it is effective for panel control and communication control 3: it is effective for all control modes	0	<b>\$</b>	91

	No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
	112	P07.05	Choice for parameter showed by operation state	0~0x7FFF BIT0: operation frequency BIT1: setting frequency BIT2: bus bar voltage BIT3: output voltage BIT4:output current BIT5:rotate speed of operation BIT6: output power BIT7: output torque BIT8:given value of PID BIT9:feedback value of PID BIT10: state of input terminal BIT11: state of output terminal BIT11: value of analog AII BIT13: value of analog AII BIT14: Current section of multiple speed BIT15: Setting value of torque	0x3FF		92
	113	P07.06	Choice for parameter showed by halt state	1~0x1FF BIT0: setting frequency BIT1:busbar voltage BIT2: state of input terminal BIT3: state of output terminal BIT4: given value of PID BIT5: feedback value of PID BIT6: value of analog AI1 BIT7: value of analog AI2 BIT8: Current section of multiple speed BIT9: Setting value of torque BIT10~ BIT15: Reservation	0xFF	<b>♦</b>	92
ľ	114	P07.07	First two fault types	0~24		•	92
Ī	115	P07.08	The first two fault type	0: Fault free 1: Protection for U phase of inverter unit (E.oUP) 2: Protection for V phase of inverter unit (E.oUP) 3:Protection for W phase of inverter unit (E.oUP) 4: Over current of		•	92
	116	P07.09	Current fault type			•	92

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
			acceleration (E.oC1) 5: Over current of deceleration (E.oC2) 6: Over current of constant speed (E.oC3) 7: Overvoltage of acceleration (E.oU1) 8: Overvoltage of deceleration (E.oU2) 9: Overvoltage of constant speed (E.oU3) 10: undervoltage fault of DC bus (E.LU) 11: Motor overload (E.oL1) 12: Overload of inverter (E.oL2) 13: Default phase at output side (E.PHI) 14: Default phase at input side (E.PHO) 15: Overheating of rectification module (E.oH1) 16: Fault for overheating of inverter module (E.oH2) 17: External fault (E.SET) 18: Communication fault (E.CE) 19: Detection fault of current (E.ItE) 20: fault for self-study of motor (E.tE) 21: operation fault of EEPROM (E.EEP) 22: Fault for break line of PID feedback (E.PId) 23: Brake unit fault (E.OE) 24: Reservation (END)			
117	P07.10	Operation frequency of current fault		0.00Hz	•	93
118	P07.11	Output current of current fault		0.0A	•	93
119	P07.12	Bus bar voltage of current fault		0.0V	•	93

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
120	P07.13	State for input terminal of current fault		0	•	93
121	P07.14	State for output terminal of current fault		0	•	93

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
122	P08.00	Output choice for numerical magnitude of SPA	0: No output 1: Motor is at the state of forward rotation	1	<b>\$</b>	94
123	P08.01	Output choice for numerical magnitude of SPB	2: Motor is at the state of reverse rotation 3: Fault output 4: Level detection of	1		94
124	P08.02	Output choice of relay	frequency and PDT output 5: Reach Frequency 6: Zero-speed operation 7: Reach frequency of upper limit 8: Reach frequency of lower limit 9:frequency of lower limit setting reached 10:FDT Reached 11:Inverter ready signal 11:auxiliary motor1 start 13:auxiliary motor2 start	3	<b>♦</b>	94
125	P08.03	Output choice of AO1	0: operation frequency 1: setting frequency 2: rotate speed of operation 3: output current 4: output voltage 5: output power 6: output torque 7: Input value of analog Al1 8: Input value of analog Al2 9~10: Reservation	0	<b>♦</b>	95
126	P08.04	Lower limit for output of AO1	0.0%~100.0%	0.0%	<b>\$</b>	95
127	P08.05	Lower limit corresponds with output of AO1	0.00V ~10.00V	0.00V	<b>♦</b>	95
128	P08.06	Upper limit for output of AO1	0.0%~100.0%	100.0%	<b>\$</b>	95

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
129	P08.07	Upper limit corresponds with output of AO1	0.00V ~10.00V	10.00V	<b>\$</b>	95
130	P08.08	Output choice of AO2	0: operation frequency 1: setting frequency 2: rotate speed of operation 3: output current 4: output voltage 5: output power 6: output torque 7: Input value of analog AII 8: Input value of analog AI2 9~10: Reservation	0	<b>♦</b>	96
131	P08.09	Lower limit for output of AO2	0.0%~100.0%	0.0%	<b>♦</b>	96
132	P08.10	Lower limit corresponds with output of AO2	0.00V ~10.00V	0.00V	<b>♦</b>	96
133	P08.11	Upper limit for output of AO2	0.0%~100.0%	100.0%	<b>♦</b>	96
134	P08.12	Upper limit corresponds with output of AO2	0.00V ~10.00V	10.00V	<b>♦</b>	96

6-1-11. P09 group Enhancement group

-1-1	1. P09 g	group Enhancem	ent group			
No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
135	P09.00	Acceleration time 2	0.1~3600.0s	Type setting	<b>\$</b>	96
136	P09.01	Deceleration time 2	0.1~3600.0s	Type setting	<b>\$</b>	97
137	P09.02	Acceleration time 3	0.1~3600.0s	Type setting	<b>\langle</b>	97
138	P09.03	Deceleration time 3	0.1~3600.0s	Type setting	<b>\$</b>	97
139	P09.04	Acceleration time 4	0.1~3600.0s	Type setting	<b>♦</b>	97
140	P09.05	Deceleration time 4	0.1~3600.0s	Type setting	<b>♦</b>	97
141	P09.06	Operation frequency of JOG	0.00~P01.07 (maximum frequency)	5.00Hz	<b>\$</b>	97
142	P09.07	Acceleration time of JOG operation	0.1~3600.0s	Type setting	<b>\$</b>	97
143	P09.08	Deceleration time of JOG operation	0.1~3600.0s	Type setting	<b>\$</b>	97
144	P09.09	Hopping frequency	0.00~P01.07 (maximum frequency)	0.00Hz	<b>\$</b>	97
145	P09.10	Range of hopping frequency	0.00~P01.07 (maximum frequency)	0.00Hz	<b>\$</b>	97
146	P09.11	Range of pendulous frequency	0.0~100.0%( relative setting frequency)	0.0%	<b>\$</b>	97
147	P09.12	Range of jumping frequency	0.0~50.0% (relative range of pendulous frequency)	0.0%	<b>\$</b>	97
148	P09.13	Rise time pendulous frequency	0.1~3600.0s	5.0s	<b>\$</b>	97
149	P09.14	Fall time pendulous frequency	0.1~3600.0s	5.0s	<b>\$</b>	97
150	P09.15	Times for automatic reset of the fault	0~3	0	<b>\$</b>	98
151	P09.16	Setting for interval of automatic reset of the fault	0.1~100.0s	1.0s	<b>\$</b>	98
152	P09.17	Detection value for level of FDT	0.00~ P01.07 (maximum frequency)	50.00Hz	<b>\$</b>	99
153	P09.18	Detection value for hysteresis of FDT	0.0~100.0% (FDT level)	5.0%	<b>\$</b>	99
		l	l	1		

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
154	P09.19	Frequency reaches detection degree	0.0~100.0% (maximum frequency)	0.0%	<b>&lt;</b>	99
	155 P09.20 N	Voltage of brake valve	115.0~140.0% (voltage of standard bus) (380V series)	130.0%	<b>&lt;</b>	100
155			115.0~140.0% (voltage of standard bus) (220V series)	120.0%	<b>\$</b>	100
156	P09.21	Display coefficient of rotate speed	0.1~999.9% machinery rotate speed =120*operation frequency*P09.21/pole number	100.0%	<b>\$</b>	101

6-1-12. P10 group control group of PID

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
157	P10.00	Selection for given power supply of PID	0:keyboard presetting (P10.01) 1: Presetting for simulated channel AI1 2: Presetting for simulated channel AI2 3: Presetting of remote communication 4: Presetting of multistep speed	0	<b>♦</b>	101
158	P10.01	Keyboard presets the PID presetting	0.0%~100.0%	0.0%	<b>\$</b>	101
159	P10.02	Selection for feedback source of PID	0: Feedback for simulated channel AII 1: Feedback for simulated channel AI2 2: Feedback of AII+AI2 3: Feedback of remote communication	0	<b>\$</b>	101
160	P10.03	Selection for output characteristics of PID	0:PID output is positive 1:PID output is negative	0	<b>\$</b>	102
161	P10.04	Proportional gain (Kp)	0.00~100.00	1.00	<b>\$</b>	102
162	P10.05	Integral time (Ti)	0.01~10.00s	0.10s	<b>\langle</b>	102
163	P10.06	Derivative time (Td)	0.00~10.00s	0.00s	<b>\langle</b>	102
164	P10.07	Sampling period (T)	0.01~100.00s	0.10s	<b>♦</b>	103

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
165	P10.08	Deviation limit of PID control	0.0~100.0%	0.0%	<b>&lt;</b>	103
166	P10.09	Detection value for break line of feedback	0.0~100.0%	0.0%	<b>\langle</b>	104
167	P10.10	Detection time for break line of feedback	0.0~3600.0s	1.0s	<b>\$</b>	104

6-1-13. P11 group control group of multistep speed

N 0.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
168	P11.00	Multistep speed 0	-100.0~100.0%	6	<b>♦</b>	105
169	P11.01	Multistep speed 1	-100.0~100.0%	12	<b>♦</b>	105
170	P11.02	Multistep speed 2	-100.0~100.0%	18	<b>♦</b>	105
171	P11.03	Multistep speed 3	-100.0~100.0%	24	<b>♦</b>	105
172	P11.04	Multistep speed 4	-100.0~100.0%	30	<b>\$</b>	105
173	P11.05	Multistep speed 5	-100.0~100.0%	36	<b>♦</b>	105
174	P11.06	Multistep speed 6	-100.0~100.0%	42	<b>♦</b>	105
175	P11.07	Multistep speed 7	-100.0~100.0%	48	<b>♦</b>	105
176	P11.08	Multistep speed 8	-100.0~100.0%	54	<b>♦</b>	105
177	P11.09	Multistep speed 9	-100.0~100.0%	60	<b>♦</b>	105
178	P11.10	Multistep speed 10	-100.0~100.0%	66	<b>♦</b>	105
179	P11.11	Multistep speed 11	-100.0~100.0%	72	<b>♦</b>	105
180	P11.12	Multistep speed 12	-100.0~100.0%	78	<b>♦</b>	105
181	P11.13	Multistep speed 13	-100.0~100.0%	84	<b>♦</b>	105
182	P11.14	Multistep speed 14	-100.0~100.0%	90	<b>♦</b>	105
183	P11.15	Multistep speed 15	-100.0~100.0%	100	<b>♦</b>	105

6-1-14. P12group communication parameter group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
184	P12.00	Setting for Baud rate of communication	0:1200bps 1:2400bps 2:4800bps 3:9600bps 4:19200bps 5:38400bps	4	<b>♦</b>	107
185	P12.01	Setting for bit check of data	0: Without verification (N, 8, 1) for RTU 1:Even parity check (E, 8, 1) for RTU 2:Odd parity check (O, 8, 1) for RTU 3: Without verification (N, 8, 2) for RTU 4: Even parity check (E, 8, 2) for RTU 5: Odd parity check (O, 8, 2) for RTU 6: Without verification (N, 7, 1)for ASCII 7: Even parity check (E, 7, 1)for ASCII 8: Odd parity check (O, 7, 1)for ASCII 9: Without verification (N, 7, 2)for ASCII 10: Even parity check (E, 7, 2)for ASCII 11: Odd parity check (E, 7, 2)for ASCII 12: Without verification (N, 8, 1)for ASCII 13: Even parity check (O, 7, 2)for ASCII 11: Odd parity check (O, 8, 1)for ASCII 11: Without verification (N, 8, 1)for ASCII 11: Without verification (N, 8, 1)for ASCII 11: Without verification (N, 8, 2)for ASCII 11: Without verification (N, 8, 2)for ASCII 11: Odd parity check (E, 8, 2)for ASCII	1	♦	107
186	P12.02	Communication address of this method	1∼247, 0 is broadcast address	1	<b>\$</b>	107
187	P12.03	Delay for communication response	0~200ms	5ms	<b>♦</b>	108

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
188	P12.04	Delayed fault time of communication	0.0 (invalid) , 0.1 $\sim$ 100.0s	0.0s	<b>\$</b>	108
189	P12.05	Disposal for transmission error	0: alarm and random parking 1: No alarm and continuous operation 2: Halt according the halt method without alarm(only for communication method) 3: Halt according the halt method without alarm( for all control methods)	1	<b>♦</b>	108
190	P12.06	Disposal for transmission response	0: writing operation with response 1: writing operation without response	0	<b>\$</b>	108

6-1-15. P13 group Protection function group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
191	P13.00	Input the protection selection of default phase	0: Prohibit 1: Permit	1		109
192	P13.01	Output the protection selection of default phase	0: Prohibit 1: Permit	1		109
193	P13.02	protection selection of motor overload	0: No protection 1: Ordinary motor (having compensation with low speed) 2: variable frequency motor (without compensation with low speed )	2		109
194	P13.03	Protective current of motor overload	20.0%~120.0%(rated current of motor)	100.0%	<b>\$</b>	109
195	P13.04	Under-clocking point for instant power failure	70.0~110.0%( voltage of standard bus)	80.0%	<b>\$</b>	109
196	P13.05	Descent rate for frequency of instant power failure	0.00Hz~ P01.07(Maximum frequency)	0.00Hz	<b>\$</b>	109
197	P13.06	Protection for overvoltage and speed reduction	0: Prohibit 1: Permit	0	<b>♦</b>	109

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
198 P13.0	D12 07	Protective for voltage of overvoltage and speed reduction	110~150% (380V series)	130%	<b>\$</b>	109
	F13.07		110~150% (220V series)	120%	$\Diamond$	109
199	P13.08	Level of automatic current limiting	100~200%	G type:160% P type :120%	<b>♦</b>	110
200	P13.09	Descent rate for frequency of current limiting	0.00~100.00Hz/s 10.00Hz/s		<b>\$</b>	110
201	P13.10	Choice for the selection of current limiting activity	0: current limiting is always effective 1: current limiting is ineffective for constant speed	0	<b>♦</b>	111

6-1-16. P14 group function group of water supply

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
202	P14.00	Operation function of PID	0: halt without operation 1: halt with operation	0	<b>♦</b>	111
203	P14.01	Awakening frequency	dormancy frequency (P14.03) ~ maximum frequency (P01.07)	10.00Hz	<b>\$</b>	111
204	P14.02	Delay time of awakening	0.0s~3600.0s	1000.0s	<b>♦</b>	111
205	P14.03	Dormancy frequency	0.00Hz~awakening frequency (P14.01)	5.00Hz	<b>♦</b>	111
206	P14.04	Delay time of dormancy	0.0s~3600.0s	50 0.0s	<b>\$</b>	111
207	P14.05	Droop control	0.00~10.00Hz	0.00Hz	<b>♦</b>	112
208	P14.06	Effective choice of helper motor	0~3	0	<b>\$</b>	112
209	P14.07	Delay time for the start and stop of helper motor 1	0.0s~3600.0s	5.0s	<b>♦</b>	112
210	P14.08	Delay time for the start and stop of helper motor 2	0.0s~3600.0s	5.0s	<b>\$</b>	112

6-1-17. P15 group manufacturer's function group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	Reference page
211	P15.00	Manufacturer password	0~65535	****		112

# 6-2. inverter of function parameter

6-2-1.P00 group monitoring function group

-2-1.P	00 group	nonitoring function group						
No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change			
1	P00.00	Operation frequency	Currently actual output frequency of the inverter	HZ	•			
2	P00.01	Set the frequency	Currently actual setting frequency of the inverter	HZ	-			
3	P00.02	DC bus voltage	Estimated value of DC bus voltage	V	•			
4 P00.03 frequency vector inverter inverter		Actual output voltage of inverter	V	•				
5			Actual output current of inverter	A	•			
6	P00.05 Actual rotate speed of the motor		Actual running speed of the motor	RPM	•			
7	P00.06	Output power of the AC frequency vector inverters	Percentage for actual output power of the AC frequency vector inverters	%	•			
8	P00.07	Output torque of the inverter	Actual output torque of the inverter	N*m	•			
9	P00.08	Given value of PID	percentage for the given value of PID adjusts the operation	%	•			
10 P00.09 Feedback value of PID		Feedback value of PID	percentage for the feedback value of PID adjusts the operation	%	•			
11	P00.10	State of input terminal	State of input terminal	-	•			
12	P00.11	State of output terminal	State of output terminal	-	-			
13	P00.12	Value of analog AI1	Value of analog AI1	V	-			
14	P00.13	Value of analog AI2	Value of analog AI2	V	•			

No.	Keyboard displa		Setting range	Factory setting	Change
15	P00.14	Current section of multiple speed	Current section of multiple speed	1	•
16	P00.15	Temperature of rectifier module	0~100.0℃	$^{\circ}$	-
17	P00.16	Temperature of inverter module	0~100.0℃	$^{\circ}$	-
18	P00.17	Software version			-
		A	1.00	-	

All of these function codes can be only referred without any change.

Temperature of rectifier module: it shows the temperature of rectifier module; different rectifier module of different types may have different protective value of over-temperature protection.

Temperature of inverter module: it shows the temperature of rectifier module; different inverter module of different types may have different protective value of over-temperature protection.

Software version: version number of DSP software

Total operation time of this machine, so far, it shows the total operation time of the inverter.

6-2-2.P01 group basic function group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
20	P01.00	Control mode	0: V/F control 1: vector control for open-loop flux 1 2: vector control for open-loop flux 2 3: closed-loop vector control for feedback of sensor	0	

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	--	---------------	-----------------	--------

Select the operation mode of inverter:

- 0: V/F control: it is appropriate for the occasion which has no high requirement on accuracy such as the load of the fan and pump; and it can be also applied to the place where one AC frequency vector inverters can drive many motors.
- 1: vector control for open-loop flux 1: it is suitable for general place with high performance where has no encoder PG; and one AC frequency vector inverters can only drive one motor such as the load of machine tool, centrifugal machine, draw bench and injection molding machine.
- 2: vector control for open-loop flux 2: it is appropriate for the occasion which has no high requirement on accuracy of torque control like wire-wound and draw bench. Under the mode of torque control, the motor speed is controlled by the motor load; and its acceleration and deceleration isn't decided y acceleration and deceleration time of AC frequency vector inverters any more.
- 3: closed-loop vector control for feedback of sensor

Notice: you must have self-study of motor parameter when you choose mode of vector control. Only accurate motor parameter is obtained can develop the advantage for mode of vector control. More excellent performance can be obtained via adjusting the parameter (P03 group) of speed. regulator

21	P01.01	Operation inverter channel	0: inverter channel of keyboard (LED goes out) 1: inverter channel of terminal (LED flicks) 2: inverter channel of communication (LED lightens)	0	
----	--------	----------------------------	---	---	--

Change the channel for control inverter of inverter.

Control inverter of the AC frequency vector inverters includes start, halt, forward rotation, reverse rotation, JOG and fault resetting.

0: inverter channel of keyboard (LED goes out) : operate via of the keyboard

<sub>RUN</sub> and

the panel

Command control. If multifunction key were set as

to switch the function, then

this key could be used to change the rotation direction.

Under the operation state, if press frequency vector inverters stop freely

- 1: inverter channel of terminal (LED flicks): Forward rotation, reverse rotation of multifunction terminal, forward jog and reverse job make inverter control.
  - 2: inverter channel of communication (LED lightens): Operation inverter is controlled by upper computer via communication.

22	P01.02	Increasing + via clockwise rotation of encoder and terminal or decreasing via counterclockwise rotation of encoder and terminal –setting	0: valid; moreover, the AC frequency vector inverters saves without power supply 1: valid; moreover, the AC frequency vector inverters doesn't save without power supply 2: increasing+/decreasing-invalid setting 3: Setting is valid for the operation; reset when the machine stops	0	
----	--------	--	--	---	--

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	--	---------------	-----------------	--------

Set the frequency by means of increasing + via clockwise rotation of encoder and terminal or decreasing via counterclockwise rotation of encoder and terminal as well increasing+ or decreasing- of the terminal (increasing frequency setting or decreasing frequency setting) of encoder; it has the highest authority and it can combine with channels set by any frequency. It is used mainly for accomplishing the output frequency of mini AC frequency vector inverters during the debugging period of the control system.

- 0: valid; moreover, the AC frequency vector inverters saves without power supply. It can set frequency inverter; what is more, it can saves this frequency value after the power failure of the inverter; and it can automatically combine with current setting frequency after next electrifying.
- 1: valid; moreover, the AC frequency vector inverters doesn't save without power supply. It can set frequency inverter; what the difference is that this frequency value can't be stored after the power failure of the inverter.
- 2: Invalid, increasing + via clockwise rotation of encoder and terminal or decreasing via counterclockwise rotation of encoder and terminal as well increasing+ or decreasing- of the terminal of encoder is invalid; and the setting will automatically reset.
- 3: the setting for increasing + via clockwise rotation of encoder and terminal or decreasing via counterclockwise rotation of encoder and terminal as well increasing+ or decreasing- of the terminal of encoder at operation state is valid; the setting for increasing + via clockwise rotation of encoder and terminal or decreasing via counterclockwise rotation of encoder and terminal as well increasing+ or decreasing- of the terminal of encoder at halt state reset.

Notice: after the user makes the operation on recovering the default value for the function parameter of AC frequency vector inverter, frequency set by increasing + or decreasing- of the encoder and terminal automatically reset.

23	P01.03	Selection of frequency inverter	0: Keyboard setting 1: Setting of analog AII 2: Setting of analog AI2 3:K1*AI1+K2*AI2 4: Setting for operation of multiple speed 5: Setting of PID control 6: Setting of remote communication 7: Presetting for keyboard encoder	7	♦
----	--------	---------------------------------	--	---	---

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	--	---------------	-----------------	--------

Select the channel for inverter input of A frequency of AC frequency vector inverter and there are seven given frequency channels.

- 0: Keyboard setting: achieve the aim that the keyboard sets the frequency via altering the value of function code P01.03-keyboard sets the frequency.
- 1: Setting of analog AI1
- 2: Setting of analog AI2
- 3. Setting for analog K1\*AI1+K2\*AI2: it means that the frequency is determined by the input terminal of the analog. Standard configuration of PT200 AC frequency vector inverter provides two simulated input terminals ; among them, AI1 is the voltage input with  $0\sim 10V/0~(4)\sim 20mA$  and AI2 is the input with
- $0\sim10\text{V}/0~(4)\sim20\text{mA}$ ; And input of current or voltage can be switched via jumper JP2 and JP1.

Notice: when analog Al2 selects  $0\sim$  20mA for the input, what voltage corresponded by 20mAis 10V.

100.0% Set by simulated input corresponds with maximum frequency (P01.07) and-100.0% corresponds with maximum frequency of the response.

Please refer to the inverter of P06.19 and P06.20 for K1/K2.

- 4: Setting for operation of multiple speeds: the AC frequency vector inverter will operation via the method of multistep speed after selecting this setting method of the frequency. It is necessary to set the parameter for control group of multistep speed in P06 and P11 for determine the corresponding relation between the given percentage and given frequency.
- 5: Setting of PID control: operation mode of AC frequency vector inverter is the control of process PID if this parameter is selected. At this moment, it is necessary to set PID control group in P10 group. The operation frequency of AC frequency vector inverter is the frequency value after the effect of PID. Please refer to the inverter of PID function for the implication of given source, fixed amount and feedback source of PID.

6: Setting of remote communication: the frequency is preset by the upper computer via communication method. Please see Attachment I communication protocol for detail.

7: Presetting for keyboard encoder: Corresponding value for the starting point and end point of keyboard encoder can be used as positive and negative effect.

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	--	---------------	-----------------	--------

The torque control is effective only for P01.00=2; and only then can function code of P01.04 be effective. At the torque control, AC frequency vector inverter output the torque based on the torque inverter set; and the output frequency is limited by upper limiting frequency; when the load speed is higher than the upper limiting frequency set, output frequency of AC frequency vector inverter is restricted; and at this moment, the output torque is different from the torque set.

When the torque inverter is the keyboard setting (i.e. P01.04=0), the torque inverter can be obtained via setting the function code P01.05. when the torque setting is negative, the motor will rotate reversely; 100.0% Set by analog, multistage speed and communication setting corresponds with double rated current of AC frequency vector inverter; and-100.0% corresponds with negatively twice rated current of AC frequency vector inverter.

The torque control and speed control can be switched via multifunctional input terminal.

When the torque set by AC frequency vector inverter is bigger than the load torque, output frequency of AC frequency vector inverter will rise; when the output frequency of AC frequency vector inverter reaches the upper limit of frequency, output frequency of AC frequency vector inverter will always operate with upper limit frequency.

When the torque set by AC frequency vector inverter is smaller than the load torque, output frequency of AC frequency vector inverter will fall; when the output frequency of AC frequency vector inverter reaches the lower limit of frequency, output frequency of AC frequency vector inverter will always operate with lower limit frequency.

Notice: AC frequency vector inverter transfers from the torque control to speed control when the machine stops.

25	P01.05	Keyboard sets torque	$ \begin{array}{l} -200.0\% \sim 200.0\% (\text{rated current} \\ \text{of AC frequency vector} \\ \text{inverter}) \end{array} $	50.0%	<b>♦</b>
26	P01.06	Choice for the setting source of upper limiting frequency	0: Keyboard sets upper limiting frequency (P01.08) 1: Analog AI1 sets upper limiting frequency ( totally corresponds with maximum frequency ) 2: Analog AI2 sets upper limiting frequency (be the same as 1) 3: Multi sections set upper limiting frequency (be the same as 1) 4: Remote communication sets upper limiting frequency (be the same as 1)	0	<b>♦</b>

Selection for given source of upper limiting frequency. Particularly, at the state of torque control, output power of AC frequency vector inverter can be changed via changing the upper limiting frequency.

27	P01.07	Maximum output frequency	10.00~400.00Hz	50.00Hz	
----	--------	--------------------------	----------------	---------	--

It is used to set the highest frequency of AC frequency vector inverter; and it is the base for setting the frequency and the speed of acceleration and deceleration. The user should pay more attention to it.

28	P01.08	Upper limiting of operation frequency	P01.09~P01.07 (Maximum frequency)	50.00Hz	<b>♦</b>
----	--------	---------------------------------------	-----------------------------------	---------	----------

The upper limiting value for output frequency of AC frequency vector inverter and it should be smaller or equal to maximum output frequency.

N	0.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
29		P01.09	Lower limiting of operation frequency	0.00Hz~P01.08(Upper limiting of operation frequency)	0.00Hz	$\Diamond$

Lower limiting value of operation frequency. When the frequency set is lower than the lower limiting frequency, the lower limiting frequency operates.

Maximum output frequency should be bigger or equally to upper limiting frequency which is bigger or equal to lower limiting frequency.

30	P01.10	Keyboard sets the frequency	0.00 Hz~P01.07(Maximum frequency)	50.00Hz	<b>♦</b>
----	--------	-----------------------------	-----------------------------------	---------	----------

When the frequency inverter selects KEYBOARD SETTING, then the value of the function code is the initial value set by the figure for the frequency of AC frequency vector inverter

	31	P01.11	Acceleration time	0.1~3600.0s	Type selection	$\Diamond$
I	32	P01.12	Deceleration time 1	0.1~3600.0s	Type selection	$\Diamond$

Acceleration time of JOG refers to the time required by AC frequency vector inverter from 0Hz to maximum output power (P01.07)

Deceleration time of JOG refers to the time required by AC frequency vector inverter from maximum output power to 0Hz (P01.07)

It is shown as following:

▲ Output frequency(Hz)

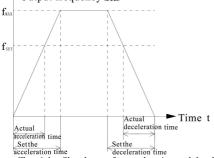


Chart6-1 Sketch map for acceleration and deceleration time

When the frequency set is equal to maximum frequency, actual acceleration and deceleration time is in accordance with acceleration and deceleration time set .

When the frequency set is smaller than maximum frequency, actual acceleration time is smaller than deceleration time set.

Actual acceleration time= deceleration time set\*setting frequency or maximum frequency.

PT200 AC frequency vector inverter has four acceleration and deceleration time.

The first group: P01.11, P01.12; the second group: P09.00, P09.01

The third group: P09.02, P09.03; the fourth group: P09.04、P09.05

The acceleration and deceleration time can be selected via the combination for the selection terminal of acceleration and deceleration time in the digital input terminal with multifunction.

33	P01.13	Choice of operation direction	Operate towards defaulted direction     Operate towards opposite direction     Prohibit reversal operation	)		
----	--------	-------------------------------	--	---	--	--

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change

- 0: Operate towards defaulted direction. AC frequency vector inverter will operate towards actual direction after it is electrified.
- 1: Operate towards opposite direction. It is used for changing the direction of motor; its effect is to change the rotate direction of the motor via adjusting two random motor lines.

Notice: after the parameter initialization, the operation direction of the motor will return to its original state; please use it carefully for the place where the rotation direction of the motor is banned after the debug of the system.

2: Prohibit reversal operation. Prohibit reversal operation of AC frequency vector inverter and it can be applied to specific place where the reverse rotation is prohibited.



frequency	Electromagnetic noise	Noise, leakage current	Cooling degree
1KHz	▲ Large	▲ Small	▲ Small
10KHz			
16KHz	▼ Small	<b>▼</b> Large	▼ Large

Chart 6-2 relation scheme for influence of carrier on the environment

Model	Max	Min	Factory default
1.5-11KW	15	0.5	8KHz
15-55KW	8	0.5	4KHz
75-185KW	6	0.5	2KHz
200-315KW	6	0.5	1KHz

Chart6-3 Relation form between the type and carrier

Advantage of high carrier frequency: ideal current waveform, few current harmonics and less motor noise.

Disadvantage of high carrier frequency: increasing switching loss, rising temperature of AC frequency vector inverter, influenced output capacity of AC frequency vector inverter; and under high carrier, AC frequency vector inverter should be used via derating; meanwhile, increasing leak current of AC frequency vector inverter and its increasing interruption on external electromagnetism .

Adopting low carrier frequency is opposite to the above-mentioned status; too low carrier frequency will cause the fluctuation of the operation with low frequency, torque reduction or even vibration.

The carrier frequency has been set reasonably when AC frequency vector inverter leaves the factory. Generally speaking, it is unnecessary for the user to change the parameter.

When the user uses carrier frequency exceeding the default, it should be used by derating; and the derating should be 20% with every 1K carriers.

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
35	P01.15	Recovery of function parameter	0: No operation 1: Recover default value beside the group of electric machine parameter 2: Recover default value including the group of electric machine parameter 3: Eliminate fault files	0	

#### 0: No operation

- 1.AC frequency vector inverter recovers default value for all parameters (beside P03 group).
- 2.AC frequency vector inverter recovers default value for all parameters (including P03 group).
- 3.AC frequency vector inverter eliminates recent fault files.

		0: Invalid			l
36	P01.16	1: The whole process is effective 2: It is invalid only for deceleration	2	<b>♦</b>	

AVR function is the automatic adjustment function of output voltage. When AVR function is invalid, output voltage will change with the change of input voltage (or DC bus voltage); When AVR function is valid, output voltage will not change with the change of input voltage (or DC bus voltage); and output voltage will basically keep constant within scope of the output capacity.

Notice: when the motor stops with deceleration, it will automatically stabilize the voltage and AVR function closes; and it will stop the machine in much shorter time without overvoltage.

6-2-3.P02 group control group of the start and stop

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
37	P02.00	Start operation mode	0: direct start 1: firstly DC brake and then start 2: firstly tracking of rotate speed and the start	0	

#### 0: direct start: start with starting the frequency.

- 1: firstly DC brake and then start: firstly make DC brake based on the setting of P02.03 and P02.04; and then start with starting the frequency. It is applied to the place with small inertia load; and it may cause reverse rotation at the start.
- 2: firstly tracking of rotate speed and the start: AC frequency vector inverter makes speed identification on the motor which is rotating; and it directly tracks the start for the identified frequency; during the start process, the current voltage is smooth without any crash.

38	P02.01	Launch the start frequency	0.00~10.00Hz	0.50Hz	<b>♦</b>
39	P02.02	Start storage time of the frequency	0.0~50.0s	0.0s	<b>♦</b>

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
1		,	s start via starting frequency(Po	/	

AC frequency vector inverter begins its start via starting frequency(P02.01) and accelerate to the targeted frequency based on the acceleration time set after it starts the storage time of the frequency; if targeted frequency is smaller than the start frequency, AC frequency vector inverter will be at a holding state. And the value for the start frequency is not limited by the lower limiting frequency.

40	P02.03	Start front brake current	0.0~150.0%	0.0%	<b>♦</b>
41	P02.04	Start front brake time	0.0~50.0s	0.0s	$\Diamond$

P02.03 Value of DC current for starting DC brake is the percentage for rated current of AC frequency vector inverter.

P02.04 Duration for DC current. If the DC braking time is set to 0, then DC braking is invalid. The bigger the current of DCC braking, the stronger the braking force.

42	P02.05	la	0: Slowing down and stopping	0	$\Diamond$
			1: Random parking		

- 0: Slowing down and stopping: after the halt inverter is valid, AC frequency vector inverter reduces the output frequency according to the deceleration method and deceleration time defined; and the machine stops when the frequency is 0.
- 1: Random parking: after the halt inverter is valid, AC frequency vector inverter stops the output instantly. The load stops freely based on mechanical inertia.

43	P02.06	Start frequency for halt brake	0.00~P01.07 (Maximum frequency)	0.00Hz	<b>♦</b>
44	P02.07	Waiting time for halt brake	0.0~50.0s	0.0s	<b>♦</b>
45	P02.08	DC braking current of halt	0.0~150.0%	0.0%	<b>♦</b>
46	P02.09	DC braking time of halt	0.0~50.0s	0.0s	$\Diamond$

Start frequency for braking of halt: during the halt process of deceleration, when this frequency is reached, DC braking of the halt starts. Start frequency for the braking of halt is 0, then the DC braking is invalid; and the AC frequency vector inverter stops the machine based on the deceleration time set.

Waiting time for halt brake: before the DC brake of the halt, AC frequency vector inverter blocks the output; it will start DC brake after this time delay, which is used to prevent over current fault caused by DC brake which is started with high speed.

DC braking current of halt: it refers to the increased DC braking capacity. The bigger of this value, the bigger the torque of the braking torque.

DC braking time of halt: it refers to the time for the duration of DC braking capacity. It is shown as Chart 6-4.

47	P02.10	Dead time for forward and reverse rotation	0.0~3600.0s	0.0s	<b>♦</b>
----	--------	--	-------------	------	----------

Describing LED/OLED Factory setting No. Code Setting range Change Keyboard display Set the transient time at zero frequency of the output during the forward and reverse rotation of AC frequency vector inverter. It is shown as chart 6-5: Output frequency(Hz) Time t Dead time True Story Output voltage(V) Time t DC braking Reversion Starting DC Braking time Brake waiting ti

Chart 6-4 sketch map of DC braking reverse rotation

Chart 6-5 Sketch map for dead time of forward and

48	P02.11	Selection for the protection of terminal with electricity	0: Run command of the terminal is invalid when it is electrified 1: Run command of the terminal is valid when it is electrified	0	<b>♦</b>
----	--------	---	---	---	----------

When the channel of operation inverter is the terminal control, the system will automatically detect the state of the running terminal during the electrifying process of AC frequency vector inverter.

0: Run command of the terminal is invalid when it is electrified. AC frequency vector inverter won't operate even if it detects the command terminal is valid during the electrifying process of AC frequency vector inverter; and the system will be at a state of running protection; and AC frequency vector inverter will operate only after this terminal of run command is canceled and then use this terminal.

1: Run command of the terminal is valid when it is electrified. Namely, using the electrifying process of AC frequency vector inverter, if it detects the command terminal is valid, the system will automatically start the operation of AC frequency vector inverter after the initialization.

Notice: the user must choose this function carefully because it may cause serious consequence.

49	P02.12	Reservation			<b>♦</b>
----	--------	-------------	--	--	----------

6-2-4.P03 group motor parameter group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
50	P03.00	Type of AC frequency vector inverter	0:G type (load type of constant torque) 1:P type (load type of fan and pump)	Type setting	

0: It is applied to the load of constant torque with assigned rated parameter

1: It is applied to the load of variable torque with assigned rated parameter.

Notice: the user can set the parameters in this group for changing the type and realizing the integration of G/P. AC frequency vector inverter with 220V is only for G type.

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
51	P03.01	Rated power of motor	0.4~900.0Kw	Type setting	
52	P03.02	Rated frequency of motor	0.01Hz~P01.07(maximum frequency)	50.00Hz	
53	P03.03	Rated rotate speed of motor	0∼36000rPm	Type setting	
54	P03.04	Rated voltage of motor	0∼460V Type setting		
55	P03.05	Rated current of motor	0.1~2000.0A	Type setting	

Notice: please make the setting based on the nameplate parameter of the motor. Excellent control performance of vector control requires accurate motor parameter.

AC frequency vector inverter provides function for self-study of parameter. Accurate self-study of parameter comes from correct input for the nameplate parameter of the motor.

Please guarantee the match between AC frequency vector inverter and motor in order to guarantee the control performance; if their difference is very obvious, the control performance of AC frequency vector inverter will obviously reduce.

Notice: resetting rated power (P03.01) of the motor will initialize motor parameter of P03.06~P03.10.

56	P03.06	Stator resistor of motor	0.001~65.535Ω	Type setting	<b>\$</b>
57	P03.07	Rotor resistance of motor	$0.001{\sim}65.535\Omega$	Type setting	<b>\$</b>
58	P03.08	Stator and rotor inductance of motor	0.1∼6553.5mH	Type setting	<b>\$</b>
59	P03.09	Mutual inductance for stator and rotor of motor	0.1∼6553.5mH	Type setting	<b>♦</b>
60	P03.10	No-load current of the motor	0.01~655.35A	Type setting	<b>\$</b>

After normal self-study of motor parameter, setting value of  $P03.06 \sim P03.10$  will automatically update. These parameters are basic parameters for vector control with high performance; and they have direct effect on the performance of the control.

61	P03.11		0: No operation 1: Comprehensive self-study of parameter 2: Static self-study of parameter	0	
----	--------	--	---	---	--

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

0: No operation.

1: Self-study of rotate parameter: nameplate parameter—of the motor ( $P03.01 \sim P03.05$ ) must be input correctly before self-study of motor parameter; and separate the motor with the load and make the motor have a static and unloaded state, or the result for self-study of motor parameter may be wrong.

Before self-study of motor parameter, acceleration and deceleration time (P01.11, P01.12) should be set properly according to the inertia of the motor; or during the self-study period of motor parameter will have over current and overvoltage fault.

Set P03.11 as 1 and the press row LED shows TUN- and flicks. Press to start the self-study of parameter; now it shows TUNED and TUNEI; and then the motor begins to operation; and RUN/TUNE flicks. After the self-study of parameter, it shows returning to the interface of halt state. When TUN- flicks, press to exit the state of self-study.

During the self-study period, can be pressed to terminate the operation for self-study of parameter.

Notice: the start and stop for self-study of parameter can be only controlled by the keyboard; after the self-study of parameter, this function will automatically reset to 0.

Static self-study of parameter: during the period for the static self-study of parameter, it is unnecessary to separate the motor with the load;


And make the motor have a static and unloaded state, or the result for self-study of motor parameter may be wrong. Before self-study of motor parameter, nameplate parameter (P03.01~P03.05) of the motor must be input correctly; rotator resistance of the motor can be detected after the self-study. However, the mutual inductance and noload current can't be detected and the user can input corresponding value depending on their experience.

6-2-5.P04 group parameter of vector control

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
62	P04.00	Proportional gain of speed ring 1	0~100	20	<b>\$</b>
63	P04.01	Integral time of speed ring 1	0.01~10.00s	0.50s	$\Diamond$
64	P04.02	Low frequency of low switch	0.00Hz~P04.05	5.00Hz	<b>♦</b>
65	P04.03	Proportional gain of speed ring 2	0~100	25	<b>\$</b>
66	P04.04	Integral time of speed ring 2	0.01~10.00s	1.00	<b>\$</b>
67	P04.05	High frequency of low switch	P04.02~ P01.07(maximum frequency)	10.00Hz	<b>\$</b>

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

The above parameters can be only applied to vector control mode. Below switching frequency 1 (P04.02), parameter of speed loop is P04.00 and P04.01; above switching frequency 2 (P04.05), parameter of speed ring PI is P04.03 and P04.04; among them, PI parameter can be obtained via the change of two parameter lines; it is shown as the following chart:

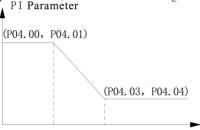

P04. 02 P04. 05 Output frequency(Hz)

Chart 6-6 Sketch map for parameter of PI

Dynamic response of vector control can be adjusted via setting the proportionality coefficient and integral time of speed regulator. Dynamic response of speed ring can be strengthened via increasing proportional gain and reducing the integral time; however, too large proportional gain or too small integral time will easily cause the system vibration and overstrike. Too small proportional gain can also cause the vibration of stabilized system; what is worse, it may have speed offset.

Parameter for speed loop is closed with the inertia of the system; and it should be adjusted based on default PI aiming at different load features to meet the requirements of difference places.

68	P04.06	Compensation factor of slippage	f VC	50%~200%	100%	<b>♦</b>
----	--------	---------------------------------	------	----------	------	----------

Compensation factor of slippage is used for adjusting slippage frequency of the vector control and improving the accuracy for the speed control of the system; proper adjusting of this parameter can effectively restrain the offset of the speed.

69 P04.07 Setting for the upper limit of the torque	0.0~200.0%( rated current of AC frequency vector inverter)	150.0%	<b>♦</b>
---	---	--------	----------

Set 100.0% to correspond with the rated output current of AC frequency vector inverter

pump.


6-2-6.P05 group V/F control parameter

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
70	P05.00	Setting of V/F curve	0: V/F curve of line 1:V/F curve of multipoint 2:1. V/F curve for drooping torque of 2 power 3:1. V/F curve for drooping torque of 4 power 4:1. V/F curve for drooping torque of 6 power 5:1. V/F curve for drooping torque of 8 power 6:2 V/F curve for drooping torque of 0 power	0	

When PO5.00=0, V/F curve of line is suitable for the load of common constant torque.

When PO5.00=1, curve defined by the user is applied to the load for constant torque of subsections.


When PO5.00=2~5, curve with 1.2 power and 1.8 power is applied to liquid load of other mediums. When PO5.00=6, V/F curve with 2.0 power is appropriate for centrifugal load such as fan and

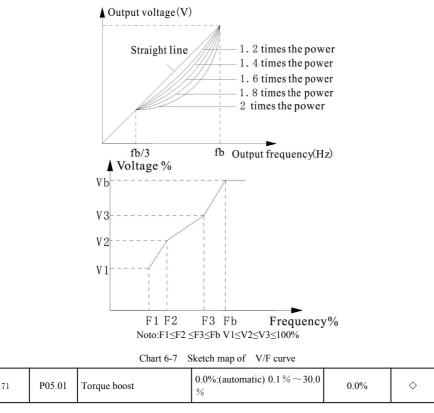

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
72	P05.02	Deadline of torque boost	$0.0\% \sim 50.0\%$ (rated frequency of relative motor)	20.0%	

Torque boost is mainly used below cut-off frequency (P05.02) and V/F curve after updating is shown as following; and the torque boost can improve torque feature with low frequency of V/F. the torque capacity should be chosen properly based on the load; the boost can be increased for large load; however, the boost value can't be too big, if the torque boost is too big, the motor will operate with over excitation, output current of AC frequency vector inverter will increase, motor heating will increase and the efficiency will reduce.

When the setting of torque boost is 0.0%, AC frequency vector inverter has automatic torque boost. Cut-off point of the torque boost: under such a frequency point, the torque boost is effective; and the torque boost will be invalid exceeding such a frequency set.

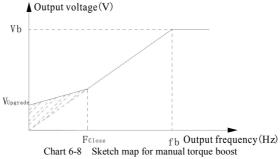

73	P05.03	Limit for compensation of V/F slippage	0.0~200.0%	0.0%	<b>♦</b>
----	--------	--	------------	------	----------

The setting of this parameter can compensate change of motor speed caused by load at V/F control and improve the hardness of mechanical properties. And such a value should be set as the rated slip frequency of the motor; the calculation of rated slip frequency is as follow:

P05.03=FB-n\*p/60

In the formula: FB is rated frequency of the motor and its corresponding function code is P03.02; n is motor norm speed and its corresponding function code is; and P is pole pair of the motor.

74	P05.04	Threshold value for low frequency of restricting vibration	0~500	5	<b>\langle</b>
75	P05.05	Threshold value for high frequency of restricting vibration	0~500	100	<b>♦</b>

However, most motors can easily have current shock when they operate in some frequency sections; the slight cause caused by this is unstable operation of the motor, or even the over current of AC frequency vector inverter severely. When P05.08=0, enabling restricts the vibration; when the setting of P05.04 and P05.05 is too small, the effect on restricting the vibration is very obvious; when the setting is too big, the effect on restricting the vibration is very weak.

76	P05.06	Clipping value of restricting vibration	0~10000	5000	<b>♦</b>
----	--------	---	---------	------	----------

Boost value for voltage of restricting vibration can be limited via setting P05.06.

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
77	P05.07	Demarcation frequency for low and high frequency of restricting vibration	$0.00 { m Hz} \sim { m P01.07(maximum\ frequency)}$	12.50Hz	<b>\$</b>
		P05.07 is the cut-off point	t for function code: P05.04 and P	05.05.	
78	P05.08	Restrict vibration	0: restricting vibration is valid 1: restricting vibration is invalid	1	<b>&lt;</b>

#### 0: Restricting vibration is valid

1: Restricting vibration is invalid. Function of restricting vibration is for VF control; common motor regularly has current shock for the no-load or light load operation, which can cause the abnormal operation of the motor; what is worse, it can also cause the over current of AC frequency vector inverter. When P05.08=0, enabling restricts the vibration; and AC frequency vector inverter will control the vibration of the motor appeared based on the parameter in P05.04~P05.07 function group.

79	P05.09	V/F frequency point 1	0.00HZ~P05.11	0.00HZ	
80	P05.10	V/F voltage point 1	0.0~100.0%	0.0%	
81	P05.11	V/F frequency point 2	P5.09~P05.13	0.00HZ	
82	P05.12	V/F voltage point 2	0.0~100.0%	0.0%	
83	P05.13	V/F frequency point 3	P05.11~P03.02	0.00HZ	
84	P05.14	V/F voltage point 3	0.0~100.0%	0.0%	
85	P05.15	Selection for energy- saving operation	0: Failure to actuate 1: Automatic energy-saving operation	0	

During the process of no-load or light load operation, the motor can properly adjust output voltage to each the aim of automatic energy-saving via detecting the load current.

Notice: this function is particularly effective for load of fan and pump.

The function code in this group is only valid for V/F control (P01.00=0).

## 6-2-7.P06 group input terminal group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
86	P06.00	Function selection of DI1 terminal	0: No function 1: Forward running 2: Reverse run 3: Three-wire control operation control 4: Forward JOG 5: Reverse JOG 6: Random parking	1	
87	P06.01	Function selection of DI2 terminal		2	
88	P06.02	Function selection of DI3 terminal		4	
89	P06.03	Function selection of DI4 terminal	7: Fault resetting 8: Input of external fault	0	

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
			9: UP for frequency setting 10: DOWN for frequency setting 11: Removal for UP and DOWN of frequency setting 12: Terminal of multiple speed 1 13: Terminal of multiple speed 2 14: Terminal of multiple speed 3 15: Terminal of multiple speed 4 16: Temporary stop of PID control 17: Temporary stop of pendulous frequency (stop at current frequency) 18: Resetting of pendulous frequency (return to central frequency) 19: Prohibition of acceleration and deceleration 20: Prohibition of torque control 21: Temporary removal for UP and DOWN setting of frequency 22: DC brake of halt 23: Choice for terminal of acceleration and deceleration time 1 24: Choice for terminal of acceleration and deceleration time 2		
90	P06.04	Function selection of DI5 terminal		0	
91	P06.05	Function selection of DI6 terminal		0	

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	
-----	------	---	---------------	-----------------	--------	--

This parameter is used to set the function corresponded multifunctional input terminal of the number.

- 0: No function
- 1: Forward running (FWD)
- 2: Reverse run (REV): when the running inverter is the terminal control, the run command of AC frequency vector inverter is preset by the above terminal function.
- 3: Three-wire control operation control: see the inverter of Three-wire control function code in P06.07 for the input terminal of three-wire control.
- 4: Forward JOG:
- 5: Reverse JOG: see the inverter of P09.06~P09.08 for specific JOG frequency and deceleration time.
- 6: Random parking: after the command is in effect, AC frequency vector inverter will block the output at once and the motor won't be limited to the control of AC frequency vector inverter during its halt process; and this method is suggested for load with large inertia and without any requirement on the halt time; and this method has the same implication with random parking introduced in P02.05.
- 7: Fault resetting: resetting function of external fault is used for the resetting of remote fault and it has the same function of
- 8: Input of external fault: after the effectiveness of this signal, AC frequency vector inverter reports it to the opening of external fault (EF) and stops the machine.
- 9: UP for frequency setting
- 10: DOWN for frequency setting
- 11: Removal for UP and DOWN of frequency setting: three functions mentioned above are mainly used for changing given frequency via using external terminal; and UP is the inverter of increasing while UP is the inverter of decreasing; resetting for UP and DOWN of the frequency is used to reset the frequency value set via increasing+ of clockwise rotation and decreasing- of counterclockwise rotation; and it can make the given frequency recover to the frequency preset by the inverter channel of the frequency.
- 12, 13, 14 and 15: 1∼4 terminal of multiple speed can realize the setting for speed of 16 sections. Notice: 1 at the multiple speed terminal is a low post and 4 at the multiple speed terminal is a high poset.

multistage	multistage	multistage	multistage
speed 4	speed 3	speed 2	speed 1
BIT3	BIT2	BIT1	BIT0

- 16: Temporary stop of PID control: PID is invalid temporarily and AC frequency vector inverter maintains the current frequency output.
- 17: Temporary stop of pendulous frequency: temporary stop of AC frequency vector inverter, after the withdrawal of current output and function, it will begin the operation of pendulous frequency with current frequency.
- 18: Resetting of pendulous frequency: setting frequency of AC frequency vector inverter returns to central frequency.
- 19: Prohibition of acceleration and deceleration: protect that AC frequency vector inverter is not affected by external signal (except the halt command) and maintains the current output frequency.
- 20: Prohibition of torque control: AC frequency vector inverter changes from the control model of torque to the control mode of the speed.
- 21: Temporary removal for UP and DOWN setting of frequency: when the terminal closes, the frequency value set via increasing+ of clockwise rotation and decreasing- of counterclockwise rotation can be removed; and it can make the given frequency recover to the frequency preset by the inverter channel of the frequency. When the terminal breaks, it will return to the frequency value after the setting for UP and DOWN of the frequency.
- 22: DC brake of halt: during the process of deceleration halt, when the terminal closes, it will make AC frequency vector inverter make brake immediately; and working condition of the braking can be decided among P02.07~P02.09
- 23: Choice for terminal of acceleration and deceleration time 1
  - 24: Choice for terminal of acceleration and deceleration time 2

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
92	P06.06	Filtering times of switching value	1~10	5	$\Diamond$

Set filtering time for the sampling of DI1 ~DI4 terminals. This parameter should be increased under the condition of serious interference to prevent fault operation.

93	P06.07	Operation mode of terminal control	0: Double-line control model 1 1: Double-line control model 2 2: Three-line control model 1 3: Three-line control model 2	0	
----	--------	------------------------------------	---	---	--

This parameter defines four different methods for controlling the operation of AC frequency vector inverter by means of external terminal.

0: Control like two lines: Enabling and the direction unifies. And this code is a code with two lines which is used most common. Defined terminal command of FWD and REV decides the forward and reverse rotation of the motor. (as chart6-9)

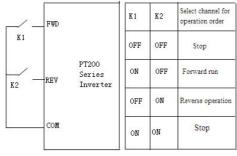


Chart 6-9 control like two lines (enabling and the direction unifies)

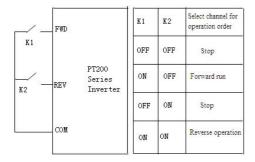


chart 6-10 control like two lines (enabling is separated from the direction)

- 1: Double-line control model separates the energy and direction. The defined FWD is enabling terminal. The defined REV status has to confirm the direction (Figure 6-10).
  - 2: Three-line control model 1. DIn is enabling terminal in this model; the operation command is

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	١
-----	------	---	---------------	-----------------	--------	---

produced by FWD and direction is controlled by REV. DIn is a closed input (Figure 6-11).

Once K is off, FWD and REV control is invalid and frequency converter stops;

Once K is on, FWD and REV control is valid;

Once SB1 is pressed, FWD terminal rises which means operation command;

Once K1 is off, REV terminal is off which means forward rotation command;

Once K1 is on, REV terminal is on which means Reverse rotation command;


K: Enabling switch

K1: Control switch of positive and reverse rotation

SB1: Operation button

DIn is a multi-functional input terminal with No. 3 function: "three-line operation control"

3: Three-line control model 2. DIn is enabling terminal in this model; the operation command is produced by SB1 or SB3 and direction is controlled by them at the same time. Stop command is controlled by switch K (Figure 6-12).

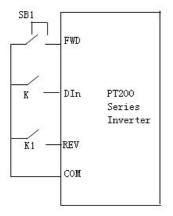

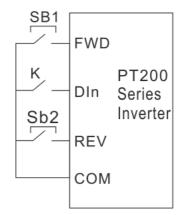


Figure 6-11 Three-line control model 1

Figure 6-12 Three-line control model 2

Once K is off, FWD and REV control is invalid and frequency converter stops;

Once K is on, FWD and REV control is valid:

Once SB1 is pressed, FWD terminal rises which means positive rotation command;

Once SB2 is pressed, FWD terminal rises which means reverse rotation command;

K: Enabling switch

SB1: Operation button of positive rotation

SB2: Operation button of reverse rotation

Prompt: As for double-line operation model, once FWD/REV terminal is valid, other source sends out stop command and stops the frequency converter, the frequency converter is not operated upon vanishing of stop command even through control terminal FWD/REV remains valid; FWD/REV is triggered for the second time to operate the frequency converter.

Increasing + via clockwise rotation of encoder and terminal or decreasing via counterclockwise rotation of encoder and terminal 0.01~50.00Hz/s 0.50Hz/s \$\infty\$	14	P06.08	encoder and terminal or decreasing via counterclockwise rotation	0.01~50.00Hz/s	0.50Hz/s	<b>♦</b>	
--	----	--------	--	----------------	----------	----------	--

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

Use increasing + via clockwise rotation of encoder or decreasing via counterclockwise rotation of encoder and terminal to adjust the change rate at the setting frequency.

95	P06.09	Low limiting value of AI1	0.00V~10.00V	0.00V	$\Diamond$
96	P06.10	Low limits of AI1 corresponds with the setting	-100.0%~100.0%	0.0%	<b>♦</b>
97	P06.11	Upper limiting value of AI1	0.00V~10.00V	10.00V	<b>\langle</b>
98	P06.12	Upper limits of AI1 corresponds with the setting	-100.0%~100.0%	100.0%	<b>\langle</b>
99	P06.13	Filtering time of AI1 input	0.00s~10.00s	0.10s	<b>\langle</b>

The above function defines the corresponding relationship between simulated input voltage and simulated input; extra part will be calculated based on maximum input or minim input when the simulated voltage exceeds the scope of maximum input or minimal input.

When the simulated input is current input, what voltage corresponds with 0mA~20mA is 0V~10V.

Nominal value corresponded by 100.0% set by simulation at different application occasions will different; please see the inverter of every application part for the detail.

The following chart explains the conditions of several suppositions

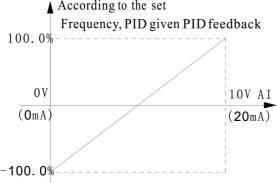


Chart 6-13 corresponding relationship between simulated presetting and presetting capacity Corresponding with setting frequency, PID presetting and PID feedback.

Filtering time of AII input: adjust sensitivity of analog input; proper increasing of this value can enhance the ability of analog on anti-interference, but it will reduce the sensitivity of the analog input.

100	P06.14	Low limiting value of AI2	0.00V~10.00V	0.00V	$\Diamond$
101	P06.15	Low limits of AI2 corresponds with the setting	-100.0%~100.0%	0.0%	<b>♦</b>
102	P06.16	Upper limiting value of	0.00V~10.00V	10.00V	<b>♦</b>
103	P06.17 Upper limits of AI2 corresponds with the setting		-100.0%~100.0%	100.0%	<b>♦</b>

No.	Code	Describing LED/OLED Keyboard display	Setting range Fact		Factory settin	g Change
104	P06.18	Filtering time of AI2 input	0.00s~10.00s		0.10s	$\Diamond$
105	P06.19	Gain for simulated input 1 K1	0.00~300.00		100.00	<b>\$</b>
106	P06.20	Gain for simulated input 2 K2	0.00~300.00		100.00	<b>\$</b>

Function of AI2 is similar to the setting method of AI1.

Analog AI2 can support the input with  $0\sim10\text{V}$  or  $0\sim20\text{mA}$ ; when AI2 chooses the input with  $0\sim$  mA, voltage corresponding with 20mA is 10V.

There are 5 (below) multifunctional input terminals of the number and 2 input terminals of analog in the standard unit of PT200 series AC frequency vector inverter.

6-2-8.P07group human-computer interface group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
107	P07.00	User password	0~65535	0	<b>♦</b>

When the setting is any number except 0, the password protection takes effect. 00000: remove the user password value set before and make the protection function of password effective; and resetting to factory can also remove the password.

After the user password is set and effective, the user can't enter into the parameter menu if the user password is wrong; the user can view and change the parameters only by inputting correct user password. Please remember the user password set carefully.

Exit the editing state of function code, then the password protection will take effect in one minute; press to enter into the editing state of function code after the password takes effect, it will show "0.0.0.0.0."; the operator must input the password correctly, or the operator can't enter.

108	P07.01	OLED shows language choice	0: Chinese 1:English	0	<b>♦</b>
-----	--------	----------------------------	-------------------------	---	----------

0:Chinese

1:ENGLISH


The above function is only effective for outer keyboard of OLED. It is used for choose languages of liquid crystal display.

109	P07.02	Copy of function parameter	0: No operation 1: Function parameter of this machine is delivered to OLED keyboard 2: Download function parameter of OLED keyboard onto this machine Notice: the parameter automatically returns to 0 after 1-2 operations have been finished	0	
-----	--------	----------------------------	--	---	--

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change			
built-in t 1: Functio 2: Downlo	This function code decides the method of parameter copy. And copy function of the parameter is built-in the outer keyboard of OLED.  1: Function parameter of this machine is delivered to OLED keyboard  2: Download function parameter of OLED keyboard onto this machine  Notice: the parameter automatically returns to 0 after operations of parameter copy have been finished.							
110	0							
1	essing manuferameter setti	is the multifulctional	key; the function of pressing	can be det	fined via			
1. Sv frequency 1. No power of A operation P01.13 wi 2. setting counterclo	vitch of forvinverter.  otice: the sward frequency based on the fill be remented for removin backwise rotal	e operation direction set by abered when the power of a g increasing + via cloc ttion of encoder. And press	e rotation set by won't be the rit is electrified again, AC frequency parameter P01.13. operation directly AC frequency vector inverter is of elekwise rotation of encoder or decrease.	switch for the direction set by paraffection set by paraffection yields are the set of t	hen the erter will meter			
P07.04 Function choice for halt  of  O: it is only effective for panel control  1: it is effective for panel control and terminal control  2: it is effective for panel control and communication control  3: it is effective for all control modes								
This function code defines effective choice for halt function of  0: it is only effective for panel control  1: it is effective for panel control and terminal control  2: it is effective for panel control and communication control  3: it is effective for all control modes    STOP   RESET								

_napter 6		function parameter			
No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
112	P07.05	Choice for parameter showed by operation state	0~0x7FFF BIT0: operation frequency BIT1: setting frequency BIT2: bus bar voltage BIT3: output voltage BIT4:output current BIT5:rotate speed of operation BIT6: output power BIT7: output torque BIT8:given value of PID BIT9: feedback value of PID BIT10: state of input terminal BIT11: state of output terminal BIT112: value of analog AI1	0x3FF	<b>♦</b>
			BIT13: value of analog AI2 BIT14: Current section of multiple speed BIT15: Setting value of torque		
	e operation inction code	state, parameter of PT20 namely a binary number	Oseries AC frequency vector invewith 16 bits.	rter only shows t	he effect
113	P07.06	Choice for parameter showed by halt state	1~0x1FF BIT0: setting frequency BIT1: busbar voltage BIT2: state of input terminal BIT3: state of output terminal BIT4: given value of PID BIT5: feedback value of PID BIT5: feedback value of PID BIT6: value of analog AI1 BIT7: value of analog AI2 BIT8: Current section of multiple speed BIT9: Setting value of torque BIT10∼ BIT15: Reservation	0xFF	<b>♦</b>
Unde this functi		ate, parameter of PT200se	ries AC frequency vector inverter	only shows the e	effect of
114	P07.07	First two fault types	0~24		•
115	P07.08	The first two fault types	0: Fault free 1: Protection for U phase of		•
116	P07.09	Current fault type	inverter unit (E.oUP) 2: Protection for V phase of inverter unit (E.oUP) 3:Protection for W phase of inverter unit (E.oUP) 4: Over current of acceleration (E.oC1) 5: Over current of deceleration (E.oC2) 6: Over current of constant speed (E.oC3) 7: Overvoltage of acceleration		-

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
	Record recent fault types of AC frequency vector		(E.oU1) 8: Overvoltage of deceleration (E,oU2) 9:Overvoltage of constant speed (E.oU3) 10:undervoltage fault of DC bus (E.LU) 11:Motor overload (E.oL1) 12: Overload of inverter (E.oL2) 13: Default phase at output side (E.PHI) 14: Default phase at input side (E.PHO) 15:Overheating of rectification module (E.oH1) 16: Fault for overheating of inverter module (E.oH2) 17: External fault (E.SET) 18:Communication fault (E.CE) 19:Detection fault of current (E.ItE) 20:fault for self-study of motor (E.tE) 21: operation fault of EEPROM (E.EEP) 22: Fault for break line of PID feedback (E.PId) 23:Brake unit fault (E.bCE) 24:Reservation (END)		
1			or inverter: 0: Fault free; inspection and removal for detail		
117	P07.10	Operation frequency of current fault		0.00Hz	•
118	P07.11	Output current of current fault		0.0A	•
119	P07.12	Bus bar voltage of current fault		0.0V	
120	State for input terminal of current fault			0	•
121	P07.14	State for output terminal of current fault		0	

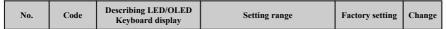

State for input terminal of current is a decimal number; state order for all digital input terminal when it shows the latest fault is:

BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
DI6	DI5	DI4	DI3	DI2	DI1

Current input terminal is ON and its corresponding bit is 1;OFF is 0; and the state for digital input signa can be known via this value.

State for output terminal of current is a decimal number; state order for all digital input terminal when it hows the latest fault is:

BIT2 BIT1 BIT0
OUT SPA SPB

Current output terminal is ON and its corresponding bit is 1; OFF is 0; and the state for digital output ignal can be known via this value.

6-2-9.P08 group output terminal group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
122	P08.00	Output choice for numerical magnitude of SPA	0: No output 1: Motor is at the state of forward rotation	1	<b>\$</b>
123	P08.01	Output choice for numerical magnitude of SPB	<ul><li>2: Motor is at the state of reverse rotation</li><li>3: Fault output</li><li>4: Level detection of</li></ul>	1	<b>\$</b>
124	P08.02	Output choice of relay	frequency and PDT output 5: Reach Frequency 6: Zero-speed operation 7: Reach frequency of upper limit 8: Reach frequency of lower limit 9:frequency of lower limit setting reached 10:FDT Reached 11:Inverter ready signal 11:auxiliary motor1 start 13:auxiliary motor2 start	3	<b>♦</b>

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

- 0: No output
- 1. Forward rotation of AC frequency vector inverter. If there is frequency is output when the AC frequency vector inverter rotates forward, then ON signal will be output.
- 2. Reverse rotation of AC frequency vector inverter. If there is frequency is output when the AC frequency vector inverter rotates reversely, then ON signal will be output.
- 3. Fault output: when AC frequency vector inverter has fault, the ON signal will be output. 4. Frequency level detects the reach of PDT and please refers to the detailed inverter for function code of P09.17 and P09.18
- 5. Please refer to the detailed inverter for function code of P09.17 and P09.18 for the reach of frequency.
- 6. During the operation of zero-speed, when the output frequency of AC frequency vector inverter and presetting frequency is zero at the same time, the ON signal will be output.
- 7. Reach frequency of upper limit: when the operation frequency reaches the upper-limiting frequency, the ON signal will be output.
- 8. Reach frequency of lower limit: when the operation frequency reaches the lower-limiting frequency, the ON signal will be output..
- 9:frequency of lower limit setting reached

10:FDT Reached

- 11:Inverter ready signal
- 12:auxiliary motor1 start
- 13:auxiliary motor2 start

125	P08.03	Output choice of AO1	0: operation frequency 1: setting frequency 2: rotate speed of operation 3: output current 4: output voltage 5: output power 6: output torque 7: Input value of analog AI1 8: Input value of analog AI2 9~10: Reservation	0	<b>♦</b>
-----	--------	----------------------	---	---	----------

Standard output of simulated output is  $0\sim20$ mA( or  $0\sim10$ V) and current and voltage output can be chosen via jumping line JP4. the scope for corresponding capacity represented by it is shown as following:

126	P08.04	Lower limit for output of AO1	0.0%~100.0%	0.0%	<b>\$</b>
127	P08.05	Lower limit corresponds with output of AO1	0.00V ~10.00V	0.00V	<b>♦</b>
128	P08.06	Upper limit for output of AO1	0.0%~100.0%	100.0%	<b>\$</b>
129	P08.07	Upper limit corresponds with output of AO1	0.00V ~10.00V	10.00V	<b>\$</b>

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

The above function defines the corresponding relationship between simulated input voltage and simulated input; extra part will be calculated based on maximum input or minima input when the simulated voltage exceeds the scope of maximum input or minimal input.

When the simulated output is current output, what voltage corresponds with 1mA is 0.5V.

Simulated output capacity corresponded by 100.0% of the output value at different application occasion will be different; please see the inverter of every application part for the detail.

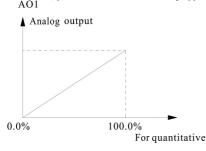


chart6-14 corresponding relation between fixed variable and analog output

130	P08.08	Output choice of AO2	0: operation frequency 1: setting frequency 2: rotate speed of operation 3: output current 4: output voltage 5: output power 6: output torque 7: Input value of analog AI1 8: Input value of analog AI2 9~10: Reservation	0	<b>♦</b>
131	P08.09	Lower limit for output of AO2	0.0%~100.0%	0.0%	<b>♦</b>
132	P08.10	Lower limit corresponds with output of AO2	0.00V ~10.00V	0.00V	<b>\$</b>
133	P08.11	Upper limit for output of AO2	0.0%~100.0%	100.0%	<b>\$</b>
134	P08.12	Upper limit corresponds with output of AO2	0.00V ~10.00V	10.00V	<b>\$</b>

There are one multifunctional output terminals of the number and one multifunctional output terminal of relay as well as a multifunctional output terminal of analog in the standard unit of PT200 series AC frequency vector inverter.

6-2-10.P09 group enhancement group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
135	P09.00	Acceleration time 2	0.1~3600.0s	Type setting	$\Diamond$

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
136	P09.01	Deceleration time 2	0.1~3600.0s	Type setting	<b>\$</b>
137	P09.02	Acceleration time 3	0.1~3600.0s	Type setting	<b>\$</b>
138	P09.03	Deceleration time 3	0.1~3600.0s	Type setting	<b>\$</b>
139	P09.04	Acceleration time 4	0.1~3600.0s	Type setting	<b>\langle</b>
140	P09.05	Deceleration time 4	0.1~3600.0s	Type setting	<b>\langle</b>

As for the acceleration and deceleration time, please choose P01.11 and P01.12 and the acceleration and deceleration time mentioned above; please refer to relative inverter of P01.11 and P01.12.

Acceleration and deceleration time 1 and acceleration and deceleration time 2, 3 and 4 can be switched via multifunctional input terminal of the number. Please see P06 group-input terminal group for detail.

141	P09.06	Operation frequency of JOG	0.00~P01.07(maximum frequency)	5.00Hz	<b>\$</b>
142	P09.07	Acceleration time of JOG operation	0.1~3600.0s	Type setting	<b>\$</b>
143	P09.08	Deceleration time of JOG operation	0.1~3600.0s	Type setting	<b>\$</b>

Define the presetting frequency and acceleration and deceleration time for the JOG operation. The start and stop method of JOG operation is: direct start and halt with deceleration.

Acceleration time of JOG refers to the time required by AC frequency vector inverter from 0Hz to maximum output power (P01.07)

Deceleration time of JOG refers to the time required by AC frequency vector inverter from maximum output power to 0Hz (P01.07)

144	P09.09	Hopping frequency	0.00~P01.07(maximum frequency)	0.00Hz	<b>♦</b>
145	P09.10	Range of hopping frequency	0.00~P01.07(maximum frequency)	0.00Hz	<b>\qquad</b>

When the frequency set is within the scope of hopping frequency, actual operation frequency will be the boundary of hopping frequency..

The setting of hopping frequency can make AC frequency vector inverter avoid mechanical resonance point of load. And this AC frequency vector inverter can set one hopping frequency point. If set all hopping frequency points to zero, then this function wouldn't take effect. Just as chart 6-15.

146	P09.11	Range of pendulous frequency	0.0~100.0%( relative setting frequency)	0.0%	<b>\$</b>
147	P09.12	Range of jumping frequency	0.0~50.0% (relative range of pendulous frequency)	0.0%	<b>\$</b>
148	P09.13	Rise time pendulous frequency	0.1~3600.0s	5.0s	<b>\$</b>
149	P09.14	Fall time pendulous frequency	0.1~3600.0s	5.0s	<b>\$</b>

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

Pendulous frequency is appropriate for industries such as textile and chemical fiber and occasions requiring traversing and winding function. As chart 6-16.

Function of pendulous frequency refers the output frequency of AC frequency vector inverter makes up and down swing centralizing the setting frequency; track of operation frequency at the timer shaft is shown by the following chart; among them, the swinging range is set by P09.11; when P09.11 is set to 0, namely the swing range is 0; then pendulous frequency doesn't take effect.

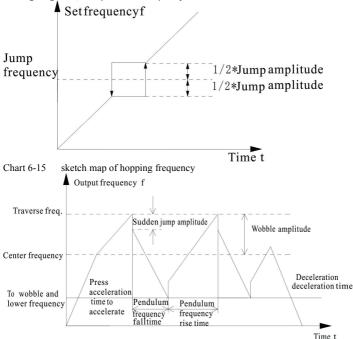


Chart 6-16 Sketch map for the operation of pendulous frequency

Range of pendulous frequency: operation frequency of pendulous frequency is limited to upper and lower limit frequency.

The swing range is relative to center frequency: swing range AW=center frequency\* swing range  $P09.11_{\circ}$ 

Jumping frequency=swing range AW×range of jumping frequency P09.12. Namely, when the pendulous frequency operates, the value corresponded by the jumping frequency to the swing range.

Rising time of pendulous frequency: the time required from the lowest point of pendulous frequency to the highest point of pendulous frequency.

Fall time of pendulous frequency: the time required from the highest point of pendulous frequency to the lowest point of pendulous frequency

150	P09.15	Times for automatic reset of the fault	0~3600	0	<b>\$</b>
151	P09.16	Setting for interval of automatic reset of the fault		1.0s	<b>&lt;</b>

### Chapter 6 Inverter of function parameter

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
152	P09.17	Detection value for level of FDT	$0.00 \sim P01.07$ (maximum frequency)	50.00Hz	<b>♦</b>

Times for automatic reset of the fault: when AC frequency vector inverter chooses automatic reset of the fault which can be used to set the times of automatic reset. When continuous reset of AC frequency vector inverter exceeds this value, then the fault of AC frequency vector inverter should await the opportune moment and require manual intervention.

Setting for interval of automatic reset of the fault: select the interval from the occurrence of the fault to the automatic reset.

153	P09.18	Detection value for hysteresis of FDT	0.0~100.0% (FDT level)	5.0%	<b>\$</b>
-----	--------	--	------------------------	------	-----------

When the output frequency exceeds certain setting frequency PDT level, indicator signal of the output and output frequency reduces to a lower frequency than PDT level (detection value for hysteresis of PDT level-PDT); and see chart6-17 for concrete wave form.

154	P09.19	Frequency reaches detection degree	0.0~100.0%(maximum frequency)	0.0%	<b>\$</b>
-----	--------	------------------------------------	-------------------------------	------	-----------

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change

When the output frequency of AC frequency vector inverter outputs pulse signal within the range of plus-minus detection width of the setting frequency; and see the following charts for detail:


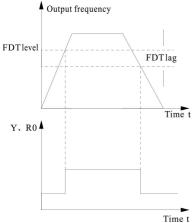


Chart6-17 Sketch map of FDT level

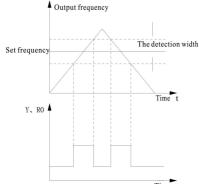

Time t
Chart 6-18 Sketch map for amplitude of frequency reaching the detection

155	P09.20	Voltage of brake valve	115.0~140.0% (voltage of standard bus) (380V series)	130.0%	$\Diamond$
			115.0~140.0% (voltage of standard bus) (220V series)	120.0%	

This function code is the voltage of initial bus for setting dynamic braking; proper adjusting for this value can effectively make brake for the load.

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
156	P09.21	Display coefficient of rotate speed	0.1~999.9% machinery rotate speed =120*operation frequency*P09.21/pole number	100.0%	<b>♦</b>

Machinery rotate speed =120\*operation frequency\*P09.21/pole number; this function code is used for correcting the error displayed by ruling of rotate speed and it has no effect on actual rotate speed.

6-2-11.P10 group PID control group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
157	P10.00	Selection for given power supply of PID	0:keyboard presetting (P10.01) 1: Presetting for simulated channel Al1 2: Presetting for simulated channel Al2 3: Presetting of remote communication 4: Presetting of multistep speed	0	<b>♦</b>

- 0: keyboard presetting (P10.01)
- 1: Presetting for simulated channel AI1
- 2: Presetting for simulated channel AI2
- 3: Presetting of remote communication
- 4: Presetting of multistep speed

When the frequency source selects PID, namely the selection of P01.03 is 5; the function in this group takes effect. And this parameter decides the given channel for target value of process PID.

Value for target setting of process PID is the relative value; and 100% set is corresponding with 100% for the feedback signal of the controlled system.

The system always makes calculation according to relative value ( $0 \sim 100.0\%$ ).

Notice: presetting of multistep speed can be achieved via the parameter in P10 group.

158	P10.01	Keyboard presets the PID presetting	0.0%~100.0%	0.0%	<b>♦</b>
-----	--------	-------------------------------------	-------------	------	----------

Select P10.00=0, namely the target source is the presetting of keyboard. And this parameter need resetting.

Base value of this parameter is the feedback variable of the system.

159	P10.02	Selection for feedback source of PID	0: Feedback for simulated channel AII 1: Feedback for simulated channel AI2 2: Feedback of AI1+AI2 3: Feedback of remote communication	0	<b>♦</b>
-----	--------	---	--	---	----------

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

- 0: Feedback for simulated channel AI1
- 1: Feedback for simulated channel AI2
- 2: Feedback of AI1+AI2
- 3: Feedback of remote communication

Select feedback channel of PID via this parameter.

Notice: the given channel can't be coincidence with the feedback channel; or PID can't be controlled effectively

160			0:PID output is positive 1:PID output is negative	0	<b>♦</b>
-----	--	--	--	---	----------

0: PID output is positive: when the feedback signal is bigger than the presetting of PID, output frequency of AC frequency vector inverter will reduce to make PID in balance.

1: PID output is negative: when the feedback signal is bigger than the presetting of PID, output frequency of AC frequency vector inverter will rise to make PID in balance.

161	P10.04	Proportional gain (Kp)	0.00~100.00	1.00	<b>&lt;</b>
162	P10.05	Integral time (Ti)	0.01~10.00s	0.10s	<b>\$</b>
163	P10.06	Derivative time (Td)	0.00~10.00s	0.00s	<b>\langle</b>

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	
-----	------	---	---------------	-----------------	--------	--

Proportional gain (Kp): decides the regulation strength of the whole PID regulator; the bigger P, the bigger the regulation strength. If the parameter is 100, it shows when the bias between the feedback variable and given variable of PID is 100%, the regulation range of PID regulator on the inverter of output frequency is maximum frequency (ignoring integral action and derivative action).

Integral time (Ti): decides the speed of integral regulation for the bias between the feedback variable and given variable of PID regulator; integral time refers when the bias between the feedback variable and given variable of PID is 100%, integral controller (ignoring integral action and derivative action) makes continuous regulation via this period and then the regulation variable reaches maximum frequency (P01.07). The shorter the integral time, the stronger the regulation strength.

Derivative time(Td): decide the strength for PID regulator to regulate the change rate of bias between the feedback variable and given variable of PID. Derivative time refers if the change of the feedback variable is 100% during this period, regulation variable of differential regulator is maximum frequency (P01.07) (ignoring integral action and derivative action). The longer the derivative time, the stronger the regulation strength. PID is a control method which is frequently used PID; every part of PID has different effect; the following is a brief introduction about its work principle and regulation method:

Proportional control (P): when there is deviation between the feedback and presetting, the output and deviation forms proportion able regulating variable; if the deviation is constant, then the regulating variable is also constant. Proportional regulation can quickly response to the change of feedback; however, the control without deviation can't be obtained only by means of proportional regulation. The bigger the proportional gain, the quicker the regulating speed of the system; if the proportional gain is too big, it will cause vibration. Adjusting method is to firstly set a very long time for the integral time and set derivative time to 0; use proportional regulation to make the system operate and then change the presetting; observe the stable deviation (offset); if the offset is at the change direction of the presetting (e.g. increase the presetting, the feedback variable is always smaller than the presetting after the stabilization of the system); then increase the proportional gain continuously; conversely, reduce proportional gain; repeat the above process until the offset is very small (it is difficult to have no offset).

Integral time (I): when there is deviation between the feedback and presetting, then regulating variable of output will increase continuously; if the deviation exists continuously, then the regulating variable increases continuously till there is no deviation; integral controller can effectively eliminate the offset. If the integral controller is too strong, it will cause repeated overstrike which can make the system unstable until the vibration appears. Characteristics for the vibration caused by strong vibration are that the feedback signal swings up and down the presetting; and its ranges increases gradually till vibration. Regulation for parameter of integral time is generally from big to small; and the integral time is regulated gradually and observes the effect of the system regulation until the stable speed of the system reaches the requirement.


Derivative time(D): when the deviation between the feedback and presetting changes, the output and change rate of deviation forms proportional regulating variable; this regulating variable is only related with the direction and size of the deviation change and it has nothing to do with the direction and size of the deviation. The effect of derivative time is to feedback when the signal changes and then makes regulation based on the change tendency; consequently, it can restrict the change of feedback signal. Please use the derivative regulator carefully because the derivative regulator can easily amplify the interference of the system, particularly, the interference with a higher change frequency.

164	P10.07	Sampling period (T)	0.01~100.00s	0.10s	$\Diamond$
165	P10.08	Deviation limit of PID control	0.0~100.0%	0.0%	<b>\$</b>

No.	Code Describing LED/OLED Keyboard display	Setting range	Factory setting	Change	
-----	---	---------------	-----------------	--------	--

Sampling period (T): it refers the sampling period for the feedback variable; and the regulator calculates once in every sampling period. The longer the sampling, the slower the response.

Limit for control deviation of PID: output value of PID system is corresponding with maximum deviation allowed by the given value of closed loop; just as the chart shows that PID regulator stops regulating in the deviation limit. Proper adjusting this function code can regulate the accuracy and stability of PID system.

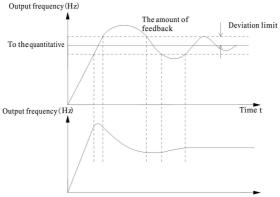


Time t Chart 6-19 corresponding relation between the deviation limit and the output frequency

166	P10.09	Detection value for break line of feedback	0.0~100.0%	0.0%	<b>\$</b>
167	P10.10	Detection time for break line of feedback	0.0~3600.0s	1.0s	<b>\$</b>

Detection value for breakline of feedback: what corresponds with this detection value is full range (100%); the system will always detect the feedback variable of PID; when the detection variable is smaller or equal to the detection value for the break line of feedback; the system begins to inspect the timing. When the detection time exceeds the detection time for the break line of feedback, the system will report the fault (E.PId) for break line of feedback.

PID control is a common method for the process control; it make proportional, integral and derivative calculation via the deviation between the feedback variable of controlled variable and signal of the targeted variable to adjust the output frequency of AC frequency vector inverter, form negative feedback system and make the controlled variable stabilize at the targeted variable; it is suitable for process control such as flow control, pressure control and temperature control. Framework for basic principle of the control is as follow:

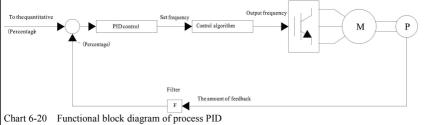

6-2-12.P11 group control group of multistep speed

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
168	P11.00	Multistep speed 0	-100.0~100.0%	6	$\Diamond$
169	P11.01	Multistep speed 1	-100.0~100.0%	12	<b>\langle</b>
170	P11.02	Multistep speed 2	-100.0~100.0%	18	$\Diamond$
171	P11.03	Multistep speed 3	-100.0~100.0%	24	$\Diamond$
172	P11.04	Multistep speed 4	-100.0~100.0%	30	$\Diamond$
173	P11.05	Multistep speed 5	-100.0~100.0%	36	$\Diamond$
174	P11.06	Multistep speed 6	-100.0~100.0%	42	$\Diamond$
175	P11.07	Multistep speed 7	-100.0~100.0%	48	<b>\langle</b>
176	P11.08	Multistep speed 8	-100.0~100.0%	54	$\Diamond$
177	P11.09	Multistep speed 9	-100.0~100.0%	60	$\Diamond$
178	P11.10	Multistep speed 10	-100.0~100.0%	66	$\Diamond$
179	P11.11	Multistep speed 11	-100.0~100.0%	72	$\Diamond$
180	P11.12	Multistep speed 12	-100.0~100.0%	78	$\Diamond$
181	P11.13	Multistep speed 13	-100.0~100.0%	84	<b>\langle</b>
182	P11.14	Multistep speed 14	-100.0~100.0%	90	<b>\langle</b>
183	P11.15	Multistep speed 15	-100.0~100.0%	100	<b>♦</b>

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

The start and halt channel for the operation of multistep speed is also determined by function code P01.03; chart for control process of multistep is shown in Chart 6-20. the relationship between DI1, DI2 and DI3 terminal and multistep speed is shown as the following table:

Relation between multistep speed and terminal of multistep speed termina termina terminal terminal of 1 of 1 of of multistep multiste multiste inverter setting Corresponding parameter multistep speed 4 p speed p speed speed 3 2 1 OFF P11.00 OFF OFF OFF inverter of multistep speed 0 OFF OFF OFF ON inverter of multistep P11.01 speed 1 OFF OFF ON OFF inverter of multistep P11.02 speed 2 OFF OFF ON ON inverter of multistep P11.03 speed 3 OFF ON OFF OFF inverter of multistep P11.04 speed 4 ON OFF OFF ON inverter of multistep P11.05 speed 5 OFF ON ON OFF inverter of multistep P11.06 speed 6 inverter of multistep OFF ON ON ON P11.07 speed 7 ON OFF OFF OFF inverter of multistep P11.08 speed 8 ON OFF OFF ON inverter of multistep P11.09 speed 9 ON OFF ON OFF inverter of multistep P11.10 speed 10 ON OFF ON ON inverter of multistep P11.11 speed 11 ON ON OFF OFF inverter of multistep P11 12 speed 12 ON ON OFF ON inverter of multistep P11 13 speed 13 ON ON ON OFF inverter of multistep P11.14 speed 14 ON ON ON ON inverter of multistep P11.15

speed 15

#### 6-2-13.P12 group communication parameter group

When the frequency source selects multistep speed, 100.0% for the function code of P11.00~P11.15 的 100.0% corresponds with maximum frequency P01.07.

Except the function of multistep speed, multistep inverter can also be used as the given source of PID to meet the switch requirement among different given values.

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
184	P12.00	Setting for Baud rate of communication	0:1200bps 1:2400bps 2:4800bps 3:9600bps 4:19200bps 5:38400bps	4	<b>♦</b>

This parameter is used to set the transmission rate of data between upper computer and AC frequency vector inverter. Notice: Baud rate of upper computer and AC frequency vector inverter must be accordant; or the communication can't be made. The bigger the Baud rate, the quicker the communication speed.

185	P12.01	Setting for bit check of data	0: Without verification (N, 8, 1) for RTU 1: Even parity check (E, 8, 1) for RTU 2: Odd parity check (O, 8, 1) for RTU 3: Without verification (N, 8, 2) for RTU 4: Even parity check (E, 8, 2) for RTU 5: Odd parity check (E, 8, 2) for RTU 6: Without verification (N, 7, 1)for ASCII 7: Even parity check (E, 7, 1)for ASCII 8: Odd parity check (O, 7, 1)for ASCII 9: Without verification (N, 7, 2)for ASCII 10: Even parity check (E, 7, 2)for ASCII 11: Odd parity check (E, 7, 2)for ASCII 12: Without verification (N, 8, 1)for ASCII 13: Even parity check (E, 8, 1)for ASCII 14: Odd parity check (E, 8, 1)for ASCII 15: Without verification (N, 8, 2)for ASCII 16: Even parity check (E, 8, 2)for ASCII 17: Odd parity check (E, 8, 2)for ASCII 17: Odd parity check (O, 8, 2)for ASCII	1	

Data format of upper computer and AC frequency vector inverter must be accordant, or the communication can't be made.

186	P12.02	Communication address of this method	$1\sim$ 247, 0 is the broadcast address	1	<b>♦</b>
-----	--------	--------------------------------------	---	---	----------

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
-----	------	---	---------------	-----------------	--------

When the host machine is writing frame and the setting for communication address of from machine is zero, namely, communication address of broadcast; all from machines on MODBUS will receive this frame, but the from machine makes no response. Notice, the address of from machine can't be set as 0.

Communication address of this machine is unique in the network, which is the base for realizing point-to-point communication between upper computer and AC frequency vector inverter

187	P12.03	Delay for communication response	0~200ms	5ms	<b>♦</b>
-----	--------	--	---------	-----	----------

Delay of response: it refers to the interval from the accomplishment for data acceptance of AC frequency vector inverter to sending response data to upper computer. If the delay of response is shorter than the processing time of the system, then the delay of response is subject to the processing time of the system; if the delay of response is longer than the processing time of the system, then it will prolong the waiting after the system disposes the data until it is time for the delay of response; and then can the data be sent to upper computer.

188	P12.04	Delayed fault time of communication	0.0 (invalid), 0.1~100.0s	0.0s	<b>\$</b>	
-----	--------	-------------------------------------	---------------------------	------	-----------	--

When the setting of this function code is 0.0s, parameter for timeout of communication is invalid When this function code is set to an effective value, if the interval time between a communication and next communication exceeds timeout of the communication, the system will report fault error of communication (E.CE).

Generally speaking, it is set to a invalid state. If set this parameter in the system of continuous communication, it can monitor the communication condition.

189	P12.05	Disposal for transmission error	0: alarm and random parking 1: No alarm and continuous operation 2: Halt according the halt method without alarm(only for communication method) 3: Halt according the halt method without alarm( for all control methods)	1	<b>♦</b>
-----	--------	------------------------------------	---	---	----------

0: alarm and random parking

- 1: No alarm and continuous operation
- 2: Halt according the halt method without alarm(only for communication method)
- 3: Halt according the halt method without alarm( for all control methods)

AC frequency vector inverter can choose whether to shield CE fault, halt or maintain continuous operation via setting disposal activities of communication error under abnormal communication condition.

190	P12.06	Disposal for transmission response	0: writing operation with response 1: writing operation without response	0	<b>\$</b>
-----	--------	------------------------------------	--	---	-----------

When the unit for LED of this function code is set to 0, AC frequency vector inverter responses to the reading and writing order of upper computer.

When the unit for LED of this function code is set to 1, AC frequency vector inverter only responses to the reading order of upper computer and has no response to writing order; and this method can improve the communication efficiency.

6-2-14.P13 group protection function group

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
191	P13.00	Input the protection selection of default phase	0: Prohibit 1: Permit	1	
Select whether to protect the default phase of the input.  18.5KW AC frequency vector inverter for G type of POWTECH or al the protection function of input default; no matter the setting of P13.00 is 0 or type has no protection function of input default					
192	P13.01	Output the protection selection of default phase	0: Prohibit 1: Permit	1	
Se	lect whether	to protect the input defau	lt		
193	protection selection of motor overload	0: No protection 1: Ordinary motor (having compensation with low speed) 2: variable frequency motor (without compensation with low speed)	protection selection of motor overload	2	

- 0: No protection. Have no protective feature of motor overload (please use it carefully); at this moment, AC frequency vector inverter has no overload protection for the load motor.
- 1: Ordinary motor (having compensation with low speed). Corresponding thermal protection of the electron should be adjusted properly because heat dissipation for common motor becomes weaker; so-called compensation with low speed herein refers adjusting protective value for motor overload whose operation frequency is lower than 30HZ.
- 2: Variable frequency motor (without compensation with low speed). It is unnecessary to adjust the protection value of the operation with low speed because the heat dissipation for the motor exclusively used by variable frequency is not influenced by the rotate speed

used by	used by variable frequency is not influenced by the fotate speed.						
194	P13.03	Protective current of motor overload	20.0%~120.0%(rated current of motor	100.0%	<b>\$</b>		
195	P13.04	Under clocking point for instant power failure	70.0~110.0%(voltage of standard bus)	80.0%	<b>♦</b>		
196	P13.05	Descent rate for frequency of instant power failure	0.00Hz~P01.07(maximum frequency)	0.00Hz	<b>♦</b>		
197	P13.06	Protection for overvoltage and speed reduction	0: Prohibit 1: Permit	0	<b>\$</b>		
198	P13.07	Protective for voltage	110~150% (380V series)	120%	<b>♦</b>		
	F15.07	of overvoltage and speed reduction	110~150% (220V series)	120%	<b>♦</b>		
D.1	2.06						

P13.06

0: Prohibit

#### 1: Permit


During the operation process of AC frequency vector inverter, actual descent rate for rotate speed of motor is lower than descent rate of output frequency due to the influence of load inertia; at this moment, motor will feedback the electric energy to AC frequency vector inverter; it will cause the rise for bus voltage of AC frequency vector inverter; if measures won't be taken for this, it will cause the rise of bus voltage and the tripping and overvoltage fault of AC frequency vector inverter.


Speed reduction protection of overvoltage refers making comparing with speed reduction point of overvoltage defined in P13.07 (with respective to standard bus voltage) via detecting the bus voltage during the operation process of AC frequency vector inverter; if it exceeds the speed reduction point of the overvoltage, then the output frequency of AC frequency vector inverter will stop falling; and it will continuously decelerate until it detects the bus voltage is lower than the speed reduction point of overvoltage. As chart 5-22:

0 101 1010	overvoitage. 7 is chart 5 22.					
199	P13.08	Level of automatic current limiting	100~200%	G type: 160% P type :120%	<b>♦</b>	
200	P13.09	Descent rate for frequency of current limiting	0.00~100.00Hz/s	10.00Hz/s	$\Diamond$	

During the operation process of AC frequency vector inverter, actual rate of rise for rotate speed of motor is lower than the rise rate of output frequency due to high load; if measures won't be taken for this, it will cause over current fault with acceleration and the tripping of AC frequency vector inverter.

During the operation process of AC frequency vector inverter, automatic current-limit function will make a comparison with the current-limit level point defined in P13.08 via detecting the output current; if it exceeds the level point of the current limit, then the output frequency of AC frequency vector inverter will reduce based on droop rate of over frequency (P13.09); it will return to normal operation after it detects the current is lower than the level point of current limit. As chart 5-23:

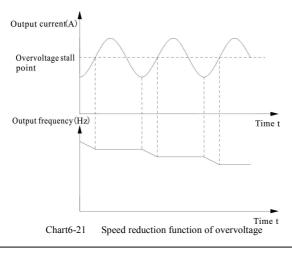

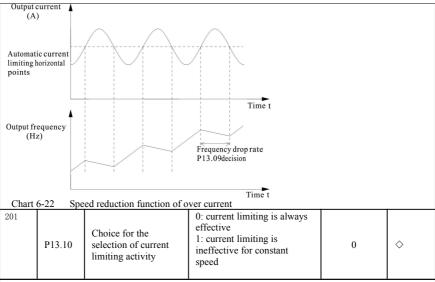

Function of automatic current-limit is always effective under the state of deceleration; whether the function of automatic current-limit is effective is decided by the selection of automatic current-limit (P13.100).

P13.10=0 shows current-limit is effective when constant speed operates;

P13.10=1 shows current-limit is ineffective when constant speed operates;

When the current-limit operates, output frequency may change to some extent; so it is not suitable to use the function of current-limit for the place where requires stable output frequency for constant speed.

When current-limit is effective, it may affect the overload capacity due to the lower setting of current-limit level.

6-2-15.P14 group water supply function

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
202	P14.00	Operation function of PID	0: halt without operation 1: halt with operation	0	
203	P14.01	Awakening frequency	dormancy frequency (P14.03) ~maximum frequency (P01.07)	10.00Hz	
204	P14.02	Delay time of awakening	0.0s~3600.0s	1000.0s	
205	P14.03	Dormancy frequency	0.00Hz~wakening frequency (P14.01)	5.00Hz	
206	P14.04	Delay time of dormancy	0.0s~3600.0s	500.0s	

The parameter in this group is used to realize the dormancy and awakening function for function of water supply.

During the operation process of AC frequency vector inverter, when the setting frequency is smaller or equal to dormancy frequency in P14.03, AC frequency vector inverter enters into dormancy

state and stops automatically after the delay time in P14.04.

When AC frequency vector is at a dormancy state and the current operation command is effective and the setting frequency is bigger or equal to awakening frequency in P14.01, AC frequency vector inverter begins to start after the delay time in P14.02.

As a general rule, please make the awakening frequency bigger or equal to the dormancy frequency. Suppose awakening frequency and dormancy frequency were 0.00Hz, then the dormancy and awakening function is invalid.

When the dormancy function is started, if frequency source uses PID, the calculation for dormancy state is influenced by function code P14.00; at this moment, PID must be used to select PID to operate enabling(P14.00=10).

207	P14.05	Droop control	0.00~10.00Hz[0.00H]	0.00Hz	
208	P14.06	Effective choice of helper motor	0~3[0]	0	
209	P14.07	Delay time for the start and stop of helper motor 1	0.0~3600.0[5.0s]	5.0s	
210	P14.08	Delay time for the start and stop of helper motor 2	0.0~3600.0[5.0s]	5.0s	

When the same load is driven by many AC frequency vector inverters, unbalanced distribution of the load will be caused due to different speed; consequently, it will AC frequency vector inverter with higher load bear heavier load. Characteristic of droop control is that it can make the speed droop change with the increase of the load and make a balanced distribution for the load.

## 6-2-16.P15 group manufacturer's function

No.	Code	Describing LED/OLED Keyboard display	Setting range	Factory setting	Change
211	P15.00	Manufacturer password	0~65535	****	•

This group is the manufacturer's parameter and the user should not try to open the parameter in this group, or it will make abnormal operation or damage of AC frequency vector inverter.

## Chapter 7 EMC(Electro Magnetic Compatibility)

#### 7-1. Definition

Electromagnetic compatibility refers to the operation of electrical equipment in the environment with electromagnetic interference; it doesn't disturb the electromagnetic environment and stabilize its ability on realizing its function.

#### 7-2. Introduction of EMC standard

Based on the requirement of national standard GB/T12668.3,AC frequency vector inverter should meet the requirement of electromagnetic interference and anti-electromagnetic interference.

The existing products of our company implements the latest international standard: IEC/EN61800-3:2004 (Adjustable speed electrical power drive systems part 3:EMC requirements and specific test methods) and national standard GB/T12668.3. IEC/EN61800-3 mainly inspects AC frequency vector inverter from electromagnetic interference and anti-electromagnetic interference. Electromagnetic interference makes test on the radiated interference, conducted interference and harmonic interference of AC frequency vector inverter (for civil AC frequency vector inverter).

anti-electromagnetic interference mainly makes test on conducted immunity, radiated susceptibility, SURGE, quick and sudden EFT, ESD immunity and immunity at the bottom of power supply of AC frequency vector inverter (specific test project includes: 1. Test on immunity for temporary reduction, interruption and change of AC frequency vector inverter; 2. Test on the immunity at the breach of commutation; 3. Test on the immunity of harmonic wave input; 4. Test on the change of input frequency; 5. Test on imbalance of input voltage; 6. Test on immunity of input voltage). The test is made according to the strict requirement of the above IEC/EN61800-3; products of our company are installed and used based on the guidance shown in 7.3 and they will have good electromagnetic compatibility under normal industrial environment.

## 7-3.EMC guidance

#### 7-3-1. Influence of harmonic wave

Higher harmonic of the power supply will damage AC frequency vector inverter; as a result, it is suggested to install AC input reactor for the place with low quality of power grid.

## 7-3-2. Electromagnetic interference and installation notes

Electromagnetic interference has two types; one is the interference for electromagnetic noise of the surrounding to AC frequency vector inverter; and the other is the interference caused by AC frequency vector inverter to surrounding devices

Installation notes:

- 1) ground lead of **AC** frequency vector inverter and other electrical products should be connected with the ground well;
- 2) Input and output power line for the motive power of **A**C frequency vector inverter and signal line of weak current (like control wiring) should not be laid horizontally and lay them vertically if necessary.
- 3) power line for the output of **AC** frequency vector inverter is suggested to use shield cable or shielding power line of steel tube; and the shielding layer should be connected with ground reliably; leading wire for equipment disturbed is suggested to use shielding control line with twisted pair and the shielding layer should be connected with ground reliably;
- 4) It is required to install output filter or electric reactor for the motor whose cable length is more than  $100 \, \mathrm{m}$ .

# 7-3-3. Solution for the interference of surrounding electromagnetic equipment on AC frequency vector inverter

Generally speaking, the reason for causing electromagnetic effect on AC frequency vector inverter is there is a lot of relays, contactors or electromagnetic brakes surrounding AC frequency vector inverter; the following methods is suggested to use when AC frequency vector inverter is disturbed by them and operates wrongly:

- 1) Install surge suppression on the device giving interference;
- 2) Install filter on the input terminal of **AC** frequency vector inverter; please refer to 7.3.6 for operation detail;
- 3) Use shielding cable for control signal line and leading wire for detection circuit of AC frequency vector inverter and connect the shielding layer to the ground reliably.

# 7-3-4. Solution for the interference of AC frequency vector inverter on its surrounding electromagnetic equipment

The noise in this part is divided into two types: one is the radiated interference of AC frequency vector inverter; and the other is the conducted interference of AC frequency vector inverter; the interference makes the surrounding electrical equipment have electromagnetic or electrostatic induction; then the interference can further make the device have wrong operation. Please refer to the following solutions for different interferences:

1) generally speaking, meter, receiver and sensor used for measuring has weak signal; and they are easy to interfere and cause wrong operation when they are near to AC frequency vector inverter or in the same control cabinet with AC frequency vector inverter; it is suggested to use the following methods to solve it: be away from the interference as far as possible; don't lay the signal line and power line horizontally; in particular, don't bind them together; signal line and power line uses shielding cable and connects with the ground well; add ferrite

bead to the output side of AC frequency vector inverter (blanketing frequency should be within  $30 \sim 1000 \text{MHz}$ ) and roll 2-3 rings; EMC output filter can be installed for worse condition.

- 2) When the equipment disturbed and AC frequency vector inverter uses the same power supply, it will also cause conducted interference; if the methods mentioned above can't eliminate the interference, then install EMC filter between AC frequency vector inverter and power supply
- 3) Independent grounding of external equipment can eliminate the interference caused by leak current which is caused by the grounding wire of **AC** frequency vector inverter when they share the ground together.

#### 7-3-5. Leakage current and disposal

Leakage current of AC frequency vector inverter has two types: one is leakage current for the ground; and the other in leakage current among lines.

1) Factors affecting leakage current for ground and solution:

The wire and the ground has distributed capacitance; the bigger the distributed capacitance, the bigger the leakage current; effectively shorten the distance between AC frequency vector inverter and motor to reduce the distributed capacitance. The bigger the carrier frequency, the bigger the leakage current. Reduce carrier frequency to reduce the leakage current. However, reducing carrier frequency can cause the increase of motor noise; please pay attention to installing electric reactor is also an effective way to solve the leakage current. leakage current will increase with the increase of loop current; as a result, corresponding leakage current will be big when the motor power is large.

2) Factors affecting leakage current among lines and solution:

Output wirings have distributed capacitance; if the current passing through the circuit includes higher harmonic, then it is very likely to cause resonance and then result in leakage current. At this moment, if thermal relay is used, it may make it have wrong action.

The solution is to reduce carrier frequency or install output reactor. It is suggested not to install thermal relay before the motor when AC frequency vector inverter is used. And use the protective function for over current of electron of AC frequency vector inverter.

# 7-3-6. Precautions for installing EMC input filter at the input terminal of the power supply:

1) Notice: rated value must be strictly followed when the filter is sued; mental case ground of filter should be connect with metal ground of installation cabinet because filter belongs to I electrical equipment; moreover, it should have good continuousness of electric, conduction, or it may have electric shock hazard or seriously affect EMC effect; it is discovered via EMC test that filter ground and ground at PE terminal of AC frequency vector inverter should be connected to the same public ground, or it will seriously affect EMC effect.

2) Install the filter at the input terminal for the power supply of AC frequency vector inverter as close as possible.

# **Chapter 8** Failure checking and removal

### 8-1. Failure information and removal method

No.	Failure code	Failure type	Possible reason of the failure	Countermeasures
1	E.oUP	U-phase protection of inverter unit	Acceleration is to fast     Internal breakdown for IGBT of this phase	Increase acceleration time
2	E.oUP	V-phase protection of inverter unit	3. Interference causes wrong activity	<ul><li>2. Look for help</li><li>3. Inspect whether peripheral equipment has</li></ul>
3	E.oUP	W-phase protection of inverter unit	4. whether the grounding is good enough	strong interference source
4	E.oC1	Over current of acceleration	Acceleration is to fast     Low network voltage     3.Low power of AC frequency vector inverter	Increase acceleration time     Inspect input power     Select AC frequency vector inverter with a larger power
5	E.oC2	Over current of constant speed	Deceleration is to fast     Large torque of load inertia     Low power of AC frequency vector inverter	Increase deceleration time     Add suitable dynamic braking component     Select AC frequency vector inverter with a larger power
6	E.oC3	Over current of constant speed	Mutation or abnormality of the load     Low network voltage     Low power of AC frequency vector inverter	Inspect the load or reduce the mutation of the load     Inspect input power     Select AC frequency vector inverter with a larger power
7	E.oU1	Overvoltage of acceleration	Abnormal input voltage     Restart the motor in rotation     after instant power off	Inspect input power     Avoid stopping and restarting
8	E.oU2	Overvoltage of deceleration	Deceleration is to fast     Large inertia of load     Abnormal input voltage	Increase deceleration time     Increase dynamic braking component     Inspect input power
9	E.oU3	Overvoltage of constant speed	Abnormal change of input voltage     Large inertia of load	<ol> <li>Install input reactor</li> <li>Add suitable dynamic braking component</li> </ol>
10	E.LU	Under voltage fault of bus	1. Low network voltage	1. Inspect input power of power grid
11	E.oL1	Motor overload	Low network voltage     Incorrect setting for rated current of the motor     Motor block or too large load sudden change     High-power heavy truck	Inspect network voltage     Set rated current of the motor again     Inspect load and adjust lifting capacity of the torque     4.Select proper motor
12	E.oL2	overload of AC frequency vector inverter	Acceleration is to fast 2.     Restart the motor in rotation     Low network voltage	increase acceleration time     Avoid stopping and

No.	Failure code	Failure type	Possible reason of the failure	Countermeasures
			4. Too big load	restarting 3. Inspect network voltage 4. Choose AC frequency vector inverter with a much bigger power
13	E.PHI	Default phase at the input side	Input R, S and T has default phase	Inspect input power     Inspect installation     wiring
14	Е.РНо	Default phase at the output side	Output for U, V and W default phase( or load three-phase is seriously asymmetric	Inspect output wiring     Inspect motor and cable
15	E.oH1	Overheating of rectifier module	I. Instant over current of AC frequency vector inverter     Output three-phase has inter phase or grounded short circuit     Block of air channel or fan damage     Too high temperature     The cable connected to control board is loose or the plunging is loose.     Damage of auxiliary power supply and under voltage driving voltage     T. Direct connection for bridge arm of power module     Abnormal control panel	Refer to countermeasures of over current 2. Wire again 3. Dredge air flue or replace the fan 4. Reduce environment temperature 5. Inspect and connect again 6. look for service 7. look for service 8. look for service
16	E.oH2	Overheating of inverter module ( only for 11kw~37kw)	Instant over current of AC frequency vector inverter     Output three-phase has inter phase or grounded short circuit     Block of air channel or fan damage     Too high temperature     The cable connected to control board is loose or the plugging is loose.     Damage of auxiliary power supply and under voltage driving voltage     To irect connection for bridge arm of power module     Abnormal control panel	Refer to countermeasures of over current     Wire again     Dredge air flue or replace the fan     Reduce environment temperature     Inspect and connect again     look for service     look for service     look for service
17	E.SET	External fault	1. Activity for external input terminal of SI	Inspect the input of external equipment
18	E.CE	Communication fault	In Improper setting of Baud rate     Adopt the communication     mistake of serial communication     I.Long-term interrupt of     communication	1. Set proper Baud rate 设 2. Press 量 to reset and look for service 3. Inspect the wire at the communication interface

No.	Failure code	Failure type	Possible reason of the failure	Countermeasures
19	E.oCC	Fault of current detection on circuit	Bad contact for connector of control panel     Damage of auxiliary power     Damage of Hall device     Abnormal amplifying circuit	Inspect connector and insert the cable again     Look for service     Look for service     Look for service
20	E.TE	Fault for self- study of motor	Mismatching between the motor capacity and capacity of AC frequency vector inverter     Improper setting for rated parameter of the motor     Large deviation between the parameter obtained by self-study and standard parameter     Overtime self-study	Change the type of AC frequency vector inverter     Set rated parameter based on the nameplate of motor     Make the motor empty and recognize it again     Check motor connection and parameter setting
21	E.EEP	Reading and writing fault of EEPROM	Mistake for the reading and writing of control parameter     Damage of EEPROM	1. Press  to reset and look for service 2. Look for service
22	E.PId	Break-line fault for feedback of PID	Break-line for feedback of PID     Disappearance for feedback source of PID	1 Inspect break-line for feedback of PID 2. Inspect feedback source of PID
23	E.bCE	Brake unit fault	Fault of brake circuit and damage of brake pipe     Small external brake resistor value	1.Inspect brake unit and renew new brake pipe     2. Increase brake resistor
24	P. oFF	Shutdown display	Low input voltage     Improper setting of parameter     Shutdown display	Inspect whether the voltage is correct     Inspect whether the parameter is correct
25	END	Manufacturer's preservation		

## **Chapter 9 Maintenance and overhauling**

#### 9-1. Inspection and maintenance

Under the normal use of AC frequency vector inverter, it needs regular inspection (e.g. Overhauling of the machine or 6 months at most based on the stipulation) besides daily inspection; please implement it based on the following table to prevent the potential danger.

Inspection	n time Regular	Inspection part	Inspection item	Inspection matter	Inspection method	Judgment standard
√ V		display	LED/OLED display	Whether the display has exception	Visual sense	Confirm based on the use condition
√	√	Cooling system	Fan	Whether it has abnormal sound or	Visual sense and hearing	No abnormalities
√		reality	surrounding	Temperature, moisture, dust and	Visual sense, sense of	Based on 2-1 clause
V		Input and output terminal	Voltage	Whether the input and output voltage is abnormal	Measure terminal of R, S, T and U, V and W	Based on the stipulation of standard regulation
	√	Main circuit	General view	Whether the fastener loosens, has overhearing trace, electric discharge phenomenon, too much dust and whether its air flue is blocked	Visual contract, fastening and cleaning	No abnormalities
			Electrolytic capacitor	Whether its surface is	Visual contract	No abnormalities
			Conducting bar of wire	Whether it loosens	Visual contract	No abnormalities
			Terminal	Whether the bolt or screw	Fastening	No abnormalities

<sup>&</sup>quot;\"means it needs daily or regular inspection.

The device can't be disassembled or shaken without excuse; connector can't be taken out randomly, or it won't work normally or enter into the display state of fault and the fault of component; what is worse, it may cause the fault of the device or the damage for IGBT module of main switching element.

Much attention should be given when the measurement is required that different meters may obtain different measurement result with obvious

differences. Indictor voltmeter is recommended to measure the input voltage; and use voltmeter of rectifier type to measure the output voltage; and use tong-type ammeter to measure the output current and use electrodynamics-type voltmeter to measure the power.

#### 9-2. Device required regular change

In order to guarantee the reliable operation of AC frequency vector inverter, the component-all fans used for the cooling, filter condenser used for energy storage and exchange and printed circuit board bearing physical deterioration for a long time in AC frequency vector inverter should be changed regularly. The change can be made based on the stipulation in the following table for continuous use; and it can be also subject to specific condition of service environment, load situation and current status of AC frequency vector inverter.

Component name	Standard renewal period					
Cooling fan	1∼3 year					
Filter capacitance	4∼5 year					
Printed circuit board	5∼8 year					

### 9-3. Storage and custody

After the purchasing of AC frequency vector inverter, if it doesn't be used at once (temporary custody or long-term storage), the following aspects should be obtained:

- \* It should be put in a place within the stipulated temperature range, and having no moisture, dust, mental dust and have a good ventilation.
- ※ If it doesn't be used exceeding a year, then the charging test should be made for it in order to renew the filter condenser of main circuit in AC frequency vector inverter. Voltage regulator should be used to make the input voltage of AC frequency vector inverter rise gradually up to the rated output voltage when it is charged; and the charging time should be more than 1-2 hours. The test mentioned above should be made once every year.

#### 9-4. Measurement and judgment


\*When normal meter is used for measure the current, the current at the input terminal will have imbalanced phenomenon; it belongs to a normal phenomenon when the difference is within 10%; if the difference is 30%, the

original factory should be informed to change the rectifier bridge; or check whether the deviation of three-phase voltage exceeds 5V.

When three-phase voltage of the output adopts is measured by normal multimeter, the data read by it is not inaccurate due to the interference of carrier frequency and it can be only used for reference.

## **Chapter 10 Option**

The user can install the peripheral equipment for the products of this group due to their different service conditions and requirements; see the following chart for their connections.

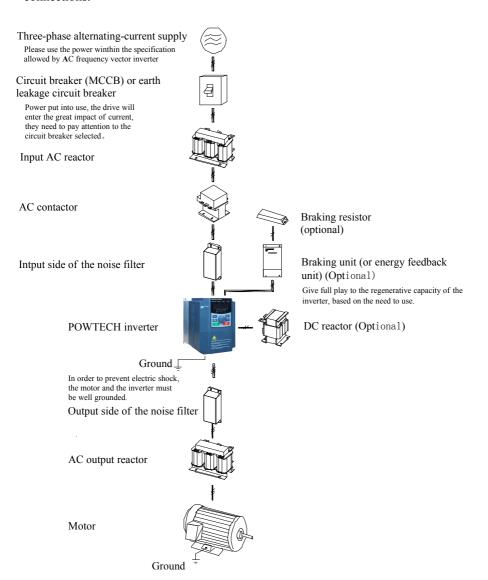

#### 10-1. Optional components

See relative inverter of optional component for detailed function and inverter of optional component; if the above optional components are required; please make an

explanation in your order.

Name	Туре	Function	Remarks
Built-in brake unit	"B" after the product type	Used for dynamic braking	Built-in brake unit is standard configuration
Operation panel of outer LED	-	Display of outer LED and operation keyboard	Apply universally for PT200 series RS485 interface
Operation panel of outer OLED	-	Display of outer OLED and operation keyboard	RS485 interface
Keyboard of parameter copy	-	Keyboard with the function of parameter copy	Apply universally for PT200series General RS485 interface
Extension cable	-	Standard network cable with 8 cores; and it can be connected with the keyboard	For 1m, 3m, 5m and 10m

If the extension function of other function modules (for example, I/0 clip, PG clip and EPS clip) is required, please choose PT200 series AC frequency vector inverter; please appoint function module card required in your order.

# 10-2. Moulded case circuit breaker(MCCB)or earth leakage circuit breaker(ELCB)


Being the power switch of AC frequency vector inverter, MCCB or ELCB can also protect the power supply; notice, MCCB or ELCB can't be used to control the start and stop of AC frequency vector inverter.

#### 10-3. AC reactor

AC reactor can restrict higher harmonic for the input current of AC frequency vector inverter and obviously improve the power factor of AC frequency vector inverter. It is suggested to use AC reactor in the following situation.

- \*\* Proportion between power capacity at the place of AC frequency vector inverter and capacity of AC frequency vector inverter is higher than 10:1.
- \* Thyristor load or power factor compensation device with ON/OFF control is connected to the same power supply.
- $\times$  Unbalance factor for the voltage of three-phase supply is too high ( $\geq 3\%$ ).

Dimension for AC input reactor with regular size is as follow:

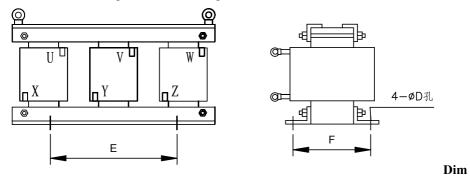

## ension

Specification of AC frequency vector inverter		Size (m	Net						
Voltage	Capacity (kW)	A	В	C	D	Е	F	weight(kg)	
	0.75	155	125	95	7	89	60	3.0	
	1.5	155	125	95	7	89	60	3.0	
	2.2	155	125	95	7	89	60	3.0	
	4	155	125	95	7	89	60	3.5	
	5.5	155	125	100	7	89	60	3.5	
	7.5	155	125	112	7	89	70	4.0	
	11	155	125	112	7	89	70	6.0	
200V 230V	15	180	140	112	8	90	80	8.0	
230 (	18.5	180	140	112	8	90	90	8.0	
	22	180	140	112	8	90	90	8.0	
	30	230	175	122	10	160	90	12.0	
	37	230	175	132	10	160	100	15.0	
	45	230	175	150	10	160	110	23.0	
	55	230	175	160	10	160	120	23.0	
	75	285	220	230	14	180	130	30.0	
	0.75	155	125	95	7	89	60	3.0	
	1.5	155	125	95	7	89	60	3.0	
380V	2.2	155	125	95	7	89	60	3.0	
460V	4	155	125	95	7	89	60	3.5	
	5.5	155	125	100	7	89	60	3.5	
	7.5	155	125	112	7	89	70	4.0	

11	155	125	112	7	89	70	6.0
15	180	140	112	8	90	80	8.0
18.5	180	140	112	8	90	90	8.0
22	180	140	112	8	90	90	8.0
30	230	175	122	10	160	90	12.0
37	230	175	132	10	160	100	15.0
45	230	175	150	10	160	110	23.0
55	230	175	160	10	160	120	23.0
75	285	220	230	14	180	130	30.0
110	285	250	230	14	210	140	33.0
160	360	260	230	14	210	140	40.0
200	360	270	230	14	210	140	45.0
250	400	330	240	14	240	140	55.0
315	400	350	285	14	270	160	90.0

#### 10-4. Noise filter

This filter is used to restrict the conduction for the electromagnetic interference noise caused by AC frequency vector inverter; it can also restrict external radio interference and the interference to this machine coming from surge of temporary impact.

Before the use, please firstly confirm the power supply belongs to three-phase three-wire system or three-phase four wire system; if it belongs to single phase, its ground wire should be as stubby as possible; and the filter should be close the AC frequency vector inverter to the greatest extent.

This filter can be applied to the occasions such as residential area, commercial area, research and development institution and place which has a high requirement on the interference of radio interference as well as the situation where meets CE, UL and CSA standard but without enough device to fight against the interference.  $\circ$ 

If you want to purchase this product, please contact with our company.

#### 10-5. Contactor

Shut off the power at the movement for the protection function of the system to prevent the fault expanding. Don't use the contactor to control the start and stop of the motor.

#### 10-6. Brake unit and brake resistor (380V)

When the user chooses the type with brake, the inside of **AC** frequency vector inverter has brake unit; and its maximum brake torque is 50%. The user can refer to the following table for separately purchasing brake resistor to make a match with it.

Brake unit specificati on	Powe r	Volta ge	Installation dimension	Brake resistor (150% torque)		Dimension
	KW	(V)	L/W/H (mm)	Specificat ion	Quantit y (pc)	L/W/H(mm)
	4	380		$100\Omega/600\mathrm{W}$	1	365/70/135
	5.5	380		$58\Omega/1000$ W	1	365/70/135
PT2014	7.5	380		$58\Omega/1000W$	1	365/70/135
(or	11	380	194/109/76.5	$47\Omega/1500\mathrm{W}$	1	485/60/115
build in)	15	380		$58\Omega/1000W$	2P*1	365/70/135
	18. 5	380		28 Ω /3000W	1	570/70/135
	22	380		$47\Omega/1500\mathrm{W}$	2P*1	485/60/115
	30	380	217/109/114.	47Ω/1500W	3P*1	485/60/115
PT2024	37	380		$28\Omega/3000$ W	2P*1	570/70/135
	45	380		$28\Omega/3000$ W	2P*1	570/70/135
	55	380		$28\Omega/3000$ W	2P*1	570/70/135
	75	380		$28\Omega/3000$ W	4P*1	570/70/135
	93	380		$28\Omega/3000$ W	4P*1	570/70/135
	110	380		$28\Omega/3000$ W	4P*1	570/70/135
	132	380		$28\Omega/3000\mathrm{W}$	4P*2	570/70/135
	160	380		$28\Omega/3000\mathrm{W}$	4P*2	570/70/135
PT2034	187	380	228/145/129	$28\Omega/3000$ W	4P*2	570/70/135
	200	380		$28\Omega/3000$ W	4P*3	570/70/135
	220	380		$28\Omega/3000\mathrm{W}$	4P*3	570/70/135
	250	380		$28\Omega/3000\mathrm{W}$	4P*3	570/70/135
	280	380		28 Ω /3000W	4p*3	570/70/135

If a bigger brake torque of the above built-in brake is required, please choose brake unit of POWTECH; please see the inverter for brake unit of POWTECH for detailed material.

Other types with high power don't have built-in brake. Please choose brake unit of POWTECH if the type with high power requires brake function.

#### 10-7. EMI filter of output

It is used to restrict the interfering noise caused by the output side of AC frequency vector inverter and leakage current of the wire.

## 10-8. AC output reactor

When the wiring between AC frequency vector inverter and motor is too long (more than 20 m), it is used to restrict the over current caused by distributed capacitance. Meanwhile, it can also restrict the radio interference of AC frequency vector inverter.

10-9.Input filter 10-9-1.Input filter (380V)

10-5-1:Input inte	Voltage		Current	Dimensions	Installation
Mode1	(V)	(KW)	(A)	L/W/H (mm)	a/b/d(mm)
PT-0. 75KI-5A	380	0. 75	5	135*105*40	55*96
PT-1.5KI-5A	380	1.5	5	135*105*40	55*96
PT-2. 2KI-8A	380	2.2	8	135*105*40	55*96
PT-3. 7KI-8A	380	4	8	135*105*40	55*96
PT-5. 5KI-16A	380	5. 5	16	185*108*60	168*85
PT-7. 5KI-16A	380	7.5	16	185*108*60	168*85
PT-11KI-30A	380	11	30	185*108*60	168*85
PT-15KI-30A	380	15	30	185*108*60	168*85
PT-18.5KI-45A	380	18. 5	45	185*108*60	168*85
PT-22KI-45A	380	22	45	185*108*60	168*85
PT-30KI-80A	380	30	80	310*168*107	168*85
PT-37KI-80A	380	37	80	310*168*107	280*143
PT-45KI-100A	380	45	100	310*168*107	280*143
PT-55KI-120A	380	55	120	310*168*107	280*143
PT-75KI-150A	380	75	150	353*185*112	325*152
PT-90KI-200A	380	90	200	353*185*112	325*152
PT-110KI-300A	380	110	300	378*220*155	230*195
PT-132KI-300A	380	132	300	378*220*155	230*195
PT-160KI-300A	380	160	300	378*220*155	230*195
PT-185KI-400A	380	185	400	378*220*155	230*195
PT-200KI-400A	380	200	400	378*220*155	230*195
PT-220KI-500A	380	220	500	444*255*162	290*230
PT-250KI-500A	380	250	500	444*255*162	290*230
PT-280KI-630A	380	280	630	444*255*162	290*230

#### **Chapter 10 Option**

PT-315KI-630A	380	315	630	444*255*162	290*230
PT-350KI-800A	380	350	800	444*255*162	290*230
PT-400KI-800A	380	400	800	444*255*162	290*230
PT-450KI-800A	380	450	800	444*255*162	290*230
PT-500KI-1000A	380	500	1000	444*255*162	290*230
PT-560KI-1200A	380	560	1200	444*255*162	290*230
PT-630KI-1200A	380	630	1200	444*255*162	290*230

## 10-9-2.Output filter (380V)

Madal	Voltage(V)	Power (KW)	Current (A)	Dimensions	Installation
Mode1				L/W/H(mm)	a/b/d (mm)
PT-0. 75K0-5A	380	0.75	5	135*105*40	55*96
PT-1.5KO-5A	380	1.5	5	135*105*40	55*96
PT-2. 2KO-8A	380	2. 2	8	135*105*40	55*96
PT-3. 7KO-8A	380	4	8	135*105*40	55*96
PT-5. 5KO-16A	380	5. 5	16	185*108*60	168*85
PT-7. 5KO-16A	380	7. 5	16	185*108*60	168*85
PT-11K0-30A	380	11	30	185*108*60	168*85
PT-15K0-30A	380	15	30	185*108*60	168*85
PT-18. 5KO-45A	380	18. 5	45	185*108*60	168*85
PT-22K0-45A	380	22	45	185*108*60	168*85
PT-30K0-80A	380	30	80	310*168*107	168*85
PT-37K0-80A	380	37	80	310*168*107	280*143
PT-45K0-100A	380	45	100	310*168*107	280*143
PT-55K0-120A	380	55	120	310*168*107	280*143
PT-75K0-150A	380	75	150	353*185*112	325*152
PT-90K0-200A	380	90	200	353*185*112	325*152
PT-110K0-300A	380	110	300	378*220*155	230*195
PT-132KO-300A	380	132	300	378*220*155	230*195
PT-160K0-300A	380	160	300	378*220*155	230*195
PT-185K0-400A	380	185	400	378*220*155	230*195
PT-200K0-400A	380	200	400	378*220*155	230*195
PT-220K0-500A	380	220	500	444*255*162	290*230
PT-250K0-500A	380	250	500	444*255*162	290*230
PT-280K0-630A	380	280	630	444*255*162	290*230
PT-315K0-630A	380	315	630	444*255*162	290*230
PT-350K0-800A	380	350	800	444*255*162	290*230
PT-400K0-800A	380	400	800	444*255*162	290*230
PT-450K0-800A	380	450	800	444*255*162	290*230
PT-500K0-1000A	380	500	1000	444*255*162	290*230
PT-560K0-1200A	380	560	1200	444*255*162	290*230

## 10-10. Input reactor 10-10-1. Output filter (380v)

1.Output filter (38	Voltage	Power	Curren	Reactance	Installation
Model	(V)	(KW)	t (A)	rate	L/W/H(mm)
PT-ACL-0002	380	1.5	5	2.00%	130/100/65
PT-ACL-0003	380	2. 2	7	2.00%	130/100/65
PT-ACL-0004	380	3. 7	10	2.00%	130/100/65
PT-ACL-0006	380	5. 5	15	2.00%	145/150/92
PT-ACL-0008	380	7. 5	20	2.00%	145/150/92
PT-ACL-0011	380	11	30	2.00%	160/180/90
PT-ACL-0015	380	15	40	2.00%	140/180/100
PT-ACL-0018	380	18. 5	50	2.00%	160/180/130
PT-ACL-0022	380	22	60	2.00%	165/180/140
PT-ACL-0030	380	30	80	2.00%	140/210/170
PT-ACL-0037	380	37	90	2.00%	140/210/170
PT-ACL-0045	380	45	120	2.00%	250/240/170
PT-ACL-0055	380	55	150	2.00%	250/240/180
PT-ACL-0075	380	75	200	2.00%	250/240/190
PT-ACL-0090	380	90	240	2.00%	280/240/210
PT-ACL-0110	380	110	250	2.00%	280/240/210
PT-ACL-0132	380	132	290	2.00%	290/300/205
PT-ACL-0160	380	160	330	2.00%	270/300/250
PT-ACL-0187	380	185	390	2.00%	285/300/204
PT-ACL-0200	380	200	390	2.00%	285/300/204
PT-ACL-0220	380	220	490	2.00%	285/300/204
PT-ACL-0250	380	250	660	2.00%	285/300/204
PT-ACL-0280	380	280	660	2.00%	285/300/224
PT-ACL-0315	380	315	660	2.00%	285/300/224
PT-ACL-0380	380	380	800	2.00%	400/340/285
PT-ACL-0400	380	400	800	2.00%	400/340/285
PT-ACL-0450	380	450	1000	2.00%	400/340/285
PT-ACL-0500	380	500	1100	2.00%	480/300/287

## 10-11 Output reactor

## 10-11-1.Output reactor (380V)

10-11-1.Output r	eactor (	38UV )			
	Voltage	Power(	Curren	Reactance	Installation
Model	(V)	KW)	t(A)	rate	L/W/H (mm)
PT-0CL-0002	380	1.5	5	1.00%	130/100/65
PT-0CL-0003	380	2.2	7	1. 00%	130/100/65
PT-0CL-0004	380	3.7	10	1.00%	130/100/65
PT-0CL-0006	380	5. 5	15	1.00%	145/150/92
PT-0CL-0008	380	7.5	20	1. 00%	145/150/92
PT-0CL-0011	380	11	30	1.00%	160/180/90
PT-0CL-0015	380	15	40	1.00%	140/180/100
PT-0CL-0018	380	18. 5	50	1.00%	160/180/130
PT-0CL-0022	380	22	60	1.00%	165/180/140
PT-0CL-0030	380	30	80	1.00%	140/210/170
PT-0CL-0037	380	37	90	1. 00%	140/210/170
PT-0CL-0045	380	45	120	1.00%	250/2408170
PT-0CL-0055	380	55	150	1.00%	250/240/180
PT-0CL-0075	380	75	200	1.00%	250/240/190
PT-0CL-0090	380	90	240	1.00%	280/240/210
PT-0CL-0110	380	110	250	1.00%	280/240/210
PT-0CL-0132	380	132	290	1.00%	290/300/205
PT-0CL-0160	380	160	330	1.00%	270/300/250
PT-0CL-0187	380	185	390	1.00%	285/300/204
PT-0CL-0200	380	200	390	1.00%	285/300/204
PT-0CL-0220	380	220	490	1.00%	285/300/204
PT-0CL-0250	380	250	660	1.00%	285/300/204
PT-0CL-0280	380	280	660	1. 00%	285/300/224
PT-0CL-0315	380	315	660	1. 00%	285/300/224
PT-0CL-0380	380	380	800	1. 00%	400/340/258
PT-0CL-0400	380	400	800	1. 00%	400/340/258
PT-0CL-0450	380	450	1000	1. 00%	400/340/258
PT-0CL-0500	380	500	1100	1.00%	480/300/263

### 10-12.DC reactor

	Voltag	Power(	Rated	Dimensions	Installation
Model	e (V)	KW)	Current (A)	L/W/H(mm)	a/b/d(mm)
PT-DCL-0001	380	0.75	3	90/76/65	64/55/06
PT-DCL-0002	380	1.5	6	90/76/65	64/55/06
PT-DCL-0003	380	2. 2	6	90/76/65	64/55/Ø6
PT-DCL-0004	380	3. 7	12	90/76/94	64/84/Ø6
PT-DCL-0005	380	5. 5	23	120/114/110	95/90/08.5
PT-DCL-0008	380	7. 5	23	120/114/110	95/90/08.5
PT-DCL-0011	380	11	33	120/114/110	95/90/08.5
PT-DCL-0015	380	15	33	120/114/110	95/90/08.5
PT-DCL-0018	380	18. 5	40	120/114/110	95/90/08.5
PT-DCL-0022	380	22	50	120/114/125	95/105/Ø8.5
PT-DCL-0030	380	30	65	120/114/140	95/120/Ø8.5
PT-DCL-0037	380	37	78	140/133/140	111/120/08.5
PT-DCL-0045	380	45	95	115/133/205/	111/135/08.5
PT-DCL-0055	380	55	115	145/170/203	125/125/08.5
PT-DCL-0075	380	75	160	145/170/203	125/140/4-7*12
PT-DCL-0090	380	93	180	145/170/203	125/140/4-7*12
PT-DCL-0110	380	110	250	245/200/190	160/120/4-10*15
PT-DCL-0132	380	132	250	245/200/190	160/120/4-10*15
PT-DCL-0160	380	160	340	245/200/190	160/120/4-10*15
PT-DCL-0187	380	185	460	245/200/195	160/120/4-10*15
PT-DCL-0200	380	200	460	245/200/195	160/120/4-10*15
PT-DCL-0220	380	220	460	245/200/195	160/120/4-10*15
PT-DCL-0250	380	250	650	290/200/230	160/140/4-10*15

PT-DCL-0280	380	280	650	290/200/230	160/140/4-10*15
PT-DCL-0315	380	315	650	290/200/230	160/140/4-10*15
PT-DCL-0350	380	350	800		
PT-DCL-0400	380	450	1000		
PT-DCL-0500	380	500	1250		

10-13 Specification of breaker, cable and contactor

Туре	Breaker (A)	Input line /output line (copper wire cable)mm2	Rated operational current A of contactor (380V OR 220V)
PT200-0R4G-2B	10A	1.5	10
PT200-0R7G-2B	16A	2.5	10
PT200-1R5G-2B	20A	2.5	16
PT200-2R2G-2B	32A	4	20
PT200-004G-2B	40A	6	25
PT200-5R5G-2B	63A	6	32
PT200-7R5G-2B	100A	10	63
PT200-011G-2B	125A	10	95
PT200-015G-2B	160A	25	120
PT200-018G-2B	160A	25	120
PT200-022G-2	200A	25	170
PT200-030G-2	200A	35	170
PT200-037G-2	250A	35	170
PT200-045G-2	250A	70	230
PT200-055G-2	315A	70	280
PT200-R75G-3B	10A	1.5	10
PT200-1R5G-3B	16A	1.5	10
PT200-2R2G-3B	16A	2.5	10
PT200-004G-3B	25A	2.5	16
PT200-5R5G-3B	25A	4	16
PT200-7R5G-3B	40A	4	25
PT200-011G-3B	63A	6	32
PT200-015G-3B	63A	6	50

#### **Chapter 10 Option**

PT200-018G-3B	100A	10	63
PT200-022G-3B	100A	10	80
PT200-030G-3	125A	16	95
PT200-037G-3	160A	25	120
PT200-045G-3	200A	35	135
PT200-055G-3	250A	35	170
PT200-075G-3	315A	70	230
PT200-093G-3	400A	70	280
PT200-110G-3	400A	95	315
PT200-132G-3	400A	95	380
PT200-160G-3	630A	150	450
PT200-185G-3	630A	185	500
PT200-200G-3	630A	240	580
PT200-220G-3	800A	150x2	630
PT200-250G-3	800A	150x2	700
PT200-280G-3	1000A	185x2	780
PT200-315G-3	1250A	240x2	900
PT200-355G-3	1250A	240x2	960
PT200-400G-3	1600A	185x3	1035
PT200-500G-3	2000A	185x3	1290

## **Chapter 11 Quality guarantee**

The quality guarantee of the project should be transacted based on the following stipulations:

- 1. It really belongs to the concrete content for the quality guarantee within the manufacturer's responsibility.
  - 1-1 When it is used in China (calculated since the date of delivery)
- \* Guarantee for return, change and maintenance within one month after the delivery;
- \*\*Guarantee for return and maintenance within three months after the delivery;
  - \*\*Guarantee for maintenance within 12 months after the delivery;
- 1-2 When it is exported to foreign country, it is guaranteed for maintenance at the purchasing place within six months after the delivery.
- 2. No matter when and where the product of our company is used, you can enjoy a lifelong service with payment.
- 3. Sale, manufacturing and agency unit of our company all over the country can provide after-sale service for the product; and the service condition is as following:
  - 3-1 Make a three-level inspection service at the place where the company is (including fault removal).
  - 3-2 It should be made according to the relative responsibility requirement in the contract content signed by our company with the agency.
  - 3-3 You can ask agencies of POWTECH for after-sale service with payment (whether the product is maintained or not).
- 4 If the responsibility for quality and product accident of the product appears, responsibilities in article 1-1 or 1-2 can be undertaken at most; if the user requires more warranties of professional liability, please insure property insurance in insurance company in advance.
- 5 warranty period of the product is a year since the date of dispatch.
- 6 If the fault is caused by the following reasons, it will be maintained with money even if it is within the warranty period:
  - 6-1 Incorrect operation (subject to the inverter) or the problem caused by voluntary repairing or transformation without authority.
  - 6-2 The problem caused by using AC frequency vector inverter exceeding the requirement of standard specification.
  - 6-3 Damage caused by falling or improper movement after the purchasing.
  - 6-4 Device aging or fault caused by bad environment.
  - 6-5 Damage caused by earthquake, fire, wind and water disaster, lightning stroke, abnormal voltage or other natural disaster or the reasons for the disaster.
  - 6-6 Damage occurred during the transportation period (notice: the transportation method should be designed by the customer and our

- company will assist in handling procedure of goods transportation).
- 6-7 Damage or non-identification for brand, trademark, sequential number, nameplate signed by the manufacturer.
- 6-8 Pay off the money according to the purchasing contract.
- 6-9 The installation, firing, operation, maintenance or other use conditions can't be objectively described to the service unit of our company.

7 The goods with guarantee for return, change and maintenance must be returned to our company; and the goods can be only returned or maintained after the attribution of liability is decided.

# Attachment RS485 communication protocol

#### 1. Introduction for use

PT200 series AC frequency vector inverter provides RS232/RS485 communication interface and adopts MODBUS communication with international standard to make principal and subordinate communication. The user can realize centralized control via PC/PLC, control for upper computer (set control inverter, operation frequency of AC frequency vector inverter and the change for relative function code parameter, working condition of AC frequency vector inverter and motoring of fault information ) to fit specific application requirement.

### 2. Specification

### 1) Protocol content

This serial communication protocol defines the information content and using format for the transmission of serial communication, including polling format (or broadcast) of host machine, coding method of host machine; the content includes function code of required activity, data transmission and error check. The response of the subordinate machine also adopts the same structure and the content includes activity confirmation, data return and error check. If the subordinate machine has mistake when it receives information, or it can't accomplish the activity required by host machine, it will organize fault information to feed it back to host machine as a response.

# 2) Application mode

AC frequency vector inverter connects with PC/PLC control network with a host machine and many subordinate machines of RS232/RS485 bus.


### 3) Bus structure

- (1) Interface mode: RS232(JP8 2-3 short circuit)/RS485 (JP8 1-2 short circuit) hardware interface
  - (2) transmission mode:

Asynchronous series and half-duplex transmission mode. During the same period, either the host machine or the subordinate machine sends data, and the other can only receive data. During the communication process of asynchronous series, either the host machine or the subordinate machine sends one frame one after another by means of the message format.

# (3) Topological structure

System with one host machine and many subordinate machines. Setting scope for the address of subordinate is 1~247; 0 is the address of broadcast communication. The address of subordinate machine must be unique in the network. As the following chart:

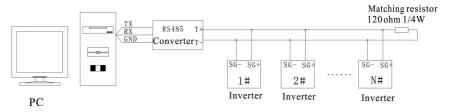

#### 4) Protocol inverter

Communication protocol of PT200 series AC frequency vector inverter is a kind of principal and subordinate MODBUS communication protocol of asynchronous series; and there is only one device (host machine) in the internet which can establish protocol (it is called as query or command). Other devices (subordinate machine) can only response to the query/command of the host machine via providing data, or make corresponding activities based on query/command of host machine. Host machine refers industrial control equipment or programmable logic controller (PLC) on personal computer (PC) and subordinate machine refers to PT200 AC frequency vector inverter. Host can not only make communication with a subordinate machine, but also issue the broadcast message to all subordinate machines. The subordinate machine will give a message (it is called response) for query/command with independent visit; as for the broadcast information given by host machine, it is unnecessary for the subordinate machine to feed it back to the host machine

**5) Structure of communication material** Communication data format for MODBUS protocol of PT200 AC frequency vector inverter is RTU (module of remote terminal unit) and ASCII (American Standard Code for Information International Interchange.

## (1)In RTU mode, the format for every byte is as follow:

Instant messaging should start within the interval time of at least 3.5 characters when RTU mode is used. Multiple character time under Baud rate of the internet is easiest to realize (it is shown as the following T1-T2-T3-T4). The first zone of transmission is equipment address. And transmission character which can be used is hexadecimal 0...9, A...F. network equipment constantly detects network bus, including the time of pause interval. When the first address field is received, every device will decode to judge whether address field is sent to it. After the transmission of the last character, the pause for at least the interval of 3.5 characters shows the completion of the message. And a new message can start again after the pause. The whole message frame must be transmitted as a continuous flow. If there still a pause with the interval time of 1.5 characters before the completion of the frame, the receiving equipment will renew incomplete information and suppose that next character would be the address field of a new message. Similarly, if a new message starts after the period which is shorter than the interval time of 3.5 characters of the previous message, the

receiving equipment will regard it as the continuation of the previous message. This will cause a mistake because the last value appearing in CRC field is wrong Frame format of RTU:

Frame header START	T1-T2-T3-T4(transmission time for 3.5 bytes)
Address field of subordinate machine ADDR	Communication address: $0\sim$ 247 (decimal system) (0 is the broadcast address)
Function field CMD	03H: read the parameter of the subordinate machine; 06H: write the parameter of the subordinate machine;
Data field DATA (N-1) DATA (0)	Data for 2*N bytes and this part is the main content of the communication and it is also the core for data exchange in the communication.
CRC CHK low post CRC CHK high post	Estimated value: CRC proof test value (16BIT)
Frame END	T1-T2-T3-T4 transmission time for 3.5 bytes)

(2) In ASCII mode, the format for every byte is as follow:

In ASCII mode, frame header is ":" ("0x3A") and frame default is "CRLF" ("0x0D""0x0A") . In ASCII mode, all data bytes are transmitted by means of ASCII mode except frame header and end; ten bytes at the first four highest place will be firstly sent and then ten bytes at the last four highest place will be sent. In ASCII mode, the data has 8-bit. As for 'A'  $\sim$  'F', adopt the ASCII coder of their capital letter. Now the data should be checked by using LRC. And the check covers the address of subordinate machine and partial information of the data. The checksum is equal to complement code for character sum of all data (giving up carry bit) participating in the check.

Standard structure of ASCII frame:

START	':' (0x3A)	
Address Hi	Communication address: 8-bit the address is composed by two ASCII codes	
Address Lo	Communication address. 8-bit the address is composed by two ASCII codes	
Function Hi	function: 8-bit the address is composed by two ASCII codes	
Function Lo	Tunction: 8-bit the address is composed by two ASCII codes	
DATA (N-1)	Data content: nx8-bit Data content is composed by 2n ASCII codes n<=16, 32 ASCII codes at most	
DATA (0)	II\-10, 32 ASCII codes at most	
LRC CHK Hi	I DC short and a 0 bit short and in a second by the ACCII and a	
LRC CHK Lo	LRC check code: 8-bit check code is composed by two ASCII codes	
END Hi	Terminator: END Hi=CR (0x0D), END Lo=LF (0x0A)	

CMD (command inverter) and DATA(description for data word) Command code: 03H, read N words (Word)(it can read 16 words at most). For example, the start address 0107 for AC frequency vector inverter whose address of subordinate is 01 reads two value continuously, the host machine orders the message RTU and the host machine orders the message .

the nest machine cracis the message :	
START	T1-T2-T3-T4
ADDR	01H
CMD	03H
High position of the start address	01H
Low position of the start address	07H

High position for the number of the date	00H
Low position for the number of the date	02H
CRC CHK low position	Its CRC CHK value need
CRC CHK high position	calculating
END	T1-T2-T3-T4

RTU response message of subordinate machine

Ter c response message or succremate materials	
START	T1-T2-T3-T4
ADDR	01H
CMD	03H
The number of byte	04H
High position for data address 0007H	13H
Low position for data address 0007H	88H
High position for data address 0008H	13H
Low position for data address 0008H	88H
CRC CHK low position	Ita CDC CHV value mad calculating
CRC CHK high position	Its CRC CHK value need calculating
END	T1-T2-T3-T4

Command message for ASCII host machine

START	ć.;
ADDR	'0'
ADDR	'1'
CMD	'0'
CMD	'3'
High position of the start address	'0'
	'0'
High position of the start address	'0'
	'4'
High position for the number of the date	'0'
	'0'
High position for the number of the date	'0'
	'2'
LRC CHK Hi	'F'
LRC CHK Lo	'6'
END Hi	CR
END Lo	LF

response message of subordinate machine of ASCII

START	-	
ADDR		'0' '1'
CMD		'0'
The number	r of byte	'0' '4'

High position for data address 0004H	'1'
High position for data address 0004H	'3'
High mosition for data address 0004H	'8'
High position for data address 0004H	'8'
H. 1 C 1. 11 0005H	<b>'1'</b>
High position for data address 0005H	<b>'3'</b>
High mosition for data address 0005H	'8'
High position for data address 0005H	<b>'</b> 8'
LRC CHK Hi	,C,
LRC CHK Lo	<b>'2'</b>
END Hi	CR
END Lo	LF

Verification mode-CRC verification mode: CRC (Cyclical Redundancy Check)

When RTU frame format is used, the message includes error detection field which is based on CRC. CRC field inspects the content of the whole message. CRC is two bytes and includes binary value with 16 bits. It is added to the message after the calculation of transmission equipment. The receiving equipment will calculate CRC again which receives the message andmake a comparison with the received value in CRC field; if two CRC value is different, it means the transmission is erroneous.

CRC is stored into 0xFFFF in advance; and then use a process to compare the continuous 8 bytes in the message with value in current register. Only the data with 8 Bit is effective for the character; the start bit, stop bit and parity check bit is invalid. During the producing process of CRC, every character with 8 bits is different from the register content independently or (XOR) the result moves towards the direction of least significant bit; and the most significant bit is filled by 0. LSB is drawn to make an inspection; if LSB is 1, the register will be different from the preset value independently, or if LSB is 0, it won't make the inspection. The whole process should be made for eight times. When the last bit (the 8<sup>th</sup> bit) is completed, 8 bits for PT200 user manual of next attachment will be different from the current value in register independently; finally, the value in the register will be CRC value after all bits in the message have been implemented.

When CRC is added to the message, low byte should be firstly added and then the high byte. Simple function of CRC is as follow: unsigned int crc\_chk\_value (unsigned char \*data\_value,unsigned char length)

```
{
unsigned int crc_value=0xFFFF;
int i;
while (length--)
{
crc_value^=*data_value++;
```

```
for (i=0;i<8;i++)
{
  if (crc_value&0x0001)
  {
    crc_value= (crc_value>>1)
    ^0xa001;
  }
  else
  {
    crc_value=crc_value>>1;
  }
}
return (crc_value);
}
```

Definition for the address of communication parameter

This part is the communication part and is used for controlling the operation of AC frequency vector inverter, the setting for the state of AC frequency vector inverter and relative parameters.

Read and write the parameter of function code (some function code can't be changed and only be used for the manufacturer):

Marking principle for parameter address of function code:

Expression rule for parameter address by using group number and mark number of function code:

```
High byte: 00~01
Low byte: 00~FF
```

e.g.:P03.11, it address is shown as 003C (Hex);

Notice: P00 group: can only read the parameter and not change the parameter;

P15 group: can not read the parameter nor change the parameter; some parameters can't be changed no matter what the state of AC frequency vector inverter is; much attention should be given to the scope, unit and relative inverter of the parameter when the parameter of function code is changed.

In addition, because EEPROM is stored frequently, it will make the service life of EEPROM shorten; as a result, some function codes doesn't need storing in communication code; what should do is to change the value in RAM. Only change F at high bit to 0 for the address of this function code can realize this function.

Corresponding function code is as follow:

```
High byte :00~01 Low byte :00~FF
```

For example: function code P03.11 can't be stored into EEPROM; its address is shown as 003C H; and this address can make activity for writing RAM; and it can't make activity for reading; if it is read, it is an ineffective address.

Halt/ operation parameter:

Parameter address and parame description	ter parameter description
3000H	Operating speed
3001H	Setting speed
3002Н	Busbar voltage
3003Н	Output voltage
3004Н	Output current
3005Н	Rotate speed of the operation
3006Н	Output power
3007Н	Output torque
3008H	Given value of PID
3009Н	Feedback of PID
300AH	Indicating state of terminal input
300BH	Indicating state of terminal output
300CH	Value of analog AI1
300DH	Value of analog AI2
300EH	Value of analog AI3
300FH	Value of analog AI4
3010Н	Impulse frequency with high speed (HDI1)
3011H	Impulse frequency with high speed (HDI2)
3012Н	Multistep speed and current stage of PLC
3013H	Length value
3014H	Input value of external counter
3015H	Torque direction (0: forward direction, 1: reverse direction)
3016Н	Device code

The set value is the percentage of relative value: 10000 corresponding with 100.00% and -10000 corresponding with -100.00%.

Data corresponding with the frequency dimension; and this percentage is the percentage corresponding with maximum frequency (P0-10); Data corresponding with the torque dimension, the percentage is P2-10(setting for upper limiting number of the torque).

Input the control command into AC frequency vector inverter (only for writing)

Address of command word	Command function	
	0001H: forward rotation	
	0002H: reverse rotation	
1000H	0003H: normal inching turning	
	0004H: point turning of inversion	
	0005H: halt	

Address of command word	Command function
	0006H: random halt(emergency stop)
	0007H: fault resetting
	0008H: inching stop

Read the state of AC frequency vector inverter(only for reading)

Tread the state of the frequency vector inverter (em) for reading)	
Address of status word and function of status word	Address of status word and function of status word
	0001H: in forward operation
1001H	0002H: in reverse operation
1001H	0003H: standby of AC frequency vector inverter
	0004H:breakdown

Check for the lock of parameter on password: ( if the return is 8888H, it means the password check is passed)

Communication address setting value	Frequency
2000H	Rang of communication setting(-10000~10000)
2001H	PID given, rang(0~1000)
2002H	PID feedback, rang(0~1000)
2003H	Reserve
2004Н	Upper limited frequency setting(0~Fmax)

Password address	Input the content of password
4000	****
Parameter locks the command (only for writing)	
Lock the address of password command	Lock the content of password command
4001	55AAH

Control for digital output terminal: (only for writing)
Description for fault of C frequency vector inverter:

Fault address of AC frequency vector inverter	Fault code	Fault information of AC frequency vector inverter
		0000: No fault
	E.oUP	0001: U-phase protection of inverter unit (oUP)
	E.oUP	0002: -phase protection of inverter unit (oUP)
	E.oUP	0003: W-phase protection of inverter unit (oUP)
	E.oC1	0004: Over current of acceleration (oC1)
	E.oC2	0005: Over current of deceleration (oC2)
500011	E.oC3	0006: Over current of constant speed (oC3)
5000H	E.oU1	0007: Overvoltage of acceleration (oU1)
	E.oU2	0008: Overvoltage of deceleration (oU2)
	E.oU3	0009: Overvoltage of constant speed (oU3)
	E.LU	000A: Under voltage fault of bus (LU)
	E.oL1	000B: Motor overload (oL1)
	E.oL2	000C:overload of AC frequency vector inverter (oL2)
	E.PHI	000D: Default phase at the input side (PHI)
	Е.РНо	000E: Default phase at the output side (PHo)
	E.oH1	0010: Overheating of rectifier module (oH1)
	E.oH2	0011: Overheating of inverter module (oH2)
5000H	E.SET	0012: External fault (EF)
	E.CE	0013: Communication faul (CE)
	E.oCC	0014: Fault of current detection (ITE)
	E.TE	0015: Fault for self-study of motor (TE)

E.EEP	0016: Operation fault of EEPROM (EEP)
E.PId	0017: Break-line fault of PID PID
E.bCE	0018: Brake unit fault (bCE)
END	0019: Retaining

Data for information description of communication fault (fault code):

The when the device makes the response, the function code used is to show it is normal response (without mistake) or a mistake occurs (it is called dissent response). The equipment responses corresponding function code, data address or sub function code for normal code. The equipment returns a code which is equal to normal code for dissent response, but the first position is 1.

For example, the message sent from a host equipment to the subordinate equipment is required to read the address data for the function code of AC frequency vector inverter; and the following function code will be produced: 00000011 (hexadecimal  $03\mathrm{H}$ ) corresponding with normal response; and subordinate equipment responses with the same function code. As for dissent response, it returns 10000011 (hexadecimal  $83\mathrm{H}$ ); the subordinate equipment will response to the abnormal code of a byte except the function code is changed due to the dissent error; and this defines the reason for producing the abnormal phenomenon.

After the application of principle equipment receives the dissent response, typical treating process is to send the message again, or change the command aiming the corresponding fault.

Abnormal code of MODBUS				
Code	Name	Implication		
01H	Illegal function	When the function code received by upper computer is not allowed operating; or the subordinate machine deals with the requirement in a wrong state.		
02Н	Illegal data address	The data address required by the upper computer is unallowable address; in particular, the combination between the register address and byte number transmitted is invalid.		
03H	Illegal data value	When the data field received includes un allowable value. Notice: it never means there is a value beyond the expectation of application program for the data in the register submitted to store		
06H	Busy subordinate equipment	Busy AC frequency vector inverter (EPPROM is being stored		
10H	Wrong password	The password input for the validation address of password is different from the password set by P07.00 user.		
11H	Wrong verification	When RTU format, CRC check bit or ASCII format and LRC check bit is different from check computation of lower computer in the frame information sent by upper computer; and report the wrong information of the check.		
12H	Invalid change of the parameter	In writing command of parameter sent by upper computer, when the data sent is beyond the scope of the parameter or current writing address is at a unchangeable state.		
13H	The lock of the system	Set the user password when the upper computer reads or writes; if it is set the user password and had no unlock for password lock, it will report the lock of the system.		

# Function Code Communication Address

Code	Communication	Code	Communication	Code	Communicatio
	address		address		n address
D00 00	(Decimal)	D01 00	(Decimal)	D00 05	(Decimal)
P00. 00	0	P01. 09	28	P03. 07	56
P00. 01	1	P01. 10	29	P03. 08	57
P00. 02	2	P01. 11	30	P03. 09	58
P00. 03	3	P01. 12	31	P03. 10	59
P00. 04	4	P01. 13	32	P03. 11	60
P00. 05	5	P01. 14	33	P04.00	61
P00.06	6	P01. 15	34	P04. 01	62
P00. 07	7	P01. 16	35	P04. 02	63
P00. 08	8	P02.00	36	P04. 03	64
P00. 09	9	P02. 01	37	P04. 04	65
P00. 10	10	P02. 02	38	P04. 05	66
P00. 11	11	P02. 03	39	P04.06	67
P00. 12	12	P02. 04	40	P04. 07	68
P00. 13	13	P02. 05	41	P05. 00	69
P00. 14	14	P02.06	42	P05. 01	70
P00. 15	15	P02. 07	43	P05. 02	71
P00. 16	16	P02. 08	44	P05. 03	72
P00. 17	17	P02. 09	45	P05. 04	73
P00. 18	18	P02. 10	46	P05. 05	74
P01. 00	19	P02. 11	47	P05. 06	75
P01. 01	20	P02. 12	48	P05. 07	76
P01. 02	21	P03. 00	49	P05. 08	77
P01. 03	22	P03. 01	50	P05. 09	78
P01. 04	23	P03. 02	51	P05. 10	79
P01. 05	24	P03. 03	52	P05. 11	80
P01. 06	25	P03. 04	53	P05. 12	81
P01. 07	26	P03. 05	54	P05. 13	82
P01. 08	27	P03. 06	55	P05. 14	83

P05. 15	84	P07. 11	117	P09. 16	150
P06. 00	85	P07. 12	118	P09. 17	151
P06. 01	86	P07. 13	119	P09. 18	152
P06. 02	87	P07. 14	120	P09. 19	153
P06. 03	88	P08.00	121	P09. 20	154
P06. 04	89	P08. 01	122	P09. 21	155
P06. 05	90	P08. 02	123	P10.00	156
P06. 06	91	P08. 03	124	P10. 01	157
P06. 07	92	P08. 04	125	P10.02	158
P06. 08	93	P08. 05	126	P10. 03	159
P06. 09	94	P08.06	127	P10.04	160
P06. 10	95	P08. 07	128	P10. 05	161
P06. 11	96	P08. 08	129	P10.06	162
P06. 12	97	P08. 09	130	P10. 07	163
P06. 13	98	P08. 10	131	P10.08	164
P06. 14	99	P08. 11	132	P10.09	165
P06. 15	100	P08. 12	133	P10. 10	166
P06. 16	101	P09.00	134	P11.00	167
P06. 17	102	P09. 01	135	P11.01	168
P06. 18	103	P09. 02	136	P11.02	169
P06. 19	104	P09. 03	137	P11.03	170
P06. 20	105	P09. 04	138	P11.04	171
P07. 00	106	P09. 05	139	P11.05	172
P07. 01	107	P09. 06	140	P11.06	173
P07. 02	108	P09. 07	141	P11.07	174
P07. 03	109	P09. 08	142	P11.08	175
P07. 04	110	P09. 09	143	P11.09	176
P07. 05	111	P09. 10	144	P11.10	177
P07. 06	112	P09. 11	145	P11.11	178
P07. 07	113	P09. 12	146	P11.12	179
P07. 08	114	P09. 13	147	P11.13	180
P07. 09	115	P09. 14	148	P11.14	181
P07. 10	116	P09. 15	149	P11.15	182

P12. 00	183	P13. 04	194	P14. 04	205
P12. 01	184	P13. 05	195	P14. 05	206
P12. 02	185	P13. 06	196	P14. 06	207
P12. 03	186	P13. 07	197	P14. 07	208
P12. 04	187	P13. 08	198	P14. 08	209
P12. 05	188	P13. 09	199	P15. 00	210
P12.06	189	P13. 10	200		
P13. 00	190	P14. 00	201		
P13. 01	191	P14. 01	202		
P13. 02	192	P14. 02	203		
P13. 03	193	P14. 03	204	·	_

### Reference:

- 1. Manual of PG card
- 2. Manual for control of variable frequency water supply.
- 3. Manual for isolation RS 485
- 4. Manual of RS232
- 5. Manual of Ethernet card
- 6. Manual of Profibus card
- 7. Manual of tension card
- 8. Manual for card of injection molding machine
- 9. Manual for data reading card of USB AC frequency vector inverter See specific

### **Product warrant card of POWTECH product**

Thank you sincerely for purchasing the product of POWTECH

This product has been passed the strict quality inspection of POWTECH, in warranty period, any hardware fault caused by the quality of this product within the normal use, based on the inverter of this guarantee card, POWTECH will provide free maintenance for the fault.

Serial number: Product type: Warranty period: Purchasing date: Year Month Date Invoice number: Customer name: (or company name) Address: Post code: Telephone: Fax: Agency name: Address: Address: Telephone: Fax: Agency seal

150

User's feedback form for the fault of POWTECH AC frequency vector inverter Dear users: please fill in the following form for us to provide a better service for you

Condition of load and control					
Motor power and poles	Rated current of the motor		Frequency range of normal work		
Load type	□fan□textile machine□ extruder □pump□injection molding machine □other loads	Speed adjustment mode	□keyboard speed control □ terminal speed control □PID speed control □speed control of upper computer		
Control method	□ No PG V/F control	□ Having PG V/F	control   Having PG vector contro		
Fault phenome	enon				
Fault time	☐ Failure for the jumping of electroperating a period☐Failure of acceleration☐F	ifying D	peration failure		
Failure types					
Overcurrent OC	□E.oCC □E.oC1 □E.oC2 □E.oC3				
Abnormal voltage	□E.oU (overvoltage) □E.LU (under voltage) □E.oL (overload)				
Fault of other displays	□E.OH(overheating) □E.SET(external fault) □E.PHI(Input the protection of default phase)□E.PHo(Output the protection of default phase) □E.PId □E.EEP(EEPROM error)				
Panel failure	☐ No display for electrifying ☐ Smoking after electrifying ☐ No actuation for relay of power panel				
Keyboard failure	□Key failure □ Unable change of the parameter □ Display default writing □Knob failure				
Device failure	☐ Machine explosion ☐ Unable rotation of the fan ☐ No actuation for relay of main circuit ☐ Burning out of power resistor				
Abnormal output	☐ No output voltage ☐ Unbal☐ Insufficient motor capacity	ance of output vol	□Serious vibration of motor		
Please describ	e the detail of your fault here if it	s not listed in the	above:		
Fault descripti	Fault description:				



Maintenance record should be filled by the following maintenance agencies:

Maintenance record:

Widiliteliance i	wiannenance record.				
	Name of the maintenance unit	Telephone			
The first name	Address	Post code			
	Receipt number of the maintenance	Signature of serviceman			
	Name of the maintenance unit	Telephone			
The second time	Address	Post code			
	Receipt number of the maintenance	Signature of serviceman			
	Name of the maintenance unit	Telephone			
The third time	Address	Post code			
	Receipt number of the maintenance	Signature of serviceman			

# Information feedback of the product

#### Dear users:

Thank you for concerning and purchasing the product of POWTECH; we are eager to obtain your information and relative information for the pruduct purchased by you; and why we want to obtain your valuable feedback is that we also want know your further requirement for POWTECH product. Please log in column of TECHNOLOG and SERVICE; RESOURCE DOWNLOAD to make information feedback on Http://www.powtech.cn

- 2. Download and update the product introduction required by you;
- 3. Refer to various technical data such as application method, specification feature and regular question of the product.
  - 4. Sharing for the application case of the product.
  - 5. Consultation and online feedback of technical issues.
- 6. Feedback the application information of the product and user demand information via e-mail.
- 7. Inquire the latest product and obtain various warranties and additional service of extension.